

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Smoby](#) /

› [Smoby Cook Master Electronic Roleplay Kitchen Model 311100 User Manual](#)

Smoby 311100

Smoby Cook Master Electronic Roleplay Kitchen

Model: 311100 - User Manual

1. INTRODUCTION

Thank you for choosing the Smoby Cook Master Electronic Roleplay Kitchen. This interactive play kitchen is designed to provide hours of imaginative fun, featuring an electronic cooking module, an espresso machine, an ice dispenser, and a variety of accessories. This manual provides essential information for assembly, operation, maintenance, and safety to ensure a safe and enjoyable experience.



Image 1.1: The Smoby Cook Master Electronic Roleplay Kitchen in its complete, assembled form, showcasing its various features and accessories.

2. SAFETY INFORMATION

- **Adult Supervision Required:** Always ensure children are supervised during play.
- **Age Recommendation:** This product is suitable for children aged 3 years and up. Small parts may pose a choking hazard for younger children.
- **Battery Safety:** Batteries should be inserted with the correct polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision.
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before use.
- **Placement:** Place the kitchen on a stable, flat surface to prevent tipping.

3. PACKAGE CONTENTS

Carefully unpack all components and verify that all items are present. The package includes the main kitchen unit and 36 accessories.

Included Accessories:

which may be pre-installed for other internal functions or a different component. The LR6 battery is specifically for the electronic sound module.

6. **Attach Accessories:** Place hooks, utensils, and other accessories in their designated spots.
7. **Final Check:** Verify that all connections are tight and the kitchen is stable before allowing children to play.

5. OPERATING INSTRUCTIONS

The Smoby Cook Master Kitchen offers various interactive features for realistic roleplay.

5.1 Electronic Cooking Module

- Place a pot or pan on the designated electronic hob.
- Turn the corresponding knob to activate realistic boiling water or frying sounds.



Image 5.1: A close-up view of the electronic stovetop, showing the burners and control knobs that activate realistic cooking sounds.

5.2 Espresso Machine

- Select an espresso capsule from the included accessories.
- Insert the capsule into the designated slot on the espresso machine.
- Place a cup beneath the dispenser for pretend coffee making.



Image 5.2: A detailed view of the espresso machine feature, complete with play capsules and a cup ready for pretend brewing.

5.3 Ice Dispenser

- Place a cup under the ice dispenser opening.
- Press the button or lever to release pretend ice cubes into the cup.



Image 5.3: A close-up of the functional ice dispenser, showing pretend ice cubes being dispensed into a cup.

5.4 Oven and Refrigerator

- Open the oven door to place play food inside for baking or roasting.
- Utilize the refrigerator with its shelves for storing play food items.



Image 5.4: Two children engaging in roleplay with the Smoby Cook Master Kitchen, demonstrating its interactive features.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the kitchen surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals.
- **Battery Replacement:** If the electronic module sounds become faint or stop working, replace the LR6 (AA) battery in its compartment.
- **Storage:** The Smoby Cook Master Kitchen features a foldable design for convenient storage. Follow the reverse of the assembly instructions to fold the unit for compact storage when not in use.



Image 6.1: The Smoby Cook Master Kitchen shown in its compact, folded configuration, highlighting its space-saving design for storage.

7. TROUBLESHOOTING

- **Electronic Module Not Working:**
 - Check if the LR6 (AA) battery is correctly inserted with the proper polarity.
 - Replace the battery with a new one if it is old or depleted.

- **Parts Not Fitting During Assembly:**

- Refer to the graphical assembly instructions to ensure you are using the correct parts and orientation for each step.
- Do not force parts together; if a part does not fit, re-examine the instructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	311100
Brand	Smoby
Product Dimensions (LxWxH)	110 x 35 x 99 cm
Item Weight	6.08 kg
Material Type	Plastic
Colour	Red
Batteries Required	1 x LR6 (AA) for electronic module (not included)
Manufacturer Recommended Age	3 years and up
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For specific warranty details and support inquiries, please refer to the official Smoby website or contact your retailer. Information regarding returns and warranty policies may be available via the following links:

- [Returns Policy Information](#)
- [Warranty Policy Information](#)

Note: The provided links are placeholders. Please consult your purchase documentation or the manufacturer's official website for actual policy details.