

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby V8 Driver Instruction Manual](#)

Smoby 370206

Smoby V8 Driver Instruction Manual

Model: 370206

1. INTRODUCTION

The Smoby V8 Driver is an interactive children's driving simulator designed to provide an engaging play experience. This unit features an electronic steering wheel, a backlit screen, realistic sounds, and mechanical pedals, allowing children aged 3 years and up to simulate driving activities.



Image 1: The Smoby V8 Driver, an electronic driving simulator for children.

2. SAFETY INFORMATION

- **Adult Supervision:** Always ensure adult supervision during play.
- **Age Recommendation:** Suitable for children aged 3 years and up.
- **Battery Safety:** Use only the specified battery type (3-AAA batteries). Ensure correct polarity. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly.
- **Assembly:** Minimal assembly is required. Ensure all parts are securely fastened before use.
- **Placement:** Use on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

The Smoby V8 Driver package includes the following components:

- Electronic Steering Wheel Unit with Backlit Screen
- Seat Base
- Mechanical Pedal Unit

- Support Frame Components
- Assembly Hardware (screws, etc.)
- 3-AAA Batteries (included)

4. ASSEMBLY INSTRUCTIONS

Minimal assembly is required. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Attach Support Frame:** Connect the support frame components to the main steering wheel unit and the seat base. Ensure all connections are secure.
3. **Install Pedals:** Secure the mechanical pedal unit to the designated area on the frame.
4. **Secure Seat:** Attach the seat to the seat base. The seat is adjustable to accommodate different leg lengths.
5. **Final Check:** Before allowing a child to use the product, ensure all screws and connections are tight and stable.

5. BATTERY INSTALLATION

The Smoby V8 Driver requires 3-AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of the steering wheel unit.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3-AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and tighten the screw.

6. OPERATING INSTRUCTIONS

The Smoby V8 Driver offers various interactive features for an immersive driving experience:

- **Power On/Off:** Locate the power switch, usually on the side or back of the steering wheel unit, to turn the device on or off.
- **Electronic Steering Wheel:** Turn the steering wheel left and right to control the vehicle displayed on the backlit screen.
- **Mechanical Pedals:** Use the foot pedals to simulate acceleration and braking. These pedals provide tactile feedback.
- **Sound Effects:** Press various buttons on the steering wheel for realistic engine sounds, horn, and other driving sound effects.
- **Backlit Screen:** The screen displays a simulated road environment, enhancing the driving experience.



Image 2: A child engaging with the Smoby V8 Driver, demonstrating its interactive design.



Image 3: Detail of the mechanical pedals and the base of the driving simulator.

7. ADJUSTABLE SEAT

The seat of the Smoby V8 Driver can be adjusted to provide a comfortable fit for different child heights. To adjust the seat:

- Locate the adjustment mechanism beneath the seat or along the seat's connection to the frame.
- Follow the instructions provided in the quick-start guide (if applicable) to unlock and slide the seat to the desired position.
- Ensure the seat is securely locked in place before use.

8. MAINTENANCE

- **Cleaning:** Wipe the surface of the product with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the product in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the product will not be used for an extended period to prevent leakage.

9. TROUBLESHOOTING

Problem	Solution
Product does not turn on.	Check battery installation. Ensure batteries are new and correctly inserted with proper polarity. Replace batteries if necessary.

Problem	Solution
Sounds are distorted or too low.	Replace batteries. Ensure the volume control (if present) is adjusted appropriately.
Screen display is not working.	Check battery power. If the issue persists after replacing batteries, contact customer support.

10. SPECIFICATIONS

- **Brand:** Smoby
- **Model Number:** 370206
- **Product Dimensions:** 33.46 x 14.17 x 22.44 inches
- **Item Weight:** 6.4 pounds
- **Recommended Age:** 3 years and up
- **Batteries Required:** 3 AAA batteries (included)

11. WARRANTY AND SUPPORT

For warranty information, customer support, or to purchase replacement parts, please refer to the official Smoby website or contact their customer service department directly. Keep your purchase receipt for warranty claims.