

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› DICKIE TOYS Air Pump Garbage Truck Instruction Manual

DICKIE TOYS 203805000AMA

DICKIE TOYS Air Pump Garbage Truck Instruction Manual

Model: 203805000AMA

INTRODUCTION

This manual provides essential information for the safe and proper use of your DICKIE TOYS Air Pump Garbage Truck. This 12-inch long toy features a special pneumatic air pump to raise and lower the container, along with a waste bin for loading and unloading. It operates without batteries, offering a mechanical play experience.

SAFETY INFORMATION

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 years.

Ensure all small parts, such as the waste bin, are handled appropriately by children over 3 years of age to prevent choking hazards. Adult supervision is recommended during play.

WHAT'S IN THE BOX

- 1 x Air Pump Garbage Truck
- 1 x Garbage Bin

SETUP

The DICKIE TOYS Air Pump Garbage Truck requires no batteries for its primary functions. Simply remove the truck and its accessories from the packaging. The garbage bin is a separate accessory designed to be used with the truck's loading mechanism.

OPERATING INSTRUCTIONS

1. **Freewheel Motion:** The truck is designed with freewheel motion, allowing it to be pushed and rolled freely across surfaces.
2. **Loading the Waste Bin:** Place small, appropriate items into the provided garbage bin.
3. **Engaging the Loading Mechanism:** Position the garbage bin onto the truck's front loading forks.
4. **Raising the Container:** To raise the truck's container, locate the red button on the roof of the truck's cab. Repeatedly pump this red button to activate the pneumatic air pump feature, which will lift the container.

5. **Lowering the Container:** To lower the container, locate the release lever (typically near the air pump button or on the side of the truck). Activating this lever will release the air pressure, allowing the container to descend.
6. **Dumping Contents:** Once the container is raised, its contents can be dumped out.

MAINTENANCE

- **Cleaning:** Wipe the truck and bin with a damp cloth to remove dust and dirt. Avoid submerging the toy in water.
- **Storage:** Store the toy in a dry, clean environment away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Inspection:** Periodically inspect the truck for any loose or damaged parts. Discontinue use if significant damage is found.

TROUBLESHOOTING

Issue: The rear door/back of the truck detaches frequently.

This is a known characteristic reported by some users. While the toy is designed for robust play, the rear door mechanism may become loose or detach with repeated forceful use. If this occurs, attempt to reattach the door by aligning its hinges. If the issue persists, consider using a strong, child-safe adhesive to secure the door in place, understanding that this may affect its ability to open and close as intended. This is a common observation and does not typically affect the primary air pump function of the truck.

SPECIFICATIONS

Product Dimensions	11.02 x 3.94 x 5.91 inches
Item Weight	7 ounces
Model Number	203805000AMA
Recommended Age	3 years and up
Release Date	August 15, 2018

WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or contact DICKIE TOYS directly through their official website or customer service channels. Please have your model number (203805000AMA) and purchase details available.

PRODUCT IMAGES



Front-side view of the green DICKIE TOYS Air Pump Garbage Truck, showcasing its main features and design.



A child interacting with the green garbage truck, demonstrating the process of loading a blue waste bin into the truck's mechanism.



The green garbage truck with its rear container fully raised, illustrating the dumping function, with the separate blue waste bin visible.



A child engaged in play with the green garbage truck, carefully placing small items into the accompanying blue waste bin.

No official product videos from the seller are available for this item.

© 2023 DICKIE TOYS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00ZPDSGPS>

More documents and user manuals: <https://manuals.plus/>