

ACTIVISION 87608

ACTIVISION Guitar Hero Live 2-Pack Bundle for PlayStation 4 Instruction Manual

Model: 87608

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your ACTIVISION Guitar Hero Live 2-Pack Bundle for PlayStation 4. The Guitar Hero Live system offers an immersive music gaming experience, placing you in a first-person perspective on stage with a live audience.

The bundle includes the Guitar Hero Live game software and two wireless guitar controllers, designed for interactive gameplay on the PlayStation 4 console.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Guitar Hero Live Game Software (PlayStation 4 disc)
- Two (2) Guitar Hero Live Wireless Guitar Controllers
- Two (2) USB Dongles (one for each guitar controller)
- Four (4) AA Batteries (two for each guitar controller)



Image 1: The Guitar Hero Live 2-Pack Bundle, showing the game box, disc, and two guitar controllers.

3. SETUP INSTRUCTIONS

3.1. Installing Game Software

1. Insert the Guitar Hero Live game disc into your PlayStation 4 console.
2. Follow the on-screen prompts to install the game and any necessary updates.

3.2. Guitar Controller Setup

1. **Install Batteries:** Open the battery compartment on the back of each guitar controller and insert two (2) AA batteries, ensuring correct polarity.
2. **Connect USB Dongle:** Plug one USB dongle into an available USB port on your PlayStation 4 console for each guitar controller you intend to use.
3. **Power On and Pair:** Turn on each guitar controller by pressing the PlayStation button. The controller will automatically attempt to pair with its respective USB dongle. A successful connection is indicated by a solid light on both the controller and the dongle.



Image 2: A single Guitar Hero Live guitar controller, highlighting the fret buttons and strum bar.

4. OPERATING INSTRUCTIONS

4.1. Gameplay Modes

Guitar Hero Live features two primary modes:

- **GH Live:** This mode places you on stage in a first-person perspective, performing for a live audience. The crowd and your bandmates react dynamically to your performance, providing an immersive experience.
- **GH TV:** This mode offers a continuous stream of music videos, allowing you to play along to a wide variety of songs. You can earn "plays" to select specific songs or enjoy curated channels.

4.2. Guitar Controller Layout

The new Guitar Hero Live controller features a 6-button layout, arranged in two rows of three buttons. This design aims to simulate real guitar chords and finger positions more closely.

- **Fret Buttons:** Six buttons on the neck (three black, three white) are used to match notes displayed on screen.
- **Strum Bar:** Located on the body of the guitar, used to strum notes in time with the music.
- **Whammy Bar:** Used to modify sustained notes for expressive effects.
- **Hero Power Button:** Activates special abilities during gameplay.



Image 3: A gameplay screenshot illustrating the 6-button note highway during a song.



Image 4: A first-person perspective gameplay view, showing the player on stage with a large, reacting audience.

4.3. Multiplayer

The 2-Pack Bundle allows two players to enjoy Guitar Hero Live simultaneously. Each player uses their own guitar controller and USB dongle, enabling cooperative or competitive play.



Image 5: Two players actively engaged in a Guitar Hero Live session with their guitar controllers.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the guitar controllers and game disc. Avoid abrasive cleaners or solvents.
- **Storage:** Store the controllers and game disc in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from controllers if storing for extended periods to prevent leakage.
- **Handling:** Handle the game disc by its edges to prevent scratches. Avoid dropping the guitar controllers.

6. TROUBLESHOOTING

Issue	Possible Solution
-------	-------------------

Issue	Possible Solution
Guitar controller not connecting/disconnecting.	<ul style="list-style-type: none"> • Ensure fresh AA batteries are correctly installed. • Verify the USB dongle is securely plugged into the PlayStation 4. • Ensure the controller is within range and there are no obstructions between the controller and the dongle. • Try re-pairing the controller by pressing the PlayStation button on the controller. • Test the USB dongle in a different USB port on the console.
Game audio/video synchronization issues.	<ul style="list-style-type: none"> • Access the game's audio/video calibration settings (usually found in the options menu). • Ensure your television is set to "Game Mode" if available, as this can reduce input lag.
Game disc not reading.	<ul style="list-style-type: none"> • Gently clean the game disc with a soft, lint-free cloth, wiping from the center outwards. • Ensure the PlayStation 4 disc drive is clean and free of obstructions.

7. SPECIFICATIONS

- **Model Number:** 87608
- **Brand:** ACTIVISION
- **Compatible Console:** Sony PlayStation 4
- **Release Date:** October 20, 2015
- **Product Dimensions:** 22.32 x 3.94 x 13.62 inches
- **Item Weight:** 4.41 pounds
- **Batteries:** 4 AA batteries (included)

8. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the official ACTIVISION support channels or visit their website. Specific warranty terms and conditions may vary by region and purchase date.

Always retain your proof of purchase for warranty claims.