

Terry 1002709

Terry 1002709 Twist Black 680 Low Plastic Wardrobe User Manual

Model: 1002709 Twist Black 680

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient assembly, operation, and maintenance of your Terry 1002709 Twist Black 680 Low Plastic Wardrobe. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Do not exceed the maximum weight capacity of 20 kg (44 lbs) per shelf.
- Ensure weight is evenly distributed on shelves to prevent tipping or collapse.
- Keep small parts away from children during assembly to prevent choking hazards.
- Assemble the wardrobe on a flat, stable surface.
- Do not climb on or hang from the wardrobe.
- Ensure the cabinet doors are securely closed to prevent items from falling out.
- This product is designed for storage. Do not use it for purposes other than its intended use.
- If using a padlock (not included), ensure it does not obstruct door operation or cause damage.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Wardrobe panels (sides, back, top, bottom, doors)
- 1 x Height-adjustable shelf

- Legs/Feet
- Assembly hardware (e.g., connectors, pins)
- User Manual (this document)

SETUP AND ASSEMBLY

Assembly typically requires one person and basic hand tools (not included). Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs:** Securely attach the four legs to the bottom panel of the wardrobe. Ensure they are firmly seated.
3. **Assemble Side Panels:** Connect the side panels to the bottom panel. Ensure all connections are tight.
4. **Insert Back Panel:** Slide the back panel into the grooves of the side and bottom panels.
5. **Attach Top Panel:** Place the top panel onto the assembled structure, ensuring it locks securely into place with the side and back panels.
6. **Install Shelf:** Insert the adjustable shelf into the desired position. The wardrobe features multiple slots for height adjustment. Ensure the shelf is level and securely seated on its supports.
7. **Attach Doors:** Mount the two doors to the front of the wardrobe. Ensure they swing freely and close properly. The doors open up to 180 degrees for full access.



Image: The Terry Low Plastic Wardrobe with its doors open, revealing the interior and the adjustable shelf. This image illustrates the internal structure and shelf placement options.



Image: A comparison view of the Terry Low Plastic Wardrobe, showing it both with doors closed and with doors open. The open view highlights the 20kg maximum shelf load capacity.

OPERATING INSTRUCTIONS

Using your Terry Low Plastic Wardrobe is straightforward:

- **Opening Doors:** Gently pull the door handles to open. The doors can swing open up to 180 degrees for full access

to the interior.

- **Closing Doors:** Push the doors firmly until they click into place, ensuring they are fully closed.
- **Adjusting Shelf Height:** To adjust the shelf, empty its contents, lift the shelf, and reposition it into the desired slots on the side panels. Ensure it is level and stable before placing items back on it.
- **Securing with Padlock:** For added security, a padlock (not included) can be used. Insert the padlock through the designated holes on the doors.

MAINTENANCE

To ensure the longevity and appearance of your wardrobe, follow these maintenance guidelines:

- **Cleaning:** Wipe the wardrobe surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or solvents, as these can damage the plastic.
- **Hand Wash:** As per product care instructions, the components are suitable for hand washing if deeper cleaning is required.
- **Inspection:** Periodically check all connections and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Weight Distribution:** Always ensure items are stored with weight evenly distributed across the shelf and within the cabinet to prevent stress on the structure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors do not close properly.	Misalignment during assembly, obstruction, or uneven floor.	Check assembly of door hinges and panels. Ensure no items are blocking the door path. Verify the wardrobe is on a level surface.
Shelf sags or is unstable.	Overloaded shelf, uneven weight distribution, or incorrect installation.	Reduce weight on the shelf, redistribute items evenly. Ensure the shelf is correctly seated in all four support slots. Do not exceed 20 kg.
Wardrobe feels wobbly.	Loose connections, uneven floor, or missing legs.	Check all panel connections and ensure they are fully engaged. Verify all legs are securely attached. Place the wardrobe on a flat, stable surface.

SPECIFICATIONS

Brand:	Terry
Model Name:	Twist Black 680
Model Number:	1002709 (also referred to as 1102709)
Material:	Plastic
Color:	Grey/Black
Product Dimensions (D x W x H):	39 cm x 68 cm x 91.5 cm (15.35"D x 26.77"W x 36.02"H)

Item Weight:	8.08 kg (17.81 lbs)
Number of Shelves:	1 (height-adjustable)
Maximum Shelf Load:	20 kg (44 lbs) evenly distributed
Door Opening:	Up to 180 degrees
Assembly Required:	Yes
Mounting Type:	Floor Mount (Freestanding)



Image: A diagram showing the key dimensions of the Terry Low Plastic Wardrobe, including its height (36.02"), depth (15.35"), and width (26.77").

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official Terry website. Keep your proof of purchase for any warranty claims.

Manufacturer: Terry

Made in Italy

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question