

[Manuals.plus](#) /

› [BoxWave](#) /

› BoxWave ClearTouch Anti-Glare Screen Protector User Manual for Trimble Geo 7X

BoxWave bw-1-12245-0

BoxWave ClearTouch Anti-Glare Screen Protector User Manual

For Trimble Geo 7X

1. INTRODUCTION

The BoxWave ClearTouch Anti-Glare Screen Protector is designed to protect the display of your Trimble Geo 7X device from scratches, dust, and fingerprints, while also reducing glare for improved visibility in various lighting conditions. This manual provides essential information for the proper installation, use, and maintenance of your screen protector.

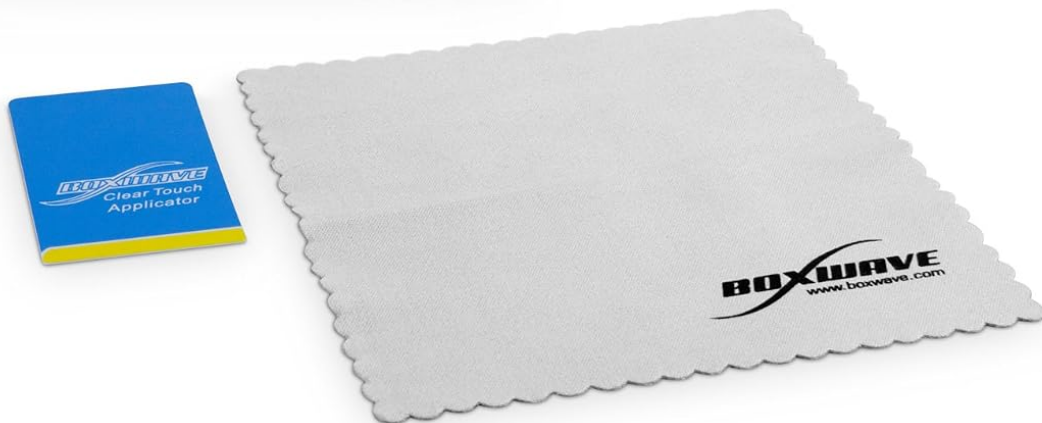


Image 1.1: BoxWave ClearTouch Anti-Glare Screen Protector packaging alongside a Trimble Geo 7X device, illustrating the product and its intended use.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- BoxWave ClearTouch Anti-Glare Screen Protector (1 or 2 units, depending on pack)
- Microfiber Cleaning Cloth
- Application Card/Squeegee (may vary by package)
- Dust Removal Sticker (may vary by package)



Please note this is a general product photo for display purposes.
The actual product is tailored specifically to fit your device

Image 2.1: Typical contents of a BoxWave ClearTouch Anti-Glare Screen Protector package, including the screen protector and cleaning accessories.

3. INSTALLATION GUIDE

Follow these steps carefully for a bubble-free application:

1. **Prepare Your Device:** Ensure your Trimble Geo 7X device is powered off. Clean the screen thoroughly using the provided microfiber cloth to remove all dust, smudges, and fingerprints. For stubborn marks, a small amount of screen cleaner can be used, followed by drying with the cloth.
2. **Dust Removal:** Use a dust removal sticker (if included) to lift any remaining dust particles from the screen. Inspect the screen under good lighting to ensure it is perfectly clean.

3. **Align the Protector:** Carefully peel back a small portion of the protective film (usually labeled "Step 1" or "Back") from one end of the screen protector. Align the exposed edge of the screen protector with the corresponding edge of your device's screen. Pay close attention to cutouts for cameras, sensors, or buttons.
4. **Apply Gradually:** Slowly peel back the rest of the protective film while simultaneously applying the screen protector to the device's screen. Use the application card or your fingers to gently smooth out any air bubbles as you go, pushing them towards the edges.
5. **Remove Top Film:** Once the screen protector is fully adhered and all bubbles are removed, carefully peel off the top protective film (usually labeled "Step 2" or "Front").
6. **Final Inspection:** Perform a final check for any remaining bubbles or dust. Small bubbles may dissipate over 24-48 hours.



Image 3.1: Illustrative image showing the process of applying the screen protector to the Trimble Geo 7X device.

4. USAGE AND FEATURES

The BoxWave ClearTouch Anti-Glare Screen Protector enhances your device's usability through several key features:

- **Anti-Glare Surface:** Reduces reflections and glare from bright light sources, improving screen visibility outdoors or under strong indoor lighting.
- **Anti-Fingerprint Coating:** The matte surface repels oils and smudges, keeping your screen cleaner and reducing the need for frequent wiping.

- **Scratch Protection:** Provides a durable barrier against scratches from keys, coins, and other abrasive objects, preserving the original screen's condition.
- **Precision Fit:** Custom-cut for the Trimble Geo 7X, ensuring full screen coverage without obstructing sensors or speakers.
- **Enhanced Touch Sensitivity:** Maintains the original touch responsiveness of your device's screen.



Image 4.1: Visual representation of the key benefits of the ClearTouch Anti-Glare Screen Protector, including glare reduction and smudge prevention.



Image 4.2: Demonstration of the anti-smudge surface, showing how it resists fingerprints compared to an unprotected screen.

5. MAINTENANCE AND CARE

To ensure the longevity and effectiveness of your screen protector:

- **Cleaning:** Wipe the screen protector regularly with the provided microfiber cloth to remove dust and light smudges. For more persistent marks, lightly dampen the cloth with water or a mild, screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Avoid Sharp Objects:** While the protector offers scratch resistance, extreme pressure or sharp objects can still damage it.
- **Reinstallation:** The ClearTouch protector is designed for reusability. If you need to remove and reapply it, ensure both the screen and the protector's adhesive side are clean and free of dust.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Bubbles under the protector	Dust particles or trapped air during application.	Gently lift the nearest edge of the protector and reapply, using the application card to push bubbles out. For dust, carefully lift the protector, use a dust removal sticker to remove the particle from both the screen and the protector's adhesive side, then reapply.
Protector not adhering properly	Screen not clean, or protector adhesive is compromised.	Ensure the screen is thoroughly clean. If the adhesive is damaged or too much dust has accumulated, consider using a new protector.
Reduced touch sensitivity	Improper installation or a faulty protector.	Reinstall the protector ensuring no air gaps. If the issue persists, contact BoxWave support.

7. SPECIFICATIONS

Feature	Detail
Product Name	BoxWave ClearTouch Anti-Glare Screen Protector
Compatible Device	Trimble Geo 7X
Model Number	bw-1-12245-0
Material	Polyethylene Terephthalate (PET)
Finish Type	Matte, Anti-Glare
Special Features	Anti-Glare, Anti-Fingerprint, Scratch Proof, Dust Repelling, Bubble-free Application
Item Hardness	9H (Pencil Lead Degree)
Item Weight	0.7 ounces
Package Dimensions	8.15 x 4 x 0.2 inches

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact BoxWave directly. Refer to the product packaging or the official BoxWave website for the most current contact details and warranty terms.

BoxWave Corporation
www.boxwave.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00ZVQCEG6>

More documents and user manuals: <https://manuals.plus/>