

[Manuals.plus](#) /

› [TNP Products](#) /

› TNP PS4 Chatpad Keyboard Attachment User Manual for PlayStation 4, PS4 Slim, and PS4 Pro (Model TP4-008)

TNP Products TP4-008

TNP PS4 Chatpad Keyboard Attachment User Manual

Model: **TP4-008**

Brand: **TNP Products**

INTRODUCTION

This manual provides instructions for the TNP PS4 Chatpad Keyboard Attachment (Model TP4-008). This QWERTY keyboard is designed to attach to your PlayStation 4 controller, including PS4, PS4 Slim, and PS4 Pro models, to facilitate text input during gameplay, messaging, and browsing.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x TNP PS4 Chatpad Bluetooth Keyboard
- 1x USB Charging Cable
- 1x User Manual (this document)

PRODUCT OVERVIEW

The TNP PS4 Chatpad is a compact QWERTY keyboard designed to integrate with your PS4 controller. It features a full QWERTY layout, a built-in speaker, and a 3.5mm audio output jack.

LIGHTWEIGHT FULL KEYBOARD



Image: Overview of the TNP PS4 Chatpad, highlighting its QWERTY keyboard layout, character input area, letter/symbol switch, case switch, backspace key, enter key, arrow keys, 0-9 number keys, 3.5mm audio jack, built-in loud speaker, On/Off switch, Bluetooth pairing button, 3.5mm audio output jack, Type-C charging port, and indicator light.

The keyboard dimensions are approximately 9 inches (22.8 cm) in length, 3 inches (7.6 cm) in width, and 3 inches (7.6 cm) in height, with a compact design that preserves the full functionality of the DualSense controller.



Compact Design

Preserves full function of the
Dualsense controller

Image: The TNP PS4 Chatpad with dimensions indicated: 9 inches (22.8 cm) in length and 3 inches (7.6 cm) in width/height. The image also shows the keyboard being stored in a bag, illustrating its compact design.

SETUP AND INSTALLATION

1. **Charging the Keyboard:** Before first use, fully charge the keyboard using the provided USB cable. Connect the cable to the Type-C charging port on the keyboard and a USB power source. The indicator light will show charging status.
2. **Attaching to Controller:** Align the keyboard attachment with the bottom of your PS4 controller. Gently push the keyboard onto the controller until it securely snaps into place. Ensure the 3.5mm audio jack on the keyboard connects to the controller's audio port.

Easy to Install or Remove

Full QWERTY keyboard with rechargeable battery



Image: A PS4 controller with the TNP PS4 Chatpad being attached. Arrows indicate the keyboard sliding onto the controller and connecting via the 3.5mm jack. Icons for Bluetooth, messaging, and built-in speaker are also shown.

3. **Powering On:** Locate the On/Off switch on the keyboard and slide it to the "On" position.

4. **Bluetooth Pairing:**

- On your PlayStation 4 console, navigate to **Settings > Devices > Bluetooth Devices**.
- Press the Bluetooth Pairing button on the keyboard. The indicator light will flash, indicating it is in pairing mode.
- Select the "Bluetooth Keyboard" from the list of available devices on your PS4 screen.
- Enter the pairing code displayed on your PS4 screen using the Chatpad keyboard, then press **Enter**.
- Once paired, the indicator light on the keyboard will stop flashing and remain solid, or turn off, depending on the model.

The keyboard is compatible with PS4, PS4 Slim, and PS4 Pro consoles.

Mini Keyboard for PS4

Compatible with PS4, Ps4 Slim, and PS4 Pro



Image: An illustration showing the TNP PS4 Chatpad's compatibility with various PlayStation 4 console models: the original PlayStation 4, PlayStation 4 Pro, and PlayStation 4 Slim.

OPERATING INSTRUCTIONS

- **Typing:** Use the QWERTY keys for text input in games, messages, and browser applications.
- **Special Characters/Symbols:** Use the "Letter/Symbol switch" key to access alternative characters or symbols printed on the keys.
- **Case Switch:** Use the "Case switch" key to toggle between uppercase and lowercase letters.
- **Audio Output:** The 3.5mm audio output jack on the keyboard allows you to connect a headset for game audio and chat.
- **Built-in Speaker:** The keyboard includes a built-in speaker for audio feedback.
- **Power Saving:** To conserve battery, slide the On/Off switch to the "Off" position when the keyboard is not in use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Charge the keyboard regularly, even if not in frequent use, to maintain battery health. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Solution
Keyboard does not power on.	Ensure the On/Off switch is in the "On" position. Charge the keyboard using the USB cable.
Keyboard does not connect via Bluetooth.	◦ Ensure the keyboard is charged and powered on. ◦ Verify Bluetooth is enabled on your PS4. ◦ Re-enter pairing mode by pressing the Bluetooth Pairing button and re-attempt pairing through PS4 settings. ◦ Ensure no other Bluetooth devices are interfering.
Keys are unresponsive or typing incorrectly.	◦ Check battery level and charge if low. ◦ Ensure the keyboard is securely attached to the controller. ◦ Try re-pairing the keyboard with the PS4.
No audio from headset connected to keyboard.	◦ Ensure the headset is fully plugged into the 3.5mm audio jack on the keyboard. ◦ Check PS4 audio settings to ensure output is directed to the headset. ◦ Verify the headset is functional by testing it with another device.

SPECIFICATIONS

- **Model:** TP4-008
- **Operating Voltage:** DC 5V
- **Operating Current:** 120mA
- **Bluetooth Distance:** Up to 10 meters
- **Bluetooth Version:** V3.0
- **Dimensions:** 9 x 3 x 3 inches (22.8 x 7.6 x 7.6 cm)
- **Weight:** 3.5 ounces (99.2 grams)
- **Manufacturer:** DOBE
- **First Available:** June 18, 2015

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided by TNP Products at the point of purchase or visit their official website. Please retain your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question