

[Manuals.plus](#) /

› [LiftMaster](#) /

› LiftMaster KPW250 Wireless Keypad User Manual

## LiftMaster KPW250

# LiftMaster KPW250 Wireless Keypad User Manual

Model: KPW250 | Brand: LiftMaster

## PRODUCT OVERVIEW

---

The LiftMaster KPW250 Wireless Keypad is designed for commercial applications and gated entrances, offering robust access control. It supports flexible setup with up to 250 permanent PINs and 10 unique temporary PINs. This keypad is compatible with all LiftMaster Gate and Door Operators, including those with Security 2.0 technology. It also features a manual gate operation with a constant pressure override, specifically when paired with LiftMaster UL 325 Listed Gate Operators equipped with burgundy control boards.

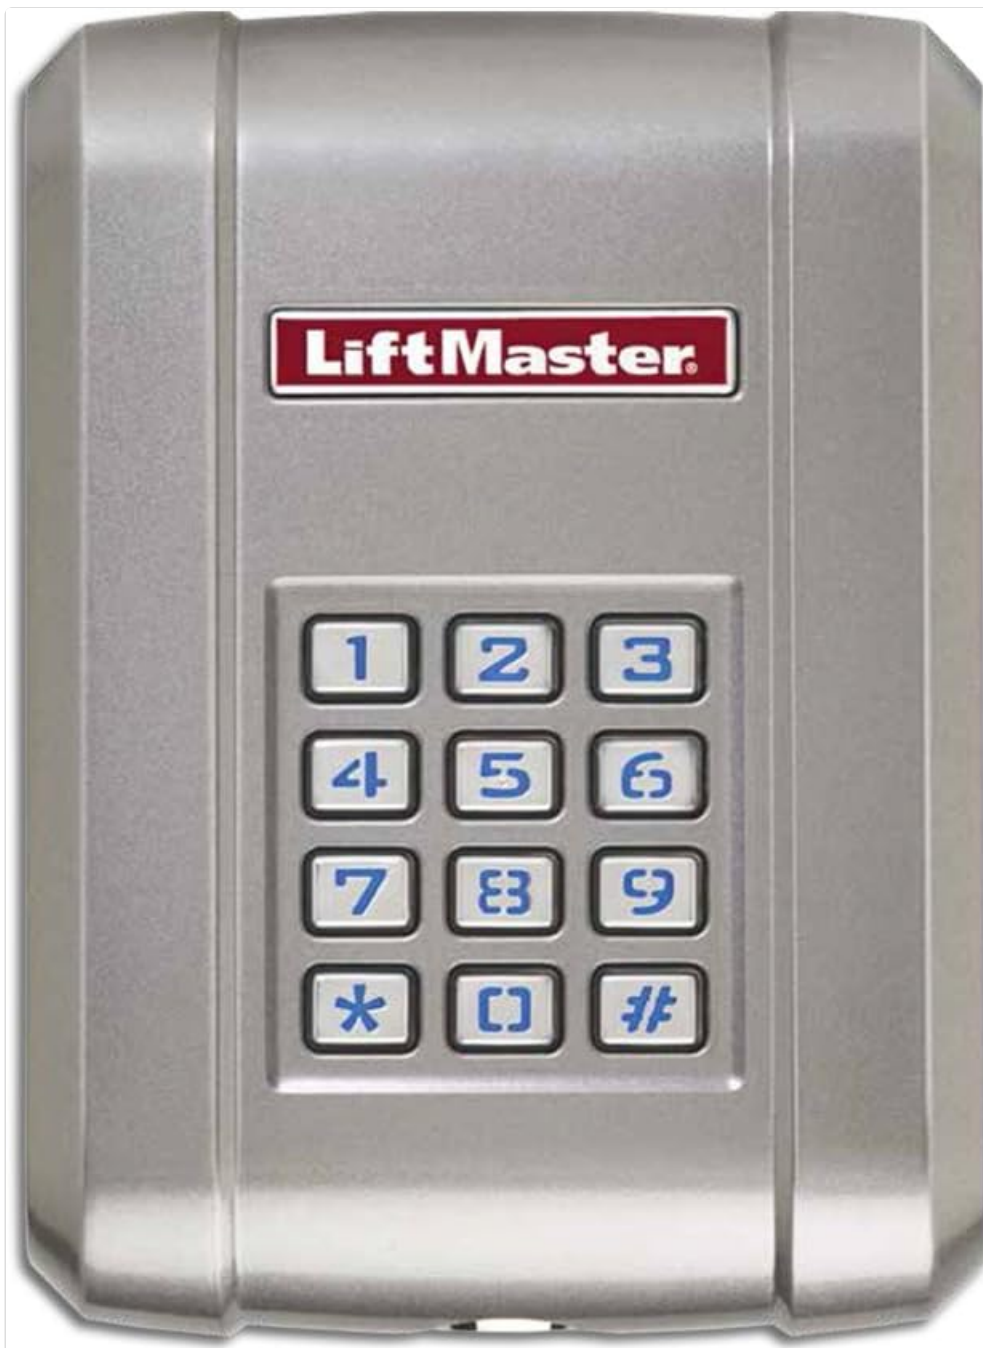


Image: Front view of the LiftMaster KPW250 Wireless Keypad. It features a silver-grey metallic housing with the 'LiftMaster' logo prominently displayed at the top. Below the logo is a standard numeric keypad layout with large, clearly labeled buttons for numbers 1 through 9, 0, asterisk (\*), and pound (#).

## SETUP AND INSTALLATION

---

Before installation, ensure you have all included components: the KPW250 keypad unit, one 9V Lithium battery, instructions, and two keys. The keypad is designed for easy integration with existing LiftMaster gate and door operators.

### Battery Installation

1. Locate the battery compartment on the back of the keypad.
2. Open the compartment using the provided keys or a suitable tool.
3. Insert the 9V Lithium battery, ensuring correct polarity.
4. Securely close the battery compartment.

### Mounting

- Choose a suitable location for mounting, ensuring it is within range of your LiftMaster operator and accessible for users.
- Use appropriate hardware (not included) to securely mount the keypad to a wall or post. The keypad is designed to withstand outdoor elements.

## Programming with LiftMaster Operators

Refer to the specific instructions included with your LiftMaster gate or door operator for detailed programming steps. The KPW250 is compatible with LiftMaster 2.0 systems and can be programmed to manage up to 250 permanent user codes and 10 temporary codes.

## OPERATING INSTRUCTIONS

---

### Entering Permanent PINs

1. Press the desired numeric code on the keypad.
2. Press the # key to activate the operator.
3. The operator will activate, granting access.

### Using Temporary PINs

Temporary PINs are ideal for short-term access for visitors or service personnel. These codes can be set to expire after a certain number of uses or a specific time period, depending on your operator's capabilities. Consult your operator's manual for programming temporary PINs.

### Manual Gate Operation (Constant Pressure Override)

For LiftMaster UL 325 Listed Gate Operators with burgundy control boards, the KPW250 supports a manual gate operation feature with a constant pressure override. This allows for controlled manual movement of the gate. Refer to your gate operator's manual for specific instructions on engaging and disengaging this feature.

## MAINTENANCE

---

### Battery Replacement

The KPW250 keypad is powered by a single 9V Lithium battery. Battery life can vary depending on usage frequency and environmental conditions. Replace the battery when the keypad's backlight dims or if operation becomes inconsistent. To replace, follow the battery installation steps outlined in the Setup section.

### Cleaning

Clean the keypad's surface periodically with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components. The keypad's durable metal construction is designed to withstand various weather conditions.

## TROUBLESHOOTING

---

- **Keypad not responding:** Check the battery. Ensure it is properly installed and has sufficient charge.
- **Operator not activating:** Verify that the keypad is correctly programmed to your LiftMaster operator. Ensure the keypad is within the operational range of the operator.
- **Intermittent operation:** This could indicate a low battery or interference. Try replacing the battery. If issues persist, consult the LiftMaster operator's manual for troubleshooting wireless accessory connections.
- **Forgotten PINs:** If you forget a permanent or temporary PIN, you will need to access your LiftMaster operator's programming mode to reset or retrieve codes. Refer to your operator's manual for instructions.

For further assistance, please refer to the comprehensive manual provided with your LiftMaster gate or door operator, or contact

SPECIFICATIONS

| Feature                | Detail                                 |
|------------------------|----------------------------------------|
| Brand                  | LiftMaster                             |
| Model Number           | KPW250 (TRTAZ11A)                      |
| Power Source           | Battery Powered                        |
| Battery Type           | 1 x 9V Lithium battery (included)      |
| Compatible Devices     | LiftMaster 2.0 Gate and Door Operators |
| Dimensions (L x W x H) | 6 x 9 x 3 inches                       |
| Item Weight            | 1.59 pounds                            |
| Material               | Metal                                  |
| Special Features       | Backlit keypad                         |
| Max PINs               | 250 Permanent, 10 Temporary            |
| UPC                    | 769942263392, 737534376980             |

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official LiftMaster website. For technical support, programming assistance, or any other inquiries, please contact LiftMaster customer service directly. Contact details can typically be found on the LiftMaster website or in your product packaging.

*Note: Protection plans offered by third-party retailers are separate from the manufacturer's warranty.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question