

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GoWISE](#) /

› [GoWISE USA 3.7-Quart Dial Control Air Fryer, GW22622 User Manual](#)

GoWISE GW22622

GoWISE USA 3.7-Quart Dial Control Air Fryer (GW22622) User Manual

Model: GW22622

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or

tripping over a longer cord.

- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

PRODUCT OVERVIEW

The GoWISE USA 3.7-Quart Dial Control Air Fryer (GW22622) allows you to prepare a variety of fried snacks and meals with little to no oil. It features rapid air technology for efficient cooking and dual dial controls for temperature and time settings.



Image: The GoWISE USA 3.7-Quart Dial Control Air Fryer positioned on a kitchen countertop, ready for use.

SETUP

Unpacking and Initial Cleaning

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the basket and pan with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Ensure all parts are completely dry before use.

Placement

Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 6 inches of free space on the back and sides of the appliance, and 6 inches of free space above it, to allow for proper ventilation.

OPERATING INSTRUCTIONS

Temperature and Timer Controls

The air fryer features two dial controls: one for temperature and one for the timer. The temperature can be set from 175°F to 400°F, and the timer can be set from 1 to 30 minutes.



Image: A close-up view of the air fryer's top-mounted temperature dial (175°F to 400°F) and front-mounted timer dial (0 to

Preheating

For best results, preheat the air fryer for approximately 3 minutes before adding food. Set the desired temperature and timer, and wait for the indicator light to signal that the temperature has been reached.

Cooking Process

1. Carefully pull the basket out of the air fryer.
2. Place your ingredients into the basket. Do not exceed the MAX fill line.
3. Slide the basket back into the air fryer.
4. Set the desired temperature and cooking time using the dial controls.
5. The air fryer will automatically turn off when the timer is complete or if the basket is removed during operation.
6. For even cooking, shake the basket halfway through the cooking time for items like fries or nuggets.

Basket Removal and Handling

To safely remove the basket from the pot, press the release button located on the handle straight down. Avoid pressing it at an angle to prevent jamming. If the button jams, push it at an angle to release it. For detailed visual instructions, refer to the video below.

Your browser does not support the video tag.

Video: This video demonstrates the correct method for detaching the cooking basket from the air fryer's main unit by pressing the release button straight down. It also shows how to address a jammed release button and how to remove the handle for cleaning.

MAINTENANCE AND CLEANING

Cleaning the Basket and Pan

- After each use, clean the basket and pan.
- Do not use metal kitchen utensils or abrasive cleaning materials to clean them, as this may damage the non-stick coating.
- The basket and pan are **not** dishwasher safe. Hand wash with hot water, dish soap, and a non-abrasive sponge.
- To clean the basket handle, it can be removed for washing. Do not submerge the basket handle in water when washing.

Cleaning the Main Unit

- Wipe the outside of the air fryer with a damp cloth.
- Clean the inside of the appliance with hot water and a non-abrasive sponge.
- Clean the heating element with a cleaning brush to remove any food residue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not work.	The appliance is not plugged in.	Plug the main plug into a grounded wall socket.
	The timer has not been set.	Turn the timer dial to the required cooking time.
Food is not cooked evenly.	Some types of food need to be shaken halfway through the preparation time.	Shake the basket halfway through the cooking time.
Basket release button jams.	Button pressed at an angle.	Push the button at an angle to release it. Ensure to press straight down for normal operation. If the problem persists, remove the face of the handle to adjust the spring (refer to video in Operating Instructions).
Timer dial is hard to read or inaccurate.	Dial markings are small or misaligned due to improper handling.	Ensure you are viewing the dial directly. Avoid turning the dial backward to turn it off, as this may affect its calibration.
Constant ticking noise from timer.	Normal mechanical operation of the timer.	This is a characteristic of the mechanical timer. The ticking will stop once the set time has elapsed.

SPECIFICATIONS

- **Model Name:** GW22622
- **Brand:** GoWISE USA
- **Capacity:** 3.7 Quarts (3.5 Liters)
- **Color:** Black
- **Material:** Aluminum, Plastic
- **Control Method:** Dial
- **Temperature Range:** 175°F - 400°F
- **Timer:** 1 - 30 minutes
- **Wattage:** 1400 Watts
- **Voltage:** 110 Volts
- **Item Weight:** 12 Pounds
- **Nonstick Coating:** Yes
- **Dishwasher Safe:** No (for basket and pan)
- **Air Frying Technology:** Rapid Air Circulation Technology

WARRANTY

This GoWISE USA Air Fryer (Model GW22622) comes with a **1-year limited warranty** from the date of

purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in material and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your GoWISE USA Air Fryer, please contact GoWISE USA customer support. Refer to the product packaging or the official GoWISE USA website for the most current contact information.