

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HORI](#) /
- › [HORI HoriPad FPS Plus Instruction Manual](#)

HORI PS4-025

HORI HoriPad FPS Plus Instruction Manual

Model: PS4-025

For PlayStation 4 & PlayStation 3

PRODUCT OVERVIEW

The HORI HoriPad FPS Plus is a high-performance wired controller designed for PlayStation 4 and PlayStation 3 consoles, engineered to provide enhanced precision and control, especially for first-person shooter (FPS) games. It features an ergonomic design with an Xbox-style asymmetrical thumbstick layout for comfortable extended play. Key functionalities include a responsive touchpad, a rear-mounted target button with adjustable sensitivity, a turbo mode for rapid button input, and custom button mapping capabilities.



Front view of the HORI HoriPad FPS Plus controller, showing the asymmetrical analog stick layout, D-pad, action buttons, touchpad, SHARE, OPTIONS, TURBO, and ASSIGN buttons.



Back view of the HORI HoriPad FPS Plus controller, highlighting the rear-mounted TARGET button and product label.



Top view of the HORI HoriPad FPS Plus controller, displaying the L1, R1, L2, and R2 triggers/buttons.

PACKAGE CONTENTS

- HORI HoriPad FPS Plus Controller
- Instruction Manual (this document)

SETUP

Connecting to PlayStation 4 / PlayStation 3

1. Ensure your PlayStation console is powered on.
2. Connect the USB cable of the HORI HoriPad FPS Plus controller to an available USB port on your PlayStation

- 4 or PlayStation 3 console.
3. The controller will automatically be recognized and configured. The LED indicator on the controller will illuminate to confirm connection.
4. No additional drivers or software are required for basic functionality.

Initial Configuration

Upon first connection, the controller is ready for use with standard game controls. For advanced features like Turbo mode or button assignment, refer to the "Operating the Controller" section.

OPERATING THE CONTROLLER

Basic Controls

The HORI HoriPad FPS Plus features standard PlayStation button layouts with an Xbox-style asymmetrical analog stick configuration. Familiarize yourself with the button placement:

- **Left Analog Stick:** Movement, navigation.
- **Right Analog Stick:** Camera control, aiming.
- **Directional Pad (D-Pad):** Menu navigation, specific in-game actions.
- **Action Buttons (Triangle, Circle, Cross, Square):** In-game actions as defined by the game.
- **L1/R1 Buttons:** Shoulder buttons, typically for quick actions.
- **L2/R2 Triggers:** Analog triggers, typically for aiming and firing.
- **SHARE Button:** Access PlayStation Share features.
- **OPTIONS Button:** Access in-game menus or pause.
- **PS Button:** Access PlayStation Home Menu.
- **Touch Pad:** Functions as a touch input device, supporting gestures and clicks.

Advanced Features

Target Button (Rear)

The rear-mounted target button allows for instant sensitivity adjustment of the right analog stick, useful for precise aiming in FPS games. It has three sensitivity levels:

1. **Level 1 (Default):** Standard sensitivity.
2. **Level 2:** Reduced sensitivity for finer aiming.
3. **Level 3:** Further reduced sensitivity for extremely precise movements.

To cycle through sensitivity levels, press the **TARGET** button located on the back of the controller. The LED indicators near the "TURBO" button will show the current level.

Turbo Mode

Turbo mode enables rapid, automatic input for selected buttons when held down. This feature can be applied to face buttons (Triangle, Circle, Cross, Square), D-Pad directions, and L1/R1/L2/R2 triggers.

To activate Turbo mode for a button:

1. Press and hold the **TURBO** button.
2. While holding **TURBO**, press the desired button (e.g., Cross) once.
3. Release both buttons. The selected button will now activate Turbo mode when held.

To deactivate Turbo mode for a button:

1. Press and hold the **TURBO** button.
2. While holding **TURBO**, press the button with active Turbo mode (e.g., Cross) once.
3. Release both buttons. Turbo mode for that button is now off.

Button Assignment (Remapping)

The controller allows for custom remapping of certain buttons. This feature is particularly useful for optimizing controls for specific games or personal preference.

To assign a button:

1. Press and hold the **ASSIGN** button.
2. While holding **ASSIGN**, press the button you wish to remap (e.g., L1).
3. Still holding **ASSIGN**, press the button whose function you want to assign to the first button (e.g., R2).
4. Release all buttons. The function of R2 is now assigned to L1.

To clear a button assignment:

1. Press and hold the **ASSIGN** button.
2. While holding **ASSIGN**, press the button whose assignment you wish to clear (e.g., L1).
3. Release both buttons. The button will revert to its default function.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the controller's internal components. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the controller.
- **Cable Care:** Do not sharply bend or pull the USB cable. Always grasp the plug when disconnecting from the console.
- **Avoid Drops:** Protect the controller from drops and impacts, as this can damage internal components.

TROUBLESHOOTING

Controller not responding:

- Ensure the USB cable is securely connected to both the controller and the console.
- Try connecting the controller to a different USB port on your console.
- Restart your PlayStation console.
- Test the controller on another compatible console or PC (if applicable) to determine if the issue is with the controller or the console.

Buttons or analog sticks are not functioning correctly:

- Check if Turbo mode or Button Assignment features are accidentally activated for the affected buttons. Refer to the "Operating the Controller" section to deactivate or clear assignments.
- Ensure the controller is clean and free from debris that might obstruct button movement.

- If analog sticks exhibit drift, try recalibrating them if your console or game offers such an option.

Target button sensitivity not changing:

- Ensure you are pressing the TARGET button firmly.
 - Observe the LED indicators to confirm sensitivity level changes.
-

SPECIFICATIONS

Feature	Detail
Model Number	PS4-025
Compatibility	PlayStation 4, PlayStation 3
Connectivity	Wired USB
Dimensions	4.53 x 2.48 x 2.44 inches (approx.)
Weight	10.2 ounces (approx.)
Special Features	Touch Pad, Target Button (3 sensitivity levels), Turbo Mode, Button Assignment
Manufacturer	HORI

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official HORI website or contact HORI customer service directly. Keep your proof of purchase for warranty claims.

HORI Official Website: <https://stores.hori.jp/>

For further assistance, please visit the [HORI Store on Amazon](#).