

Farberware 21926

Farberware High Performance Nonstick Cookware Set User Manual

Model: 21926 | Brand: Farberware

INTRODUCTION

This user manual provides essential information for the safe and effective use, care, and maintenance of your Farberware High Performance Nonstick Cookware Set. Please read these instructions thoroughly before first use and retain for future reference.

PRODUCT OVERVIEW

The Farberware High Performance Nonstick Cookware Set is designed for efficient cooking and easy cleanup. This 17-piece set includes a variety of pots, pans, and essential kitchen tools.



Image: The complete 17-piece Farberware High Performance Nonstick Cookware Set, featuring various pots, pans, a griddle, a cookie pan, and kitchen tools, all in an Aqua color.

Set Components:

- 1-Quart Saucepan with Lid
- 2-Quart Saucepan with Lid
- 5-Quart Dutch Oven with Lid
- 8-Inch Frying Pan
- 10-Inch Frying Pan with Lid
- 11-Inch Square Griddle
- Medium Cookie Pan
- 6 Prestige® Nylon Kitchen Utensils



Image: A close-up view of the 5-Quart Dutch Oven with its glass lid, showcasing the Aqua exterior and nonstick interior.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all cookware and accessories from the packaging. Dispose of packaging materials responsibly.
- Initial Cleaning:** Before first use, wash all pieces in warm, soapy water. Rinse thoroughly and dry immediately with a soft cloth. This removes any manufacturing residues.
- Seasoning (Optional for enhanced nonstick performance):** While not strictly required for nonstick, a light seasoning can further enhance durability. Apply a thin layer of cooking oil (vegetable, canola, or grapeseed) to the nonstick surface with a paper towel. Heat the pan over low heat for 30 seconds, then remove from heat and let cool. Wipe off any excess oil.

OPERATING INSTRUCTIONS

Cooking Guidelines:

- Heat Settings:** Use low to medium heat for most cooking tasks. High heat can damage the nonstick coating over time and is generally not necessary due to the cookware's efficient heat distribution.
- Utensil Compatibility:** The nonstick coating is designed for durability. For best results and to prolong the life of the nonstick surface, use nylon, silicone, or wooden utensils. Metal utensils may be used with care, but avoid sharp or pointed metal objects that could scratch the surface.
- Oven Safety:** The cookware is oven safe up to 350°F (175°C). The medium cookie pan is oven safe up to 450°F (232°C).
- Lids:** Shatter-resistant glass lids allow you to monitor cooking progress without lifting the lid, helping to seal in heat and moisture.



Image: The Farberware Dutch Oven with its lid, positioned on a stovetop burner, illustrating typical cooking use.

MAINTENANCE AND CARE

Cleaning:

- **Dishwasher Safe:** All pieces in this cookware set are dishwasher safe for convenient and easy cleanup.
- **Hand Washing:** For extended life of the nonstick coating, hand washing with warm, soapy water and a non-abrasive sponge is recommended.
- **Stubborn Food:** For stuck-on food, fill the pan with warm water and a small amount of dish soap, let it soak for 15-20 minutes, then clean with a soft sponge. Avoid using steel wool or abrasive cleaners.

Storage:

Store cookware carefully to prevent scratching the nonstick surface. Placing paper towels or soft cloths between stacked pans can help protect the coating.



Image: The underside of a Farberware frying pan, showing the heat-distributing base design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticking to nonstick surface	Excessive heat, insufficient oil, or damaged coating.	Use lower heat settings. Ensure a thin layer of oil or butter is used. Avoid metal utensils that can scratch the surface.
Handles becoming hot during cooking	High heat settings, or flame extending up the sides of the pan.	Ensure burner size matches the base of the pan. Use oven mitts or pot holders when handling hot cookware.
Discoloration of exterior finish	High heat, or food residue burning onto the exterior.	Use appropriate heat settings. Clean exterior regularly.

SPECIFICATIONS

Model Number: 21926

Material: Aluminum (Cookware Body), Glass (Lids)

Color: Aqua

Set Size: 17 Piece

Handle Material: Aluminum with comfortable grips

Dishwasher Safe: Yes

Oven Safe Temperature: Cookware up to 350°F (175°C), Cookie Pan up to 450°F (232°C)

Product Dimensions: 23.5 x 11 x 14 inches

Item Weight: 16.22 pounds

UPC: 631899219268

WARRANTY AND SUPPORT

This Farberware High Performance Nonstick Cookware Set comes with a **Lifetime Limited Warranty**. For detailed warranty information, claims, or product support, please refer to the official Farberware website or contact their customer service directly.

For more information, visit the official Farberware Store: [Farberware Store on Amazon](#)