

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Konstsmide](#) /

› [Konstsmide 2888-000 LED Snow Globe Lantern Santa Scene Instruction Manual](#)

Konstsmide 2888-000

Konstsmide 2888-000 LED Snow Globe Lantern Santa Scene Instruction Manual

Model: 2888-000

1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your Konstsmide 2888-000 LED Snow Globe Lantern. Please read these instructions carefully before initial use and retain them for future reference. This product is designed for indoor use only.

2. PRODUCT OVERVIEW

The Konstsmide 2888-000 is an LED-illuminated snow globe lantern featuring a Santa scene. It is water-filled with an integrated water spinner that circulates glitter, creating a continuous snow effect. The lantern operates on batteries and includes a 5-hour timer function.



3. SAFETY INFORMATION

- **Indoor Use Only:** This product is rated IP20 and is intended for indoor use in dry environments. Do not expose to water or high humidity.
- **Battery Safety:**
 - Use only the specified battery type (3 x C 1.5V batteries).
 - Do not mix old and new batteries, or different types of batteries.
 - Insert batteries with correct polarity (+/-).
 - Remove exhausted batteries promptly to prevent leakage.
 - If the product will not be used for an extended period, remove the batteries.
 - Keep batteries out of reach of children.
- **Handling:** Handle the lantern with care. Avoid dropping or strong impacts, which could damage the internal components or cause the liquid to leak.
- **Repair:** Do not attempt to open or repair the product yourself. Refer all servicing to qualified personnel.
- **Disposal:** Dispose of batteries and the product according to local regulations.

4. SETUP

4.1 Unpacking

1. Carefully remove the lantern from its packaging.
2. Inspect the product for any signs of damage. If damaged, do not use and contact your retailer.
3. Retain packaging for storage or transport if needed.

4.2 Battery Installation

The lantern requires 3 x C 1.5V batteries (not included).

1. Locate the battery compartment cover, typically on the bottom of the lantern.
2. Open the battery compartment cover. This may require a small screwdriver.
3. Insert 3 C 1.5V batteries, ensuring correct polarity as indicated inside the compartment.
4. Securely close the battery compartment cover.



Figure 4.2: The Konstsmide LED Snow Globe Lantern placed on a surface, illustrating its appearance in an indoor environment. The battery compartment is located at the base.

4.3 Placement

Place the lantern on a stable, flat surface indoors, away from direct sunlight, heat sources, and areas where it might be easily knocked over. Ensure it is not placed near sensitive electronics or materials that could be damaged by potential water leakage, although this is rare.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Timer Function

The lantern typically features a switch with multiple positions, often located near the battery compartment:

- **OFF:** Turns the lantern completely off.
- **ON:** Activates the LED light and water spinner continuously. The lantern will remain on until manually switched off or batteries are depleted.
- **TIMER (5H):** Activates the LED light and water spinner for 5 hours. After 5 hours, the lantern will automatically turn off. It will then automatically turn on again at the same time the next day for another 5 hours. This cycle repeats daily until the batteries are removed or depleted, or the switch is moved to another position.

To set the timer, switch the lantern to the "TIMER" position at your desired start time. For example, if you want it to turn on at 6 PM daily, switch it to "TIMER" at 6 PM.

5.2 Water Spinner and Glitter Effect

Upon activation (ON or TIMER mode), the internal motor will begin to spin the water, causing the glitter particles to circulate and create a dynamic snow-like effect around the Santa scene. This effect is continuous while the unit is powered on.

6. MAINTENANCE

6.1 Cleaning

- Ensure the lantern is switched off before cleaning.
- Wipe the exterior surfaces with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or the plastic globe.
- Avoid getting water into the battery compartment or any electrical components.

6.2 Battery Replacement

When the light dims, the glitter spinner slows down, or the unit stops functioning, it is time to replace the batteries. Follow the steps in Section 4.2 for battery installation, ensuring all three C 1.5V batteries are replaced with new ones.

6.3 Storage

If storing the lantern for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place, preferably in its original packaging, to protect it from dust and physical damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lantern does not light up or glitter does not spin.	Batteries are depleted. Batteries are inserted incorrectly. Switch is in the OFF position.	Replace with new C 1.5V batteries. Check battery polarity and reinsert correctly. Move the switch to ON or TIMER position.
Light is dim or glitter spinner is slow.	Batteries are low.	Replace with new C 1.5V batteries.
Timer function is not working as expected.	Timer was set at an unintended time.	Switch the lantern to OFF, then back to TIMER at the desired start time.

8. SPECIFICATIONS

- **Model:** 2888-000
- **Brand:** Konstsmide
- **Product Dimensions:** 4.13"L x 4.13"W x 10.63"H (10.5 cm L x 10.5 cm W x 27 cm H)
- **Material:** Plastic, Metal
- **Color:** Brown (lantern casing)
- **Light Source:** 1 Warm White LED Diode
- **Power Source:** 3 x C 1.5V Batteries (not included)
- **Operating Time (approx.):** 190 hours (on new batteries)
- **Timer Function:** 5 hours ON / 19 hours OFF (automatic daily cycle)
- **Ingress Protection (IP) Rating:** IP20 (Indoor Use Only)
- **Item Weight:** Approximately 1.4 kg (3.08 lbs)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact Konstsmide customer service directly. Contact details can typically be found on the manufacturer's official website or product packaging.

You can visit the official Konstsmide website for more information: www.konstsmide.com