

Coby CVR-22

Coby CVR-22 Portable Cassette Recorder User Manual

Model: CVR-22

INTRODUCTION

The Coby CVR-22 Portable Cassette Recorder is designed for simple and convenient audio recording and playback. Featuring one-touch recording, a built-in microphone, and a retractable handle, this device offers excellent portability for capturing audio wherever you go. Rediscover your classic tape collection or record new content with ease.



Image: The Coby CVR-22 Portable Cassette Recorder, showcasing its compact design and control buttons.

SETUP

Powering the Device

The CVR-22 operates on two (2) AA batteries. Ensure batteries are inserted correctly according to polarity markings

inside the battery compartment.

1. Locate the battery compartment on the underside or rear of the unit.
2. Open the battery compartment cover.
3. Insert two AA batteries, matching the positive (+) and negative (-) terminals as indicated.
4. Close the battery compartment cover securely.



Image: The Coby CVR-22 showing a cassette being inserted and indicating its 2x AA battery power requirement.

OPERATING INSTRUCTIONS

Inserting a Cassette Tape

1. Press the **STOP/EJECT** button to open the cassette compartment door.
2. Insert a standard audio cassette tape with the open edge facing upwards and the tape side facing the unit.
3. Gently close the cassette compartment door until it clicks shut.

Playback

1. Ensure a cassette tape is properly inserted.
2. Press the **PLAY** button. The tape will begin to play.
3. Adjust the volume using the volume control dial, typically located on the side of the unit.
4. To stop playback, press the **STOP/EJECT** button.
5. To fast forward, press the **FF (Fast Forward)** button.
6. To rewind, press the **REW (Rewind)** button.



Image: A user holding the Coby CVR-22, illustrating the joy of rediscovering a classic tape collection.

Recording

The CVR-22 features one-touch recording and a built-in microphone for convenient audio capture.

1. Ensure a blank or recordable cassette tape is inserted.
2. Press the **RECORD** button (usually red). The **PLAY** button will also engage simultaneously.

3. The built-in microphone will begin recording audio. Position the recorder appropriately for optimal sound capture.
4. To stop recording, press the **STOP/EJECT** button.



Image: The Coby CVR-22 being used in a classroom setting, highlighting its utility for recording classes and lectures.

PERFECT FOR RECORDING MEETINGS



ONE TOUCH RECORD BUTTON

Image: The Coby CVR-22 positioned on a meeting table, demonstrating its suitability for recording meetings with its one-touch record button.

External Connections

The CVR-22 includes a 3.5mm headphone jack for private listening and potentially an external microphone input (check your specific unit for microphone input if needed, as the built-in mic is standard).

- **Headphone Jack:** Connect standard 3.5mm headphones for personal audio playback.
- **External Microphone Input (if available):** For higher quality recordings or specific recording scenarios, an external microphone can be connected to the designated input jack.

CONVENIENT CASSETTE RECORDER

WITH BUILT-IN AUDIO INPUT/OUTPUT PORTS



Image: The Coby CVR-22 connected to an external microphone setup, illustrating its built-in audio input/output ports for versatile use.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the finish.
- Periodically clean the tape head and pinch roller using a specialized cassette head cleaner or a cotton swab lightly dampened with isopropyl alcohol. This helps maintain optimal sound quality.

Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with fresh ones, ensuring correct polarity.
No sound during playback.	Volume too low; headphones not connected properly; tape head dirty.	Increase volume; ensure headphones are fully inserted; clean tape head.
Recording is distorted or unclear.	Microphone too far from sound source; tape head dirty; faulty tape.	Move closer to sound source; clean tape head; try a different tape.
Tape does not move or jams.	Tape is tangled or damaged; unit mechanism issue.	Carefully remove and inspect tape; try a different tape. If issue persists, contact support.

SPECIFICATIONS





Feature	Detail
Brand	Coby
Model Number	CVR-22
Color	Black
Power Source	2 x AA Batteries (Not rechargeable)
Recording Medium	Cassette Tape
Recording Features	One-Touch Recording, Built-in Microphone, Auto-Stop
Playback Features	Auto-Stop
Audio Output	Built-in Speaker, 3.5mm Headphone Jack
Dimensions (D x W x H)	14.8 cm x 25.9 cm x 5 cm (approx.)
Handle	Retractable

WARRANTY AND SUPPORT

Specific warranty information for the Coby CVR-22 Portable Cassette Recorder is not available in this manual. Please refer to the product packaging or the manufacturer's official website for detailed warranty terms and conditions. For technical support or service inquiries, please contact Coby customer service through their official channels. Keep your purchase receipt as proof of purchase.

Manufacturer: Summit Electronics, US

Related Documents

	<p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
	<p>Coby CD201 Wireless Anti-Skip CD Player User Manual</p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
	<p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
	<p>COBY CSTW52FD True Wireless Speaker User Manual</p> <p>User manual for the COBY CSTW52FD True Wireless Speaker, covering package contents, button functions, charging, Bluetooth pairing, True Wireless Stereo, FM Radio mode, USB/TF card playback, RGB light modes, specifications, safety precautions, FCC statements, and warranty information.</p>

Documents - Coby – CVR-22

no relevant documents