Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Zelotes /
- > Zelotes T80 Wired Gaming Mouse User Manual

Zelotes T80

Zelotes T80 Wired Gaming Mouse User Manual

Model: T80 | Brand: Zelotes

1. Introduction

The Zelotes T80 Wired Gaming Mouse is designed for both gaming and general office use, offering a comfortable ergonomic design and customizable features. This manual provides detailed instructions for setting up, operating, and maintaining your T80 mouse.

Key features include:

- 7 programmable buttons for enhanced control.
- Adjustable DPI settings from 1000 to 7200 DPI for precision and speed.
- Ergonomic design for comfortable long-term use, reducing hand fatigue.
- Plug & Play connectivity for easy setup on Windows and macOS systems.
- Durable 1.5m braided USB cable.



Figure 1.1: Zelotes T80 Gaming Mouse showcasing its ergonomic design and customizable LED lighting.

2. SETUP

The Zelotes T80 mouse features a simple Plug & Play setup, requiring no additional drivers or software installation for basic functionality.

- 1. Locate an available USB port on your computer (PC or Mac).
- 2. Insert the USB connector of the Zelotes T80 mouse firmly into the USB port.
- 3. Your operating system will automatically detect and install the necessary drivers. This process usually takes a few seconds.
- 4. Once installed, the mouse is ready for immediate use.



Figure 2.1: Connecting the Zelotes T80 mouse via its braided USB cable.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

The Zelotes T80 mouse is equipped with 7 buttons for versatile control:



Figure 3.1: Button layout and functions of the Zelotes T80 Gaming Mouse.

- 1. Left Button: Standard left-click function.
- 2. Right Button: Standard right-click function.
- 3. Middle Button (Scroll Wheel): Scrolls content up/down. Pressing it acts as a middle-click.
- 4. Forward Button: Navigates forward in web browsers or file explorers.
- 5. Backward Button: Navigates backward in web browsers or file explorers.
- 6. DPI Adjustment Button: Cycles through DPI settings.
- 7. Fire Button: Provides a rapid double-click action.

3.2 DPI Adjustment

The DPI (Dots Per Inch) setting determines the sensitivity of the mouse cursor. The T80 mouse offers five adjustable DPI levels:

- 1000 DPI
- 1600 DPI
- 2400 DPI
- 3200 DPI
- 7200 DPI

Press the **DPI Adjustment Button** (6) to cycle through these settings. Each change will typically be indicated by a change in the mouse's LED color or a brief flash.

3.3 LED Lighting Control

The Zelotes T80 mouse features dynamic LED lighting. You can control its behavior:

- To turn LEDs On/Off: Press and hold the DPI Adjustment Button (6) for approximately 3 seconds.
- To change LED color: Press and hold the Forward Button (4) for approximately 3 seconds. The mouse will cycle through available colors.



Figure 3.2: The Zelotes T80 mouse with various LED color options.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Zelotes T80 mouse, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water, but avoid excessive moisture. Do not use harsh chemicals or abrasive cleaners.
- **Sensor Care:** Keep the optical sensor on the underside of the mouse clean and free from dust or debris to ensure accurate tracking.
- Cable Management: Avoid sharp bends or excessive pulling on the USB cable. Store the cable neatly when not in use to prevent damage.
- **Storage:** When not in use for extended periods, store the mouse in a clean, dry environment away from extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your Zelotes T80 mouse, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mouse not responding	Loose USB connection, faulty USB port, driver issue.	Ensure USB cable is fully inserted. Try a different USB port. Restart your computer.
LEDs are off	LEDs have been manually turned off.	Press and hold the DPI Adjustment Button (6) for 3 seconds to toggle LEDs on.
Cannot change LED color	Incorrect button pressed or not held long enough.	Press and hold the Forward Button (4) for 3 seconds to cycle colors.
DPI not changing	DPI button not pressed correctly.	Ensure you are pressing the DPI Adjustment Button (6) firmly.

Problem	Possible Cause	Solution	
Inaccurate cursor movement	Dirty optical sensor, unsuitable mouse pad surface.	Clean the optical sensor on the mouse's underside. Use a clean, uniform mouse pad.	

6. SPECIFICATIONS

Feature	Description
Brand	Zelotes
Model Name	T80
Color	Black
Connectivity Technology	Wired USB
Movement Detection Technology	Optical
Number of Buttons	7
DPI Levels	1000 / 1600 / 2400 / 3200 / 7200 DPI
Button Life	5,000,000 cycles
Hand Orientation	Right
Special Features	Ergonomic Design, LED Backlighting
Compatible Devices	Personal Computer (Windows 98/2000/ME/NT/XP/7/8/10, macOS)
Recommended Uses	Office, Gaming
Dimensions (L x W x H)	130 x 105 x 45 mm
USB Cable Length	1.5 m
Rechargeable Battery	No

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller/manufacturer directly. Keep your proof of purchase for any warranty claims.

Manufacturer: ATOMIX

Related Documents - T80

