

[Manuals.plus](#) /

> [VITEK](#) /

> VITEK VT-1838-I 1800-Watt Bagless Vacuum Cleaner Instruction Manual

VITEK VT-1838-I

VITEK VT-1838-I 1800-Watt Bagless Vacuum Cleaner

INSTRUCTION MANUAL

Important Safety Instructions

Please read all instructions carefully before using the VITEK VT-1838-I vacuum cleaner. Retain this manual for future reference.

- Always disconnect the appliance from the power supply before cleaning or maintenance.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Ensure the water tank is filled to the correct level when using aqua filtration to prevent motor damage.
- Do not immerse the motor unit in water or any other liquid.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- This appliance is for household use only.

Product Overview

The VITEK VT-1838-I is an 1800-Watt bagless vacuum cleaner featuring a 400W suction power, cyclonic technology, and HEPA filtration for efficient cleaning.



Figure 1: VITEK VT-1838-I Vacuum Cleaner with Aqua Filtering System and Turbo Brush. This image illustrates the main unit, hose, telescopic pipe, and turbo brush attachment, highlighting key features like Aqua Clean and HEPA filtration.

Key Features:

- **Aqua Filtering System:** Utilizes water for dust collection, trapping fine particles and allergens.
- **Cyclonic Duo Filtration:** Enhances dust separation for consistent suction.
- **HEPA Filter:** Captures microscopic particles, improving air quality.
- **1800W Power / 400W Suction:** Provides strong cleaning performance.
- **Adjustable Suction Power:** Control suction directly on the unit.
- **Automatic Cord Winding:** Convenient power cord storage.
- **Steel Telescopic Pipe:** Adjustable length for comfortable reach.
- **Dry Dust Collection Bowl:** For use without water filtration.

What's in the Box:

- Vacuum Cleaner Main Unit
- Hose
- Steel Telescopic Pipe
- Turbo Brush
- Brush for hard floor & carpet (2-in-1)
- Small Brush
- Crevice Nozzle
- Furniture Brush
- Dry Dust Collection Bowl (Interim)
- Instruction Manual (IM)



Figure 2: All included accessories for the VITEK VT-1838-I vacuum cleaner. This image displays the main unit along with all the brushes and nozzles provided for various cleaning tasks.

Setup and Assembly

1. **Unpacking:** Carefully remove all components from the packaging. Check for any damage.
2. **Attaching the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Assembling the Telescopic Pipe:** Attach the telescopic pipe to the hose handle. Adjust its length by pressing the release button and extending or retracting the pipe.
4. **Attaching Cleaning Head:** Select the desired cleaning head (e.g., 2-in-1 brush for hard floor/carpet, turbo brush) and attach it to the end of the telescopic pipe.
5. **Preparing for Aqua Filtration:**
 - Open the water tank compartment.
 - Remove the water tank.
 - Fill the water tank with clean water up to the indicated maximum level (0.5 L). Do not overfill.
 - Securely place the filled water tank back into the compartment.
6. **Using Dry Dust Collection (Optional):** If you prefer dry dust collection, ensure the interim dry dust collection bowl is installed instead of the water tank.



Figure 3: Side view of the VITEK VT-1838-I highlighting the water tank. This image shows the transparent water tank, which is essential for the aqua filtration system.

Operating Instructions

Follow these steps for effective cleaning with your VITEK VT-1838-I vacuum cleaner.

1. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet.
2. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.

3. **Adjusting Suction Power:** Rotate the speed control knob on the main unit to adjust the suction power from minimum (MIN) to maximum (MAX) as needed for different surfaces and cleaning tasks.
4. **Using Attachments:**
 - **2-in-1 Brush:** Use the switch on the brush to extend bristles for hard floors or retract them for carpets.
 - **Turbo Brush:** Ideal for deep cleaning carpets and removing pet hair.
 - **Small Brush:** Suitable for delicate surfaces, shelves, and upholstery.
 - **Crevice Nozzle:** Perfect for narrow gaps, corners, and edges.
 - **Furniture Brush:** Designed for cleaning upholstery and curtains.
5. **Automatic Cord Winding:** After use, press the cord rewind button on the main unit to automatically retract the power cord.

Your browser does not support the video tag.

Video 1: VITEK VT-1838-I Vacuum Cleaner Demonstration. This video provides a visual guide on the vacuum cleaner's features, including the aqua filtering system, speed control, various brush attachments, and automatic cord winding.



Figure 4: Close-up of the ergonomic handle for comfortable use. This image highlights the design of the handle, ensuring ease of grip during operation.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

1. Emptying and Cleaning the Water Tank:

- After each use with aqua filtration, remove the water tank.
- Carefully empty the dirty water into a drain.
- Rinse the tank thoroughly with clean water and allow it to air dry completely before reassembling.

2. **Emptying the Dry Dust Collection Bowl:** If using the dry dust collection bowl, empty its contents regularly into a waste bin.
3. **Cleaning Filters:**
 - **HEPA Filter:** The HEPA filter should be cleaned periodically. Tap it gently to remove dust or rinse under cold running water if washable (refer to specific filter instructions). Ensure it is completely dry before reinstallation.
 - **Foam Filter:** The foam filter can be rinsed under cold running water. Squeeze out excess water and allow it to air dry completely.
 - **Cyclonic Duo Filter:** Disassemble and clean the cyclonic filter components as needed, rinsing with water and ensuring they are dry before reassembly.
4. **General Cleaning:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents. Clean attachments as needed.

Troubleshooting

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

- **No Power:** Check if the power cord is securely plugged into the outlet and the vacuum cleaner. Ensure the outlet is functional.
- **Loss of Suction:**
 - Check if the water tank is properly filled or the dry dust collection bowl is empty.
 - Inspect the hose, telescopic pipe, and attachments for blockages.
 - Clean or replace the HEPA, foam, and cyclonic filters.
 - Ensure all connections (hose to unit, pipe to hose, attachment to pipe) are secure.
- **Unusual Noise:** Turn off and unplug the vacuum. Check for any foreign objects in the brush, hose, or filters.
- **Water Leakage:** Ensure the water tank is correctly seated and not overfilled. Check for any cracks or damage to the water tank or seals.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Feature	Specification
Brand	VITEK
Model Number	VT-1838-I
Wattage	1800 Watts
Suction Power	400W
Filter Type	HEPA Filter, Cyclonic, Aqua Filtration
Used Water Volume	0.5 Litres
Dust Bowl Capacity	3.5 Litres
Power Source	Corded Electric

Voltage	240 Volts
Item Weight	7700 Grams
Noise Level	80 Decibels
Surface Recommendation	Carpet, Hard Floor
Special Features	Bagless, HEPA, Wet/Dry (Aqua Filtering)

Warranty and Support

Your VITEK VT-1838-I vacuum cleaner comes with a **2-year manufacturer warranty** from the date of purchase.

For warranty claims, technical support, or any product-related inquiries, please contact VITEK Customer Care:

- **Toll-Free Number:** 1800 266 0495
- **WhatsApp:** 8291994335
- **Email:** customercare@vitek.in

Please have your product model number (VT-1838-I) and proof of purchase ready when contacting support.