



[Manuals.plus](#) /

› [Mintcraft](#) /

› [Mintcraft Prosource Ts811 Combination Lock Cash Box User Manual](#)

## Mintcraft Ts811

# Mintcraft Prosource Ts811 Combination Lock Cash Box User Manual

Model: Ts811 (Part Number: 2230159)

## 1. INTRODUCTION

This manual provides instructions for the Mintcraft Prosource Ts811 Combination Lock Cash Box. This portable cash box is designed for secure storage of cash, coins, and other small valuables. It features a customizable combination lock, a removable six-compartment plastic tray, four spring clips for bill organization, and a convenient carry handle. The durable welded steel body with a full-length piano hinge ensures longevity and security.



Image 1: The Mintcraft Prosource Ts811 Cash Box shown open, revealing organized compartments for bills and coins, along with the combination lock mechanism on the front.

## 2. SETUP: SETTING YOUR COMBINATION LOCK

Your cash box comes with a factory-set combination, typically 0-0-0. It is highly recommended to change this to a personal combination immediately upon first use.

1. **Open the Cash Box:** Use the factory default combination (0-0-0) to open the cash box. Turn the dials to 0-0-0 and slide the latch to open.
2. **Locate the Reset Lever:** With the cash box open, look on the inside of the lid or near the locking mechanism for a small lever or button. This is typically labeled "SET" or has an arrow pointing to it.
3. **Set to Reset Position:** Move the reset lever from its original position (e.g., A) to the setting position (e.g., B). Some models may require pressing and holding a button.
4. **Choose Your New Combination:** While the lever is in the setting position, rotate the combination dials to your desired three-digit code. Choose a memorable but secure combination.
5. **Return Reset Lever:** Once your new combination is set on the dials, return the reset lever to its original position.
6. **Test Your New Combination:** Scramble the dials, then enter your new combination and attempt to open the cash box. Ensure it opens correctly.
7. **Record Your Combination:** It is advisable to write down your combination and store it in a secure, separate location, not inside the cash box.

**Important:** If you forget your combination, there is no master key or override. The cash box will not be accessible without the correct combination.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Opening and Closing the Cash Box

- **To Open:** Enter your set three-digit combination on the dials. Slide the latch mechanism to the side to release the lid.
- **To Close:** Ensure the lid is properly aligned with the base. Close the lid firmly. Scramble the combination dials to secure the lock.

### 3.2 Using the Removable Tray and Bill Clips

- The cash box includes a removable plastic tray with six compartments for organizing coins and other small items.
- Underneath the removable tray, there is additional storage space for larger items or documents.
- The lid features four spring clips designed to hold bills securely in place, keeping them separated and organized. Simply lift a clip, insert the bills, and release the clip to secure them.

### 3.3 Using the Carry Handle

The integrated carry handle allows for convenient and secure transportation of the cash box. Ensure the box is securely locked before carrying.

## 4. MAINTENANCE

---

- **Cleaning:** Wipe the exterior and interior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lock Mechanism:** The combination lock mechanism is designed to be maintenance-free. Do not attempt to lubricate or disassemble the lock, as this may impair its function.
- **Storage:** Store the cash box in a dry environment to prevent rust or damage to the steel body.

## 5. TROUBLESHOOTING

---

- **Cash Box Will Not Open:**
  - Ensure you are entering the correct combination. Double-check each digit.
  - Verify that the dials are precisely aligned with the indicator marks.
  - If you have forgotten your combination, the cash box cannot be opened without it. There is no master key or reset procedure once the combination is forgotten and the box is locked.
- **Lid Does Not Close Properly:**
  - Check for any obstructions, such as bills or coins, preventing the lid from seating correctly.
  - Ensure the removable tray is properly seated within the cash box.

## 6. SPECIFICATIONS

---

Brand	Mintcraft
-------	-----------

<b>Model Number</b>	Ts811 (2230159)
<b>Lock Type</b>	Combination
<b>Material</b>	Alloy Steel
<b>Special Feature</b>	Portable
<b>Mounting Type</b>	Freestanding
<b>Item Weight</b>	7.4 Pounds
<b>Product Dimensions</b>	4 x 8 x 12 inches (approx. 3-1/4"x11-3/8"x7-5/8" as per title)
<b>UPC</b>	045734962545

## 7. WARRANTY INFORMATION

---

Specific warranty details for the Mintcraft Prosource Ts811 Cash Box are not provided in the product data. Please refer to your purchase documentation or contact the retailer or manufacturer directly for warranty terms and conditions.

## 8. CUSTOMER SUPPORT

---

Contact information for customer support is not available in the provided product details. For assistance, please reach out to the retailer from whom you purchased the product or visit the official Mintcraft website for potential support resources.