

# Teka MWE 225 FI Microwave Oven User Manual

MODEL: MWE 225 FI

## 1. Introduction

Thank you for choosing the Teka MWE 225 FI Recessed Microwave Oven. This manual provides important information for the safe and efficient operation, installation, and maintenance of your appliance. Please read this manual thoroughly before using the microwave oven and keep it for future reference.

### 1.1 Safety Instructions

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Do not use corrosive chemicals or vapors in this appliance.
- Always use oven mitts when handling hot dishes.

## 2. Product Overview

The Teka MWE 225 FI is a 20-liter recessed microwave oven with 800W microwave power and a 1000W grill function, featuring an electronic control panel and stainless steel interior.



Figure 2.1: Front view of the Teka MWE 225 FI Microwave Oven.

## 2.1 Components and Controls

- **Control Panel:** Digital display for time and settings, with a central rotary knob for adjustments and buttons for mode selection, quick start, and power.
- **Oven Cavity:** 20-liter capacity with a stainless steel interior for easy cleaning and durability.
- **Glass Turntable:** Ensures even cooking by rotating food during operation.
- **Grill Element:** Located at the top of the oven cavity for grilling and browning.
- **Oven Lamp:** Illuminates the interior during operation.

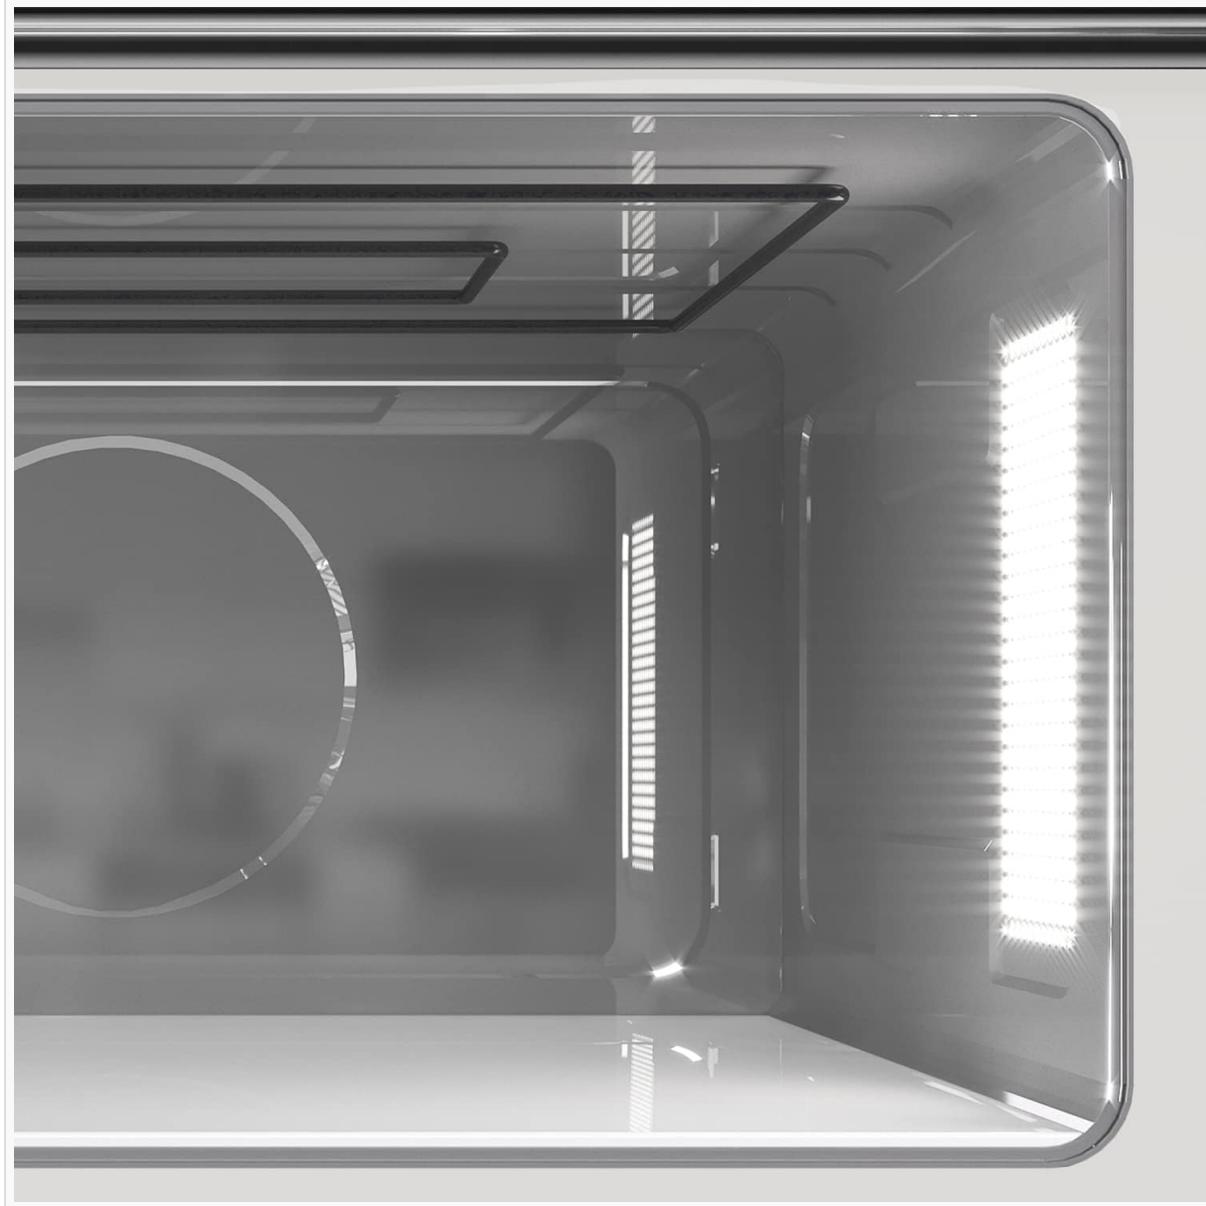


Figure 2.2: Interior view of the microwave oven with grill element.

### 3. Setup and Installation

#### 3.1 Unpacking

Carefully remove the microwave oven from its packaging. Inspect the appliance for any damage. Do not operate if damaged. Remove all packing materials, including any protective film or tape from the oven cavity and accessories.

#### 3.2 Placement and Ventilation

This appliance is designed for built-in installation. Ensure the cabinet opening meets the required dimensions for proper ventilation and operation. Maintain adequate space around the appliance as specified in the installation diagram.

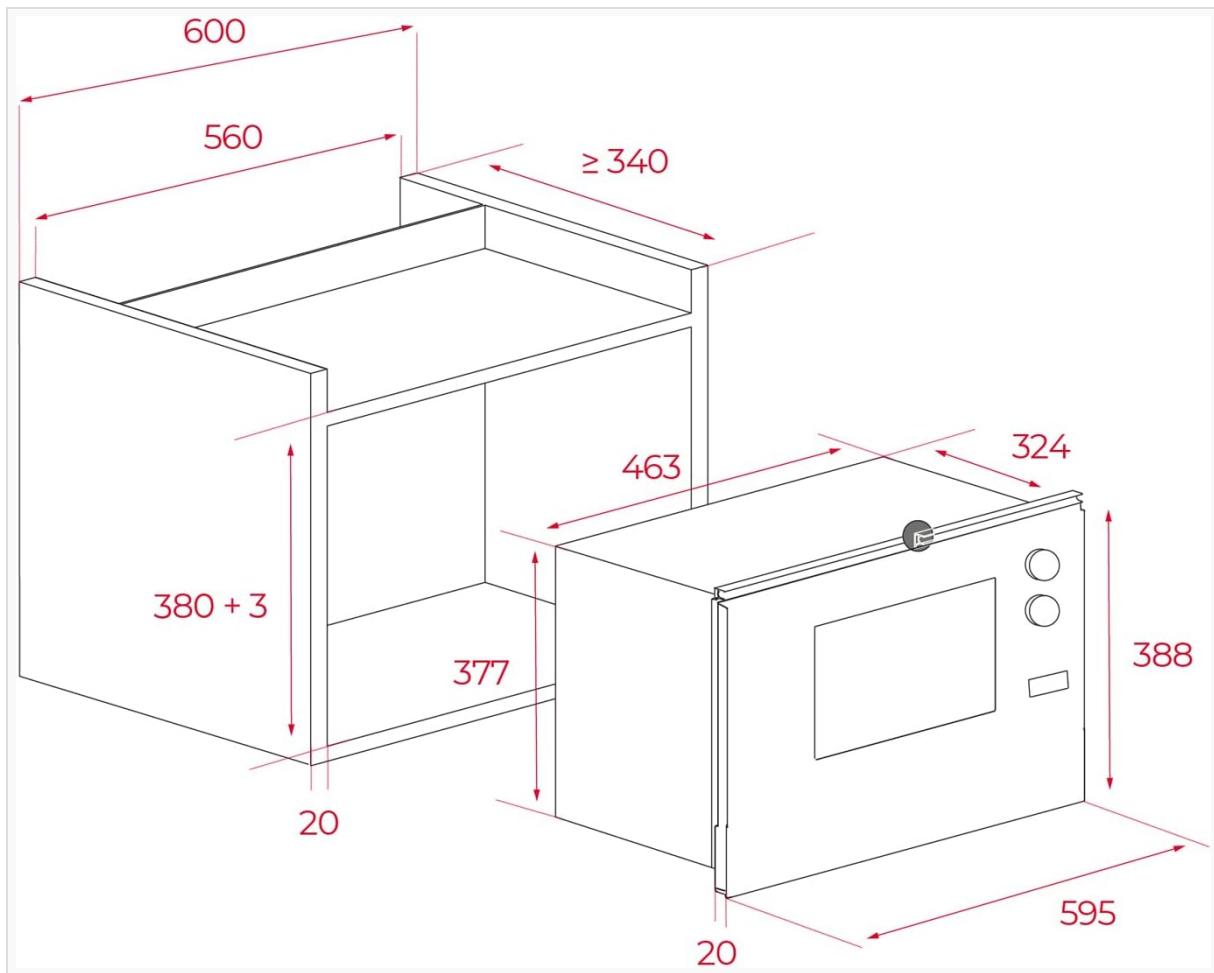


Figure 3.1: Installation dimensions for the Teka MWE 225 FI.

### 3.3 Electrical Connection

Connect the microwave oven to a properly grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating label (230 Volts, 800 Watts).

## 4. Operating Instructions

### 4.1 Setting the Clock

Upon first power-up or after a power outage, the display will show '0:00'. Use the rotary knob to set the current time. Press the 'Clock' button (if available) or confirm with the 'Start' button.

### 4.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press the 'Microwave' button to select the desired power level (8 levels available).
4. Use the rotary knob to set the cooking time (up to 95 minutes).
5. Press the 'Start' button to begin cooking.

### 4.3 Grill Function

The grill function is ideal for browning and crisping food.



## Función **Grill**

Capacidad de 20 L

Menú de acceso directo

Descongelación por peso

Figure 4.1: Grill Function indication.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the 'Grill' button.
3. Use the rotary knob to set the grilling time.
4. Press the 'Start' button.

### 4.4 Defrosting

The oven offers defrosting by weight or by time.

- **Defrost by Weight:** Press the 'Defrost by Weight' button, use the rotary knob to select the food weight, and press 'Start'.
- **Defrost by Time:** Press the 'Defrost by Time' button, use the rotary knob to set the defrosting time, and press 'Start'.

### 4.5 Shortcut Keys

The microwave features direct access menus for common functions, including a '+30 seconds' button for quick heating.

## 5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior:** Clean the oven cavity after each use with a damp cloth and mild detergent. For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Door and Seals:** Clean the door, door seals, and control panel with a soft, damp cloth to prevent food buildup.
- **Turtable:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher.
- Always ensure the appliance is unplugged before cleaning.

## 6. Troubleshooting

If you encounter issues with your microwave oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and time as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam inside oven	High moisture content in food.	This is normal for high moisture foods. Wipe interior after use.

If the problem persists after attempting these solutions, please contact customer support.

## 7. Technical Specifications

Feature	Specification
Brand	Teka
Model Number	108R00662 (MWE 225 FI)
Capacity	20 Liters
Microwave Power	800 Watts
Grill Power	1000 Watts
Voltage	230 Volts

Feature	Specification
Material	Stainless Steel
Product Dimensions (W x D x H)	59.5 x 32.3 x 38.2 cm
Item Weight	16.2 Kilograms
Installation Type	Built-In
Special Features	Shortcut Keys, Timer, Child Safety Lock, Digital Control, Programmable

## 8. Warranty and Support

### 8.1 Warranty Information

Your Teka MWE 225 FI microwave oven comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, service, or spare parts, please contact Teka customer support. You can find contact information on the Teka official website or in your product documentation. When contacting support, please have your model number (MWE 225 FI) and serial number ready.