

Teka MWE 255 FI

Teka MWE 255 FI Built-in Microwave with Grill

User Instruction Manual

1. INTRODUCTION

Thank you for choosing the Teka MWE 255 FI Built-in Microwave with Grill. This appliance is designed to provide efficient and convenient cooking solutions for your kitchen. Please read this manual carefully before using the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Regularly clean the oven and remove any food deposits.

3. PRODUCT OVERVIEW

The Teka MWE 255 FI is a sophisticated built-in microwave oven featuring a sleek stainless steel design and an electronic control panel. It combines microwave heating with a powerful quartz grill for versatile cooking options.

Key Features:

- **Simultaneous Quartz Grill (1000 W):** Ideal for browning and crisping dishes.
- **Five Power Levels:** Offers flexibility for various cooking needs.
- **900 W Microwave Output:** Ensures fast and efficient heating.
- **Electronic Control Panel:** Provides intuitive and comfortable programming.
- **25 Liters Capacity:** Spacious interior for everyday use.

- **Easy to Clean:** Designed for hassle-free maintenance.
- **Quiet Operation:** Operates without significant noise.
- **High-Quality Materials:** Built for durability and long-lasting performance.



Front view of the Teka MWE 255 FI Built-in Microwave, showcasing its sleek stainless steel finish and control panel.



Interior view of the microwave with the door open, showing the glass turntable and the grill rack.



An angled view of the microwave's interior, highlighting the stainless steel cavity and internal components.




The Teka MWE 255 FI microwave seamlessly installed into a modern kitchen cabinet, demonstrating its built-in design.

4. SETUP AND INSTALLATION

The Teka MWE 255 FI is designed for built-in installation. Proper installation is crucial for safety and optimal performance. It is recommended to have the appliance installed by a qualified technician.

Installation Steps:

1. **Prepare the Cabinet Opening:** Ensure the cabinet dimensions meet the requirements for the built-in microwave. Refer to the technical drawing for precise measurements.
2. **Electrical Connection:** Connect the microwave to a properly grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230 Volts).
3. **Secure the Appliance:** Slide the microwave into the prepared opening and secure it using the provided mounting hardware. The integrated frame simplifies the installation process.
4. **Final Checks:** Before first use, ensure the door opens and closes smoothly and that the appliance is stable.

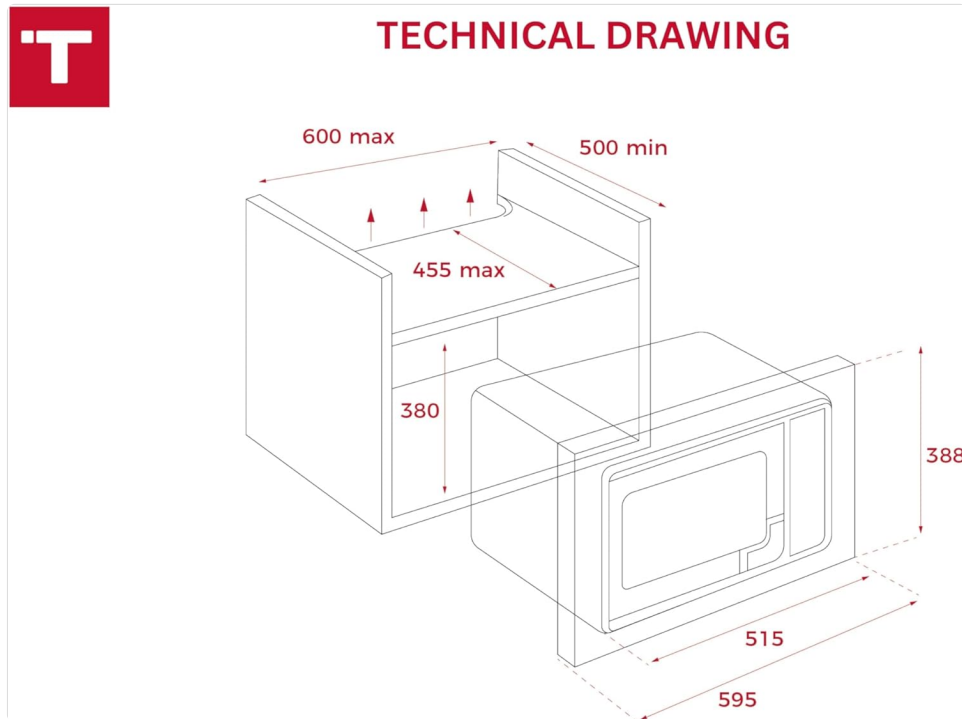

Technical drawing illustrating the required dimensions for installing the Teka MWE 255 FI microwave into a cabinet. Dimensions are in millimeters.

5. OPERATING INSTRUCTIONS

The Teka MWE 255 FI features an electronic control panel for easy operation. Familiarize yourself with the controls before use.

Basic Operation:

- **Power On/Off:** The appliance is typically in standby mode when plugged in.
- **Setting Time:** Use the electronic controls to set the current time.
- **Microwave Cooking:**
 - a. Place food in a microwave-safe container.
 - b. Select the desired power level (from the five available levels).
 - c. Set the cooking time using the electronic timer.
 - d. Press Start.
- **Grill Function:**
 - a. Place food on the grill rack provided.
 - b. Select the grill function.
 - c. Set the grilling time.
 - d. Press Start.
- **Defrost Function:** The microwave offers defrosting by weight or by time. Consult the specific instructions on the control panel or the full manual for detailed steps.

- **Timer Function:** Use the timer for precise cooking durations.
- **Child Safety Lock:** The control panel features a safety lock to prevent accidental operation. Refer to the full manual for activation/deactivation.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Teka microwave.

- **Interior Cleaning:** The stainless steel interior is very easy to clean. Wipe the inside of the oven with a damp cloth after each use to remove food splatters. For stubborn stains, use a mild, non-abrasive cleaner specifically designed for microwave ovens.
- **Exterior Cleaning:** Clean the exterior surfaces, including the control panel and door, with a soft, damp cloth. Avoid abrasive cleaners or scouring pads that could scratch the finish.
- **Turntable and Roller Ring:** Remove the glass turntable and roller ring for cleaning. Wash them in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Door Seals:** Regularly clean the door seals and adjacent parts with a damp cloth to ensure proper sealing and prevent microwave energy leakage.
- **Odor Removal:** To remove odors, combine a cup of water with several lemon slices or a few tablespoons of vinegar in a microwave-safe bowl. Heat on high for 2-3 minutes, then let it sit for 5 minutes before wiping the interior.

7. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common problems and solutions. For more complex issues, contact qualified service personnel.

Problem	Possible Cause	Solution
Microwave does not start	Not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child safety lock activated.	Check power plug; Ensure door is securely closed; Check household fuse/circuit breaker; Deactivate child safety lock (refer to manual).
Food not heating evenly	Food not stirred or rearranged; Incorrect power level or cooking time.	Stir or rearrange food during cooking; Adjust power level and cooking time as needed.
Light not working	Bulb is loose or burned out.	Contact service personnel for bulb replacement.
Excessive condensation inside	High moisture content in food; Normal operation.	Wipe interior after use. This is often normal, especially with high-moisture foods.
Door opening button is stiff	New appliance; Mechanism needs to loosen up.	This may soften with regular use. If it remains excessively stiff, contact support.
Fingerprints on surface	Normal for stainless steel finishes.	Wipe regularly with a soft cloth and a stainless steel cleaner.

8. SPECIFICATIONS

Detailed technical specifications for the Teka MWE 255 FI microwave oven.

Feature	Detail
---------	--------

Feature	Detail
Brand	Teka
Model Number	MWE 255 FI (8421152127162)
Color	Grey/Black
Product Dimensions (L x W x H)	41.3 x 59.5 x 38.8 cm
Item Weight	17.7 Kilograms
Capacity	25 Liters
Microwave Power Output	900 Watts
Grill Power	1000 Watts (Quartz Grill)
Total Power	1450 Watts
Voltage	230 Volts
Material	Stainless Steel (Interior), Other (Exterior)
Special Features	Defrost, Timer, Turntable, Control Panel Safety Lock
Human Interface Input	Touchscreen
Country of Origin	Spain

9. WARRANTY AND SUPPORT



Teka stands by the quality of its products.

Warranty Information:

This product typically comes with a **3-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions.

Customer Support:

For technical assistance, spare parts, or warranty service, please contact Teka customer support or your authorized dealer. Refer to the official Teka website or your purchase documentation for contact details specific to your region.

 <p>User Manual MWE FS20 G WH ES PT DE FR SE</p>	<p>Manual de Usuario Teka MWE FS20 G WH: Guía Completa y Seguridad</p> <p>Descubra cómo usar su horno microondas Teka MWE FS20 G WH con este manual de usuario detallado. Incluye instrucciones de seguridad, operación y mantenimiento.</p>
 <p>User Manual MWE FS25G WH ES PT DE FR SE</p>	<p>Teka MWE FS25G WH Microwave Oven User Manual</p> <p>Comprehensive user manual for the Teka MWE FS25G WH microwave oven, covering installation, operation, safety, cleaning, and troubleshooting.</p>
 <p>User Manual MS 620 BIS ML 820 BIS ML 8200 BIS PL RU RO TR</p>	<p>Instrukcja Obsługi Teka MS 620 BIS, ML 820 BIS, ML 8200 BIS - Kuchenka Mikrofalowa</p> <p>Kompletna instrukcja obsługi dla kuchenek mikrofalowych Teka MS 620 BIS, ML 820 BIS i ML 8200 BIS. Zawiera informacje o bezpieczeństwie, funkcjach, obsłudze, konserwacji i rozwiązywaniu problemów.</p>
	<p>Teka TMW.18BI Microwave Exploded Diagram and Parts List</p> <p>Detailed exploded view and parts identification for the Teka TMW.18BI microwave oven, providing a visual guide to its components for service and repair purposes.</p>
 <p>User Manual HMWE FS23 GC BK ES PT DE FR SE</p>	<p>Manual de Usuario Horno Microondas Teka HMWE FS23 GC BK</p> <p>Manual de usuario completo para el horno microondas Teka modelo HMWE FS23 GC BK. Incluye instrucciones de seguridad, funcionamiento, limpieza y solución de problemas en varios idiomas.</p>
 <p>User Manual MW FS20 G BK ES PT DE FR SE</p>	<p>Manual de Usuario Teka MW FS20 G BK - Horno Microondas</p> <p>Descubra cómo operar de forma segura y eficiente su horno microondas Teka MW FS20 G BK. Este manual incluye instrucciones detalladas de uso, mantenimiento y seguridad.</p>