



Manuals.plus /

› ChatAngle /

› ChatAngle Black & Decker Vacuum Sealer VS200 Instruction Manual

ChatAngle VS200

ChatAngle Black & Decker Vacuum Sealer VS200 Instruction Manual

Model: VS200

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your ChatAngle Black & Decker Vacuum Sealer VS200. Please read thoroughly before operation and retain for future reference. Proper use of this appliance will help preserve food freshness and extend its shelf life.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- This appliance is for household use only.

PRODUCT OVERVIEW

The ChatAngle Black & Decker Vacuum Sealer VS200 is designed to remove air from specially designed bags or containers, creating an airtight seal to preserve food. This process helps to prevent freezer burn, reduce spoilage, and extend the freshness of various food items.



Image Description: This image displays two clear, cylindrical food storage containers with white vacuum-sealable lids. The top container is filled with fresh red strawberries, and the bottom container is filled with a colorful mix of chopped red, yellow, and green bell peppers. Both containers appear to be vacuum-sealed, demonstrating the product's capability to preserve various food items.

SETUP

1. **Unpack:** Carefully remove the vacuum sealer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper operation.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Vacuum Sealing Bags

1. **Prepare Bag:** Place the food item into a vacuum sealer bag, leaving at least 3 inches of space from the top edge of the bag. Ensure the open end of the bag is clean and dry.
2. **Position Bag:** Open the lid of the vacuum sealer. Place the open end of the bag flat into the vacuum channel, ensuring it is centered over the sealing strip.
3. **Close Lid:** Close the lid firmly until both sides click into place.
4. **Start Sealing:** Press the "Vacuum & Seal" button. The appliance will automatically remove air from the bag and then heat-seal it.
5. **Release:** Once the process is complete, the indicator light will turn off. Press the release buttons on both sides to open the lid and remove the sealed bag.

Sealing Only (without vacuum)

1. **Prepare Bag:** Place the item into a vacuum sealer bag.
2. **Position Bag:** Place the open end of the bag over the sealing strip, ensuring it does not enter the vacuum channel.
3. **Close Lid:** Close the lid firmly.
4. **Start Sealing:** Press the "Seal Only" button. The appliance will heat-seal the bag without removing air.
5. **Release:** Once complete, open the lid and remove the sealed bag.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your vacuum sealer.

- **Unplug:** Always unplug the appliance before cleaning.
- **Exterior:** Wipe the exterior of the appliance with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Vacuum Channel:** If food particles or liquids enter the vacuum channel, carefully wipe them clean with a damp cloth. Ensure it is completely dry before next use.
- **Sealing Strip:** Gently wipe the sealing strip with a dry cloth. Do not scratch or damage it.
- **Storage:** Store the appliance in a clean, dry place with the lid unlatched to prevent compression of the sealing gaskets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a working outlet.
Bag does not vacuum properly.	Bag not positioned correctly; bag opening is wet or wrinkled; lid not fully latched.	Reposition the bag; ensure the bag opening is dry and flat; press down firmly on the lid until it clicks.
Bag does not seal.	Sealing strip is dirty or damaged; bag is not heat-sealable.	Clean the sealing strip; ensure you are using appropriate vacuum sealer bags.
Vacuum is weak.	Gaskets are dirty or worn; vacuum channel is obstructed.	Clean the gaskets and vacuum channel; if gaskets are worn, contact customer support.

SPECIFICATIONS

Model: VS200

Brand: ChatAngle

ASIN: B010E1LRRY

Date First Available: February 10, 2023

(Additional specifications such as power, voltage, dimensions, etc., would typically be listed here if available.)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official ChatAngle website. Keep your purchase receipt as proof of purchase.

If you encounter issues not covered in the troubleshooting section, please contact ChatAngle customer service for assistance.

Note: Specific warranty terms and contact details may vary. Please consult your product packaging or the manufacturer's website for the most accurate and up-to-date information.