

Etekcity 679113376946

Etekcity Wireless Doorbell Instruction Manual

Model: 679113376946

[Instructions](#) [Introduction](#) [Maintenance](#) [Package Contents](#) [Troubleshooting](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Etekcity Wireless Doorbell. Please read this manual thoroughly before use to ensure proper function and longevity of the product. This wireless doorbell system includes a push button transmitter and two receivers: one AC-powered plug-in receiver and one battery-powered portable receiver. It features a wide operating range and multiple chime options.



Image: The Etekcity Wireless Doorbell system, showing the push button transmitter and two receiver units.

PACKAGE CONTENTS

- 1 x Wireless Push Button Transmitter
- 1 x AC-Powered Plug-in Receiver
- 1 x Battery-Powered Portable Receiver
- Mounting Hardware (screws, wall anchors, double-sided adhesive tape)
- User Manual



Image: An overview of the Etekcity Wireless Doorbell package, including the push button, plug-in receiver, and battery-powered receiver.

SETUP

1. Installing the Push Button Transmitter

1. **Open the Transmitter:** Carefully open the push button transmitter casing.
2. **Install Battery:** Insert the included 12V 23A alkaline battery into the transmitter, ensuring correct polarity.
3. **Mounting Options:**



Image: Illustration showing the AC-powered plug-in receiver being inserted into an outlet and the battery-powered receiver with AAA batteries.

3. Pairing (If Needed)

The doorbell system is typically pre-paired at the factory. If the transmitter and receiver(s) do not communicate, follow these steps to pair them:

1. Plug in the AC receiver or ensure the battery receiver has power.
2. Press and hold the volume button on the receiver for approximately 5 seconds until you hear a "ding" and the LED indicator flashes. This indicates pairing mode.
3. Within 5 seconds, press the push button transmitter. The receiver will chime, confirming successful pairing.
4. Repeat for any additional receivers.

OPERATING INSTRUCTIONS

1. Changing Chimes

The doorbell offers 52 different chime tunes. To change the chime:

- Press the "Music Switch" button on the side of the receiver to cycle through the available tunes.
- Stop pressing when you hear your desired chime. The receiver will remember this selection.



Image: Close-up of the plug-in receiver, highlighting the volume adjustment and music switch buttons on the side.

2. Adjusting Volume

The receiver has 4 adjustable volume levels. To adjust the volume:

- Press the "Volume Adjustment" button on the side of the receiver to cycle through the volume levels.
- Stop pressing when you reach your preferred volume.

3. LED Indicator

When the push button is pressed, the receiver will chime and its blue LED indicator will flash. This visual alert is beneficial for the hearing impaired or in noisy environments.



Image: The push button being pressed, activating the receiver which illuminates with a blue LED light, indicating an alert for visitors.

4. Wireless Range

The Etekcity Wireless Doorbell system offers a wireless range of up to 1000 feet (300 meters) in open areas. Actual range may vary depending on environmental factors such as walls, metal structures, and other wireless interference.

CE FC RoHS



Wireless range of up
to 1000 ft (300 m)

hear when your visitors
arrive from several
rooms away



Image: Diagram illustrating the wireless range of the doorbell system, showing signal transmission through multiple rooms and floors within a house.

MAINTENANCE

- **Cleaning:** Wipe the doorbell units with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement (Transmitter):** When the push button's LED indicator no longer lights up or the range decreases significantly, it's time to replace the 12V 23A battery.
- **Battery Replacement (Portable Receiver):** If the portable receiver stops working or its volume decreases, replace the 3 x AAA batteries.
- **Placement:** Ensure the push button is installed in a location protected from direct heavy rain or prolonged exposure to extreme weather conditions to maximize its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell does not ring.	◦ Low or dead battery in transmitter. ◦ Receiver not plugged in or no power (AC receiver). ◦ Low or dead batteries in portable receiver. ◦ Transmitter and receiver are not paired. ◦ Distance too far or interference.	◦ Replace transmitter battery. ◦ Ensure AC receiver is properly plugged in and outlet has power. ◦ Replace portable receiver batteries. ◦ Re-pair the transmitter and receiver(s) (refer to "Pairing" section). ◦ Move receiver closer to transmitter or relocate to avoid interference.
Short operating range.	◦ Low battery in transmitter. ◦ Obstructions or interference (metal, thick walls).	◦ Replace transmitter battery. ◦ Relocate receiver or transmitter to minimize obstructions.
Receiver rings randomly.	◦ Interference from other wireless devices. ◦ Another doorbell system nearby using the same frequency.	◦ Re-pair the transmitter and receiver(s) to reset the code. ◦ Try changing the chime tune, which may also change the internal code.

SPECIFICATIONS

Feature	Detail
Model Number	679113376946
Wireless Range	Up to 1000 ft (300 m) in open air
Chime Tunes	52 selectable tunes
Volume Levels	4 levels
Transmitter Battery	1 x 12V 23A Alkaline Battery (included)
Portable Receiver Battery	3 x AAA Batteries (not included)
AC Receiver Power	Plug-in (standard wall outlet)
Operating Frequency	433.92 MHz
Dimensions (Receiver)	Approx. 3.3in (8.5cm) H x 3.1in (8cm) W x 1.6in (4cm) D
Dimensions (Transmitter)	Approx. 2.8in (7cm) H x 1.6in (4cm) W
Weight	Approx. 10.4 ounces (total package)



Image: Diagram showing the approximate dimensions of both the receiver and the push button transmitter in inches and centimeters.

WARRANTY & SUPPORT

Etekcity products come with a standard warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Etekcity website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Etekcity Customer Support.

Etekcity Customer Support:

- **Website:** www.etekcity.com
- **Email:** Refer to website for contact information.
- **Phone:** Refer to website for contact information.

Please have your model number (679113376946) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question