

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Basic Fun](#) /

› [Fisher-Price Retro Cash Register Instruction Manual](#)

### Basic Fun 02073

# Fisher-Price Retro Cash Register Instruction Manual

Model: 02073 | Brand: Basic Fun

## INTRODUCTION

Welcome to the timeless world of imaginative play with your new Fisher-Price Retro Cash Register. Inspired by the classic 1975 design, this durable toy provides hours of engaging fun while helping children develop essential skills.

This manual provides detailed instructions for setting up, operating, and maintaining your cash register to ensure a long-lasting and enjoyable play experience.

## WHAT'S INCLUDED

- Fisher-Price Retro Cash Register Unit
- 6 Plastic Play Coins (Red, Green, Blue - 2 of each)



Image: The Fisher-Price Retro Cash Register with its colorful play coins.

## SETUP

The Fisher-Price Retro Cash Register requires no assembly or batteries. It is ready for play directly out of the box.

1. Remove the cash register and all play coins from the packaging.
2. Ensure all packaging materials are safely discarded.
3. Place the cash register on a flat, stable surface.

## Cash Register

This Cash Register was inspired by the 1975 Fisher-Price™ Cash Register that was an instant classic toy hit. Kids will love the real cash register play! The Cash Register comes with different brightly colored coins that will teach children how to count and recognize colors. Watch the coins come down the ramp, turn the crank to hear the bell ring and watch the drawer open! The Fisher Price Cash Register will create hours of play for a new generation.

## Cash Register

Cette nouvelle caisse enregistreuse a été inspirée par la caisse enregistreuse Fisher-Price™ de 1975, un succès instantané dans le domaine du jouet. Les enfants vont adorer jouer avec cette vraie caisse enregistreuse ! La caisse enregistreuse est fournie avec différentes pièces de monnaie aux couleurs vives qui apprendront aux enfants à compter et à reconnaître les couleurs. Regarde les pièces descendre la rampe, tourne la manivelle pour entendre la cloche sonner et regarde le tiroir s'ouvrir ! La caisse enregistreuse de Fisher Price procurera des heures de jeu à une nouvelle génération d'enfants.

## Cash Register

Esta caja registradora está inspirada en la caja registradora Fisher-Price™ de 1975 que se convirtió en un juguete clásico al instante. ¡A los niños les encantará jugar con la caja registradora de verdad! La caja registradora viene con monedas de vivos colores distintos que le enseñarán al niño a contar y a reconocer los colores. ¡Mira cómo bajan las monedas por la rampa, gira la manivela para escuchar el sonido de la campana y mira cómo se abre el cajón! La caja registradora de Fisher Price creará horas de juego para la nueva generación.

Put coins in correct slot, press & watch change come down ramp!  
Mets les pièces dans le bon emplacement, appuie et regarde les pièces descendre la rampe !  
¡Coloca las monedas en la ranura correcta, presiona y mira cómo baja el cambio por la rampa!

Turn crank & ring bell  
Tourne la manivelle et tire la cloche !  
Gira la manivela y la campana sonará !



Manufactured for and distributed by: Basic Fun, Inc. Boca Raton, Florida 33431, USA. Other toys available. Each sold separately and subject to availability. Color and decorations may vary from those shown.  
Fabriqué pour et distribué par : Basic Fun, Inc. Boca Raton, Florida 33431, USA. Autres jouets disponibles. Éléments vendus séparément, selon disponibilité. Les couleurs et les décorations peuvent varier de ceux représentés sur les illustrations.  
Fabricado y distribuido por: Basic Fun, Inc. Boca Raton, Florida 33431, USA. Otros juguetes disponibles. Vendidos por separado dependiendo de disponibilidad. Los colores y decoración pueden ser diferentes de los ilustrados.

Image: The cash register as it appears in its retail box, ready for unboxing.

## OPERATING INSTRUCTIONS

### Inserting Play Coins

The cash register comes with six brightly colored plastic coins. Each coin is designed to fit into a specific slot based on its color and value (5, 10, or 25).

1. Identify the coin's color and corresponding value (e.g., Red for 5, Green for 10, Blue for 25).
2. Locate the matching slot at the top of the cash register.
3. Insert the coin into its designated slot. Press down firmly on the coin to make it disappear into the register.



Image: A detailed view of the coin slots on the cash register, showing the different colors and values.

Video: Official product overview video demonstrating the key features and functions of the Fisher-Price Retro Cash Register, including coin insertion, drawer operation, and button interactions.

## Operating the Cash Drawer

The cash register features a working cash drawer that opens with a classic "ding" sound.

1. To open the cash drawer, turn the green crank located on the right side of the register. This action will produce a bell sound and cause the drawer to spring open, revealing the stored coins.
2. To close the cash drawer, simply push the drawer back into the unit until it clicks securely into place.



Image: A child enthusiastically turning the green crank on the side of the cash register to open the drawer.

## "Change" and "Sale" Buttons

The cash register includes two special buttons: "Change" and "Sale."

### "Change" Button

Pressing the red "Change" button (located near the crank) will cause a coin to slide out from the side chute of the cash register. This simulates giving change to a customer.

### "Sale" Button

Pressing the green "Sale" button (located above the "Change" button) will cause all coins currently in the top slots to drop down into the cash drawer. This simulates completing a transaction.



Image: A child pressing the colorful buttons on the cash register, demonstrating the interactive features.

## CARE & MAINTENANCE

To ensure the longevity of your Fisher-Price Retro Cash Register, follow these simple care instructions:

- **Cleaning:** Wipe the cash register and play coins with a damp cloth and mild soap. Do not immerse the unit in water.
- **Storage:** Store the toy in a dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the cash register or applying excessive force to its moving parts to prevent damage.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Coins not dropping into slots.	Ensure the correct coin is being inserted into its matching slot. The coins are designed to only fit their designated openings.
Cash drawer not opening.	Make sure the green crank is turned fully. If coins are jammed, gently shake the unit or try to dislodge them.
Coins not coming out of the side chute.	Ensure there are coins inside the register. Press the red "Change" button firmly.

## SPECIFICATIONS

- Model Number:** 02073
- Product Dimensions:** 7.7 x 10.25 x 7.75 inches
- Item Weight:** 2.03 pounds
- Recommended Age:** 24 months - 15 years
- Material:** Durable Plastic
- Country of Origin:** China

## WARRANTY & SUPPORT

Basic Fun stands behind the quality of its products. For warranty information, product support, or to inquire about replacement parts, please visit the official Basic Fun website or contact their customer service department.

**Basic Fun Official Website:** [www.basicfun.com](http://www.basicfun.com)

**Customer Service:** Refer to the product packaging or Basic Fun's website for the most current contact information.

© 2025 Basic Fun. All rights reserved. Fisher-Price and associated trademarks are owned by and used under license from Mattel.