

TAG Heuer CAZ1111.BA0878

User Manual for TAG Heuer Formula 1 Chronograph Watch

Model: CAZ1111.BA0878

INTRODUCTION

Welcome to the user manual for your new TAG Heuer Formula 1 Stainless Steel and Ceramic Chronograph Watch, Model CAZ1111.BA0878. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your timepiece. Designed for precision and durability, this Swiss quartz movement watch features a brushed grey dial, chronograph subdials, and a fixed tachymeter bezel, encased in 42mm stainless steel with a synthetic-sapphire dial window.



Figure 1: Front view of the TAG Heuer Formula 1 Chronograph Watch.

SETUP

Setting Time and Date

- Unscrew the Crown:** If your watch has a screw-down crown, gently unscrew it counter-clockwise until it pops out to position 0.
- Pull Crown to Position 2 (Date Setting):** Gently pull the crown out to the first click (Position 2). Turn the crown clockwise or counter-clockwise to set the date.
- Pull Crown to Position 3 (Time Setting):** Pull the crown out to the second click (Position 3). The second hand will stop. Turn the crown to set the hour and minute hands. To ensure accurate time setting, synchronize with a reliable time source.
- Push and Screw Down Crown:** Once the time and date are set, push the crown back into Position 0. If it's a screw-down crown, gently push and screw it clockwise until it is securely tightened against the case to maintain water resistance.

Bracelet Adjustment

The stainless steel bracelet with ceramic center links is designed for comfort. For proper fit, the bracelet may need to be adjusted by adding or removing links. It is highly recommended that bracelet adjustments be performed by an

authorized TAG Heuer service center or a professional jeweler to prevent damage to the links or clasp.



Figure 2: The watch worn on a wrist, demonstrating its size and fit.

OPERATING INSTRUCTIONS

Chronograph Functions

Your watch features a chronograph, allowing you to measure elapsed time. The chronograph is operated using the pushers located on the side of the watch case.

- **Start/Stop:** Press the top pusher (usually at 2 o'clock) to start the chronograph. Press it again to stop the measurement.
- **Reset:** After stopping the chronograph, press the bottom pusher (usually at 4 o'clock) to reset all chronograph hands to their zero positions.
- **Reading the Chronograph:** The chronograph typically uses three subdials: a small seconds hand for the main time, a 30-minute counter, and a 12-hour counter. Refer to the specific dial markings for precise readings.

Tachymeter Scale

The fixed bezel features a tachymeter scale, which can be used in conjunction with the chronograph to measure speed over a known distance (e.g., 1 kilometer or 1 mile).

1. Start the chronograph at the beginning of the measured distance.
2. Stop the chronograph at the end of the measured distance.
3. The number on the tachymeter scale corresponding to the position of the chronograph second hand indicates the speed in units per hour (e.g., km/h or mph).

Water Resistance

This watch is water resistant to 200 meters (660 feet). This rating makes it suitable for professional marine activity and serious surface water sports. It is **not** suitable for scuba diving. Always ensure the crown is fully screwed down (if applicable) before exposing the watch to water. Avoid operating the pushers or crown while the watch is wet or submerged.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, clean it regularly with a soft, damp cloth. For the stainless steel and ceramic bracelet, a soft brush with mild soapy water can be used, followed by rinsing with clean water and drying thoroughly. Ensure the crown is securely closed before cleaning with water.

Battery Replacement

Your watch is powered by a Swiss quartz movement and requires one product-specific battery (included). When the battery needs replacement, it is strongly recommended to have this service performed by an authorized TAG Heuer service center. This ensures proper battery installation, resealing of the case back, and re-testing of water resistance to maintain the watch's integrity.

General Care

- Avoid exposing your watch to extreme temperatures or sudden temperature changes.

- Keep your watch away from strong magnetic fields, which can affect the accuracy of the quartz movement.
- Protect your watch from impacts and shocks.
- If your watch has been exposed to saltwater, rinse it thoroughly with fresh water and dry it with a soft cloth.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch not running or running intermittently.	Depleted battery.	Replace battery at an authorized service center.
Chronograph hands do not reset to zero.	Needs calibration or internal issue.	Consult the full technical manual or an authorized service center for calibration instructions. If issue persists, seek professional service.
Condensation under the crystal.	Loss of water resistance or exposure to extreme temperature changes.	Immediately take the watch to an authorized service center to prevent internal damage.

For issues not listed here or if solutions do not resolve the problem, please contact an authorized TAG Heuer service center.

SPECIFICATIONS

Feature	Detail
Model Number	CAZ1111.BA0878
Movement Type	Swiss Quartz
Case Diameter	42 Millimetres
Case Material	Stainless Steel
Dial Window Material	Synthetic-Sapphire
Band Material Type	Stainless Steel with Ceramic Center Links
Band Colour	Two Tone
Water Resistance Depth	200 Meters (660 Feet)
Item Weight	449 g (0.99 Pounds)
Batteries	1 Product Specific battery (included)
Package Dimensions	15.24 x 14.99 x 11.43 cm



Figure 3: Watch case diameter comparison chart for reference.

WARRANTY AND SUPPORT

Your TAG Heuer watch comes with a manufacturer's warranty. The warranty type is "Contact seller of record". For specific warranty terms, conditions, and duration, please refer to the documentation provided at the time of purchase or contact the seller directly.

For service, repairs, or any technical assistance, it is highly recommended to contact an authorized TAG Heuer service center. Using unauthorized service providers may void your warranty and could compromise the integrity and performance of your watch.



Figure 4: The watch packaging, typically containing warranty information.