

[manuals.plus](#) /

› [Boogie Board](#) /
› [Boogie Board Jot Pocket 4.5-inch LCD Writing Tablet User Manual](#)

Boogie Board Jot Pocket

Boogie Board Jot Pocket 4.5-inch LCD Writing Tablet User Manual

Model: Jot Pocket (JF1020002)

1. INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Boogie Board Jot Pocket 4.5-inch LCD Writing Tablet. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

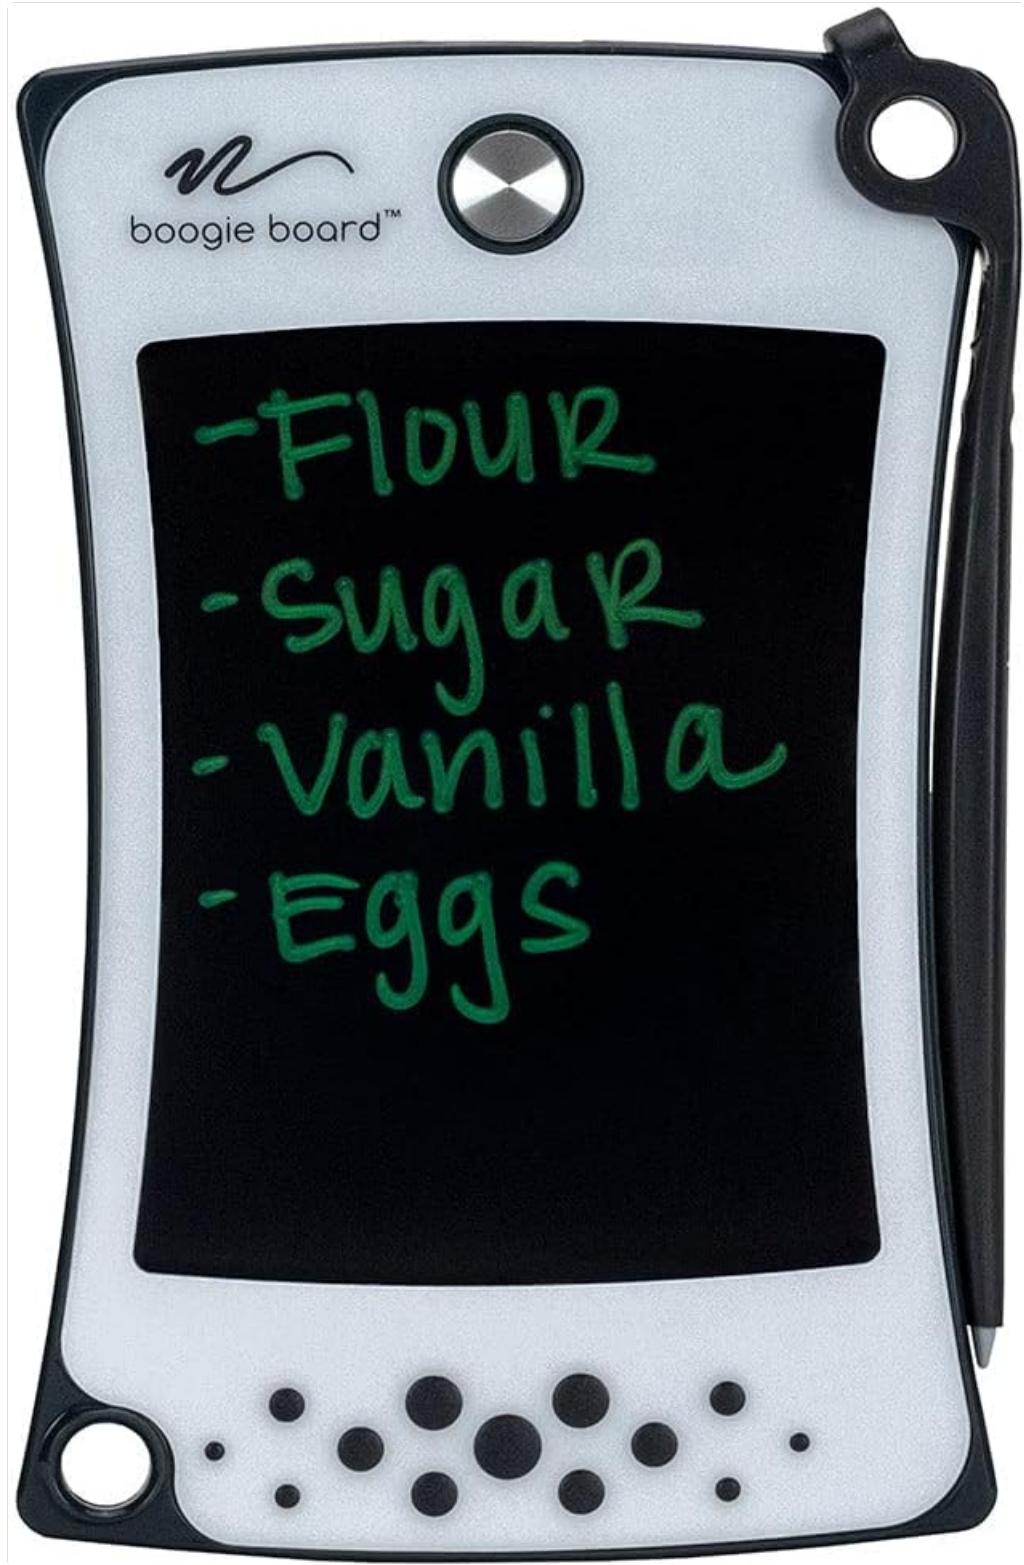


Image 1.1: The Boogie Board Jot Pocket Writing Tablet, showing a handwritten list of ingredients.

2. PRODUCT OVERVIEW

The Boogie Board Jot Pocket is a compact, reusable writing tablet designed for quick notes, lists, and sketches. It features a 4.5-inch LCD screen and instant erase technology, allowing for paperless writing.

2.1 Package Contents

- 1 x Boogie Board Jot Pocket 4.5-inch LCD Writing Tablet (Gray)
- 1 x Stylus Pen

2.2 Key Features

- 4.5-inch LCD writing surface
- Instant erase button
- Integrated stylus holder
- Built-in kickstand for upright display
- Portable and lightweight design

3. SETUP

The Boogie Board Jot Pocket requires minimal setup before first use.

3.1 Initial Use

1. Remove the tablet and stylus from the packaging.
2. The tablet is ready for immediate use. No charging or battery installation is typically required for initial operation as it comes with a pre-installed battery.

3.2 Stylus Placement

The stylus can be docked securely into either of the two designated corners on the tablet for convenient storage and transport.



Image 3.1: The tablet highlighting the 'Push to Clear' button and the option to 'Dock Stylus on Either Corner'.

4. OPERATING INSTRUCTIONS

4.1 Writing and Drawing

Use the included stylus to write or draw directly on the 4.5-inch LCD screen. The pressure-sensitive surface allows for varying line thickness. You can also use other non-abrasive objects, such as a fingernail, to write on the screen.

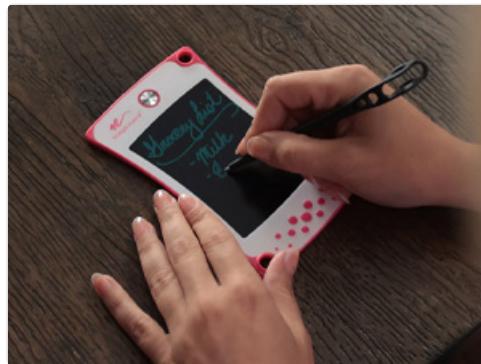


Image 4.1: A user writing on the tablet with the stylus, demonstrating the writing functionality.

4.2 Erasing Content

To clear the screen, press the circular button located at the top center of the tablet. This will instantly erase all content on the display.

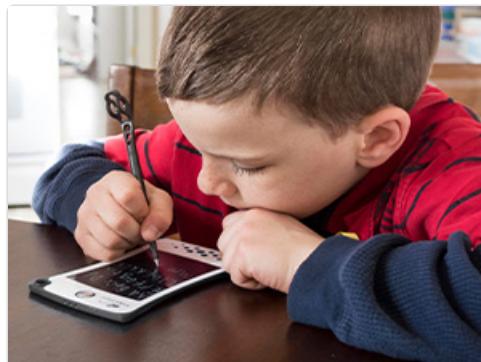


Image 4.2: A finger pressing the erase button to clear the screen.

4.3 Using the Kickstand

The built-in kickstand allows you to prop the tablet upright for easy viewing. This is useful for displaying notes or reminders on a desk or counter.

Prop with Stylus



Image 4.3: The Boogie Board Jot Pocket being stored in a bag, illustrating its portable design.

5. MAINTENANCE

5.1 Cleaning

To clean the tablet, gently wipe the screen and body with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the screen or internal components.

5.2 Battery Information

The Boogie Board Jot Pocket is powered by one CR5 battery. The battery is primarily used only when the erase button is pressed. Under normal usage conditions, the battery is designed to last for at least five years. The battery is not user-replaceable. If the erase function ceases to work, it indicates the battery has depleted.

6. TROUBLESHOOTING

6.1 Screen Does Not Clear

If the screen does not clear when the erase button is pressed, the internal battery may be depleted. As the

battery is not user-replaceable, the device has reached the end of its operational life.

6.2 Writing Appears Dim

The visibility of the writing on the LCD screen can vary depending on ambient lighting conditions. For optimal visibility, use the tablet in well-lit environments. The display is designed to be reflective and does not emit its own light.

6.3 Stylus Lost or Damaged

If the original stylus is lost or damaged, any non-abrasive object can be used to write on the screen. Replacement styluses may be available from the manufacturer's website.

7. SPECIFICATIONS

Feature	Detail
Brand	Boogie Board
Model Name	Jot Pocket
Item Model Number	JF1020002
Product Dimensions	7.7 x 5 x 0.4 inches
Item Weight	2.08 ounces
Visible Screen Diagonal	4.5 inches / 12 cm
Batteries	1 CR5 battery (non-replaceable)
Special Feature	Stylus Pen



Image 7.1: Diagram illustrating the physical dimensions of the Boogie Board Jot Pocket.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Specific warranty details for the Boogie Board Jot Pocket are not provided in this manual. Please refer to the manufacturer's official website or contact their customer service for current warranty terms and conditions.

8.2 Customer Support

For further assistance, technical support, or to inquire about replacement parts, please visit the official Boogie Board website or contact their customer support department. Contact information can typically be found on the manufacturer's website.

