

Boogie Board J31020001

Boogie Board Jot 8.5" LCD Writing Tablet User Manual

Model: J31020001

Brand: Boogie Board

1. INTRODUCTION

The Boogie Board Jot 8.5" LCD Writing Tablet provides a paperless solution for writing, drawing, and taking notes. Its pressure-sensitive LCD screen allows for a natural writing experience, and content can be instantly erased with the touch of a button. This manual provides instructions for setting up, operating, and maintaining your device.

What's Included

- Boogie Board Jot 8.5" LCD eWriter (Gray)
- Stylus Pen



Image: The Boogie Board Jot 8.5" LCD Writing Tablet, gray model, with a sample handwritten list on its screen.

2. SETUP

The Boogie Board Jot is designed for immediate use. No complex setup is required.

Stylus Pen

The included stylus pen is stored in a slot at the bottom of the tablet. Gently slide it out for use. The stylus can also function as a kickstand for the tablet.


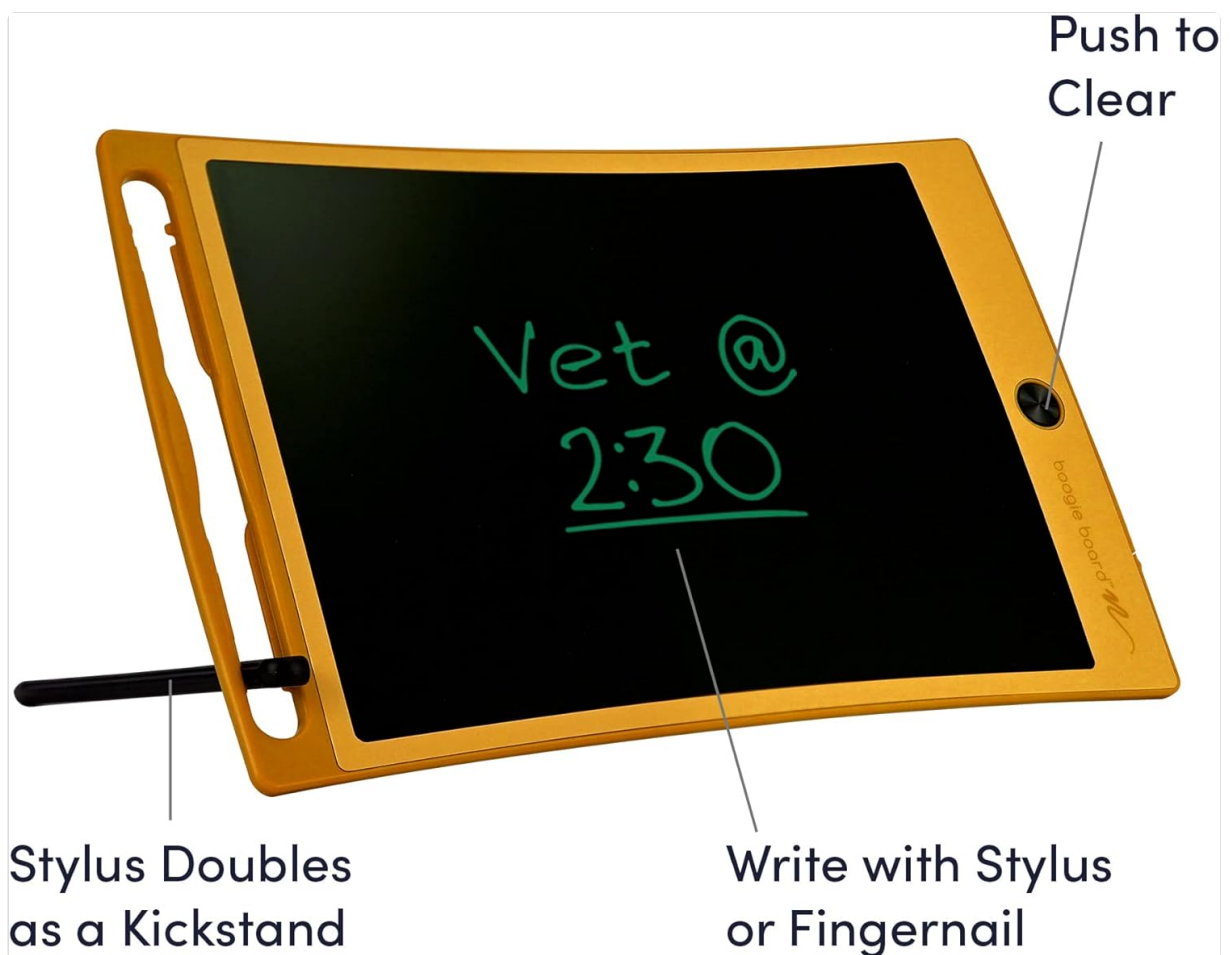


Image: A Boogie Board Jot tablet demonstrating the stylus pen functioning as a kickstand, with annotations pointing to the clear button and writing area.

Magnetic Mounting

The tablet features built-in magnets on the back, allowing it to be easily attached to magnetic surfaces such as refrigerators or whiteboards.

Great for your desk

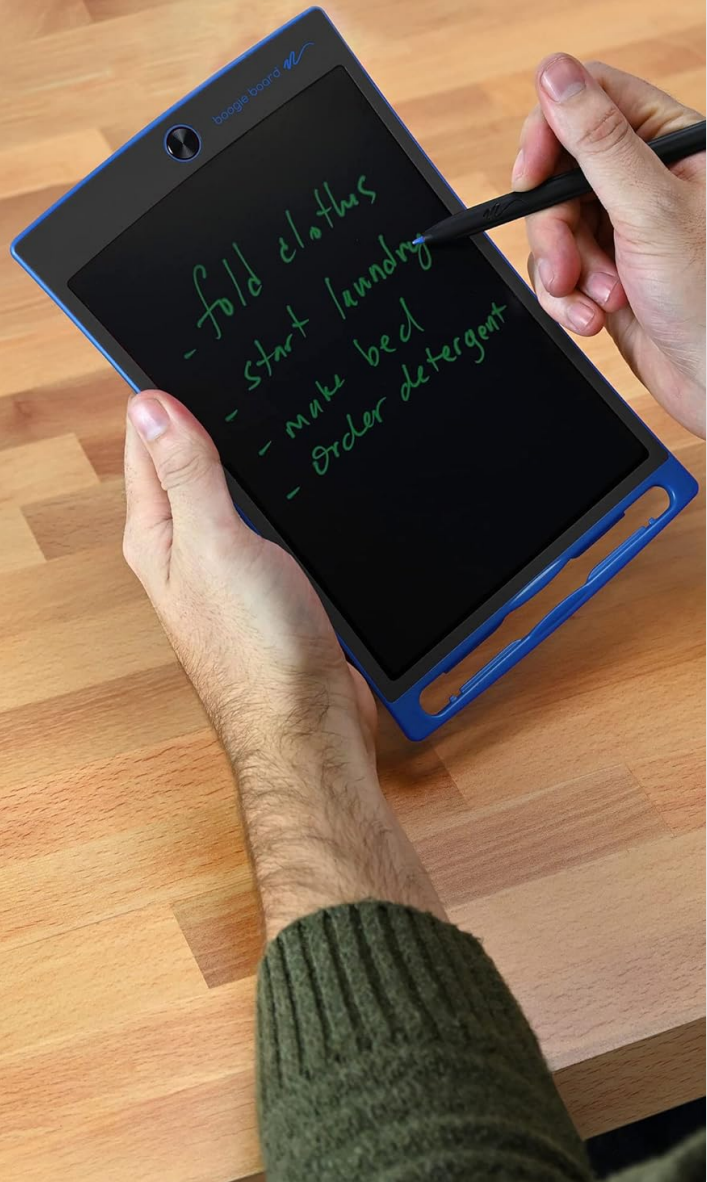

Magnetic

Image: Demonstrates the Boogie Board Jot being used on a desk and magnetically attached to a refrigerator.

3. OPERATING INSTRUCTIONS

Writing and Drawing

Use the included stylus pen or your fingernail to write or draw directly on the LCD screen. The pressure-sensitive surface will display your input in a clear, green line.



Inspire organized living
with the creative freedom
to write and draw in all
areas of your home.

Enhance Every
Mode of Your Life

boogie board® 

Image: A user actively writing on the Boogie Board Jot tablet with the stylus.



Image: An overhead view of a person writing on the Boogie Board Jot tablet, demonstrating its use for lists.

Erasing Content

To clear the screen, press the circular button located at the top center of the tablet. All content on the screen will instantly disappear.



Image: The Boogie Board Jot tablet displaying a handwritten list, with the stylus pen shown separately, indicating it can be removed for use.

4. MAINTENANCE

Cleaning

To clean the screen, use a soft, lint-free cloth. If necessary, dampen the cloth slightly with water. Avoid using abrasive cleaners or solvents, as these may damage the screen.

Battery Replacement

The Boogie Board Jot uses a CR123A battery. When the erase function no longer works, it indicates the battery needs replacement. The battery compartment is typically located on the back of the device. Use a small screwdriver to open the compartment, replace the battery, and secure the cover.

Caution: Ensure proper battery polarity when replacing. Dispose of old batteries responsibly.

5. TROUBLESHOOTING

- **Screen does not clear:**
 - Check if the erase button is fully pressed.
 - The battery may be low or depleted. Replace the CR123A battery.
- **Writing is faint or inconsistent:**
 - Ensure you are using the stylus pen or a fingernail. Other objects may not provide sufficient pressure or could damage the screen.
 - The screen may be dirty. Clean it with a soft, lint-free cloth.
- **Stylus does not fit in storage slot:**
 - Ensure the stylus is oriented correctly.

6. SPECIFICATIONS

Feature	Detail
Model Number	J31020001
Screen Size	8.5 Inches
Screen Resolution	1024x600
Dimensions (LxWxH)	10.8 x 6.8 x 0.6 inches
Item Weight	3.98 ounces
Color	Gray
Battery Type	1 CR123A battery (included)
Material	Other (Liquid Crystal Display)



Image: Diagram showing the physical dimensions of the Boogie Board Jot tablet.

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Boogie Board website or contact their customer service directly. The product is designed and developed in the USA.

Official Website: www.myboogieboard.com

For additional resources, you may also refer to the [User Guide \(PDF\)](#) provided by the manufacturer.

