

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mainstay](#) /

› [Mainstays 72" Combo Floor Lamp Instruction Manual](#)

Mainstay HW-F0378-BK

Mainstays 72" Combo Floor Lamp Instruction Manual

1. INTRODUCTION

Thank you for purchasing the Mainstays 72" Combo Floor Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new lamp. Please read these instructions thoroughly before use and retain them for future reference.

The Mainstays Combo Floor Lamp offers versatile lighting with two distinct light sources. The main light features a three-way rotary switch, allowing for adjustable light intensity. An additional reading lamp is included, equipped with its own on/off switch for focused illumination.

2. SAFETY INFORMATION

- Always unplug the lamp from the electrical outlet before cleaning, changing bulbs, or performing any maintenance.
- Do not use bulbs exceeding the specified wattage (100W for the main light, 60W for the reading light).
- Ensure all connections are secure before plugging in the lamp.
- Place the lamp on a stable, level surface to prevent tipping.
- Keep the lamp away from water or other liquids.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact a qualified electrician for repair or replacement.
- This lamp is intended for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Base
- Pole Sections (typically 3-4 sections)
- Main Lamp Head with Shade
- Reading Lamp Arm with Shade
- Power Cord (pre-attached)

Note: Light bulbs are **not included** and must be purchased separately. The main light requires a 100-watt bulb, and the reading light requires a 60-watt bulb.

4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Mainstays Combo Floor Lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Attach Base:** Screw the lowest pole section securely into the lamp base. Ensure it is tightened firmly to provide stability.
3. **Assemble Pole:** Connect the remaining pole sections by screwing them together clockwise. Gently pull any excess cord through the base as you assemble.
4. **Attach Lamp Heads:** Screw the main lamp head onto the top pole section. Attach the reading lamp arm to its designated connection point on the main pole, ensuring it is secure.
5. **Install Bulbs:** Insert one 100-watt bulb into the main lamp socket and one 60-watt bulb into the reading lamp socket. Do not overtighten.
6. **Position Lamp:** Place the assembled lamp in your desired location, ensuring the power cord can reach an outlet without being stretched or obstructed.
7. **Plug In:** Insert the power plug into a standard electrical outlet.





This image displays the fully assembled Mainstays 72-inch Combo Floor Lamp. It features a tall black metal pole with a wide, upward-facing white plastic shade at the top for ambient lighting. Below the main light, an adjustable arm extends, holding a smaller, downward-facing white plastic shade for task lighting. The lamp has a stable round black base.

5. OPERATING INSTRUCTIONS

- **Main Light Operation:** The main light is controlled by a three-way rotary switch located on the lamp head. Turn the switch clockwise to cycle through low, medium, high, and off settings.
- **Reading Light Operation:** The reading light has its own dedicated on/off switch, typically located on the reading lamp arm or near its base. Activate this switch to turn the reading light on or off independently.

6. MAINTENANCE

- **Cleaning:** Unplug the lamp before cleaning. Use a soft, dry cloth to wipe down the lamp pole and base. For the shades, a slightly damp cloth can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulbs have cooled completely before attempting to replace them. Unscrew the old bulb and screw in a new bulb of the correct wattage and type (E26 base, A19 shape recommended).
- **Cord Inspection:** Periodically inspect the power cord for any signs of damage, fraying, or overheating. If damage is found, discontinue use and seek professional repair.

7. TROUBLESHOOTING

- **Lamp Does Not Turn On:**

- Check if the lamp is securely plugged into a working electrical outlet.
- Verify that the light bulb(s) are screwed in tightly and are not burnt out. Replace if necessary.
- Ensure the wall switch (if applicable) or the lamp's rotary/on/off switch is in the 'on' position.

- **Light Flickers:**

- Tighten the light bulb(s) in their sockets.
- Try a different bulb to rule out a faulty bulb.
- Check for loose connections in the lamp's wiring (if accessible and safe to do so, otherwise consult a professional).

- **Lamp is Unstable:**

- Ensure all pole sections are tightly screwed together and the base is firmly attached.
- Place the lamp on a flat, even surface.

8. SPECIFICATIONS

Feature	Specification
Model Number	HW-F0378-BK
Brand	Mainstay
Height	72 inches
Color	Black
Finish Type	Black Finish
Base Material	Metal
Shade Material	Plastic
Shade Color	White
Main Light Wattage	Max 100 Watts
Reading Light Wattage	Max 60 Watts
Bulb Base	E26
Switch Type (Main)	3-Way Rotary
Switch Type (Reading)	On/Off
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
Item Weight	8.11 pounds
UPC	715877327364

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.