

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Yato](#) /
- › [Yato YT-0638 Track Bearing and Seal Driver Set 10pcs User Manual](#)

Yato YT-0638

Yato YT-0638 Track Bearing and Seal Driver Set User Manual

MODEL: YT-0638

Introduction

This manual provides comprehensive instructions for the safe and effective use of the Yato YT-0638 Track Bearing and Seal Driver Set. Designed for professional use in mechanic service shops, this 10-piece set is essential for the proper installation of seals, simerings, and bearings into their respective seats. Adhering to these guidelines will ensure optimal performance and longevity of the tool set.

Product Overview

The Yato YT-0638 set includes a handle and nine different sized disks, all crafted from durable aluminium. These components are organized within a robust blow-moulded case for convenient storage and transport.



Figure 1: The Yato YT-0638 Track Bearing and Seal Driver Set, neatly arranged in its protective blow-moulded case. The set includes a

Setup

1. **Unpack the Set:** Carefully remove all components from the blow-moulded case.
2. **Inspect Components:** Before each use, inspect the handle and all driver disks for any signs of damage, wear, or deformation. Do not use damaged tools.
3. **Select Correct Disk:** Identify the appropriate driver disk that matches the outer diameter of the bearing or seal you intend to install. The disks are designed with a cone profile to fit simerings and match the external ring diameter of bearings.
4. **Attach Disk to Handle:** Securely thread the selected driver disk onto the end of the handle. Ensure it is tightened firmly to prevent wobbling during use.

Operating Instructions

Follow these steps for effective and safe operation:

1. **Prepare the Workpiece:** Ensure the bearing or seal seat is clean, free of debris, and properly lubricated if required by the manufacturer of the bearing/seal.
2. **Position the Bearing/Seal:** Carefully place the bearing or seal into its designated seat, ensuring it is as level as possible before driving.
3. **Apply the Driver:** Place the assembled driver (handle with selected disk) squarely onto the bearing or seal. Ensure the disk makes even contact with the outer race of the bearing or the outer edge of the seal.
4. **Drive the Component:** Using a mallet or soft-faced hammer, gently and evenly tap the end of the driver handle. Apply consistent force, ensuring the bearing or seal is driven straight into its seat. Avoid excessive force or striking at an angle, which can damage the component or the seat.
5. **Check for Proper Seating:** Continue tapping until the bearing or seal is fully seated. Verify that it is flush and properly aligned within its housing. The design of the disks helps prevent wedging and damage to the surface of the components during installation.
6. **Remove the Tool:** Once the component is seated, carefully remove the driver tool.

Maintenance

- **Cleaning:** After each use, wipe down all components with a clean, dry cloth to remove any grease, dirt, or debris. For stubborn grime, a mild degreaser can be used, followed by thorough drying.
- **Storage:** Store the Yato YT-0638 set in its original blow-moulded case in a dry, clean environment. This protects the tools from corrosion, physical damage, and loss.
- **Inspection:** Periodically inspect the threads on the handle and disks for wear. Ensure the knurling on the handle remains intact for a secure grip.

Troubleshooting

This section addresses common issues that may arise during the use of the bearing and seal driver set.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bearing/Seal not seating evenly.	Incorrect disk size; uneven striking force; debris in seat.	Ensure correct disk size is used. Apply even, gentle taps. Clean the seat thoroughly before installation.
Disk becoming loose from handle.	Disk not tightened sufficiently; worn threads.	Ensure disk is securely threaded and tightened before use. If threads are worn, replace the affected component.
Difficulty removing driver after installation.	Component driven too tightly; slight misalignment.	Gently wiggle the handle while pulling. Ensure components are driven only until fully seated, not over-driven.

Specifications

Attribute	Detail
Brand	Yato
Model Number	YT-0638
Material	Aluminium
Number of Pieces	10 (1 handle, 9 disks)
Disk Diameters	40, 44, 50, 59, 63, 65, 72, 76, 81 mm
Handle Length	150 mm
Item Weight	1 kg

Warranty Information

Yato products are manufactured to high quality standards. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Yato customer support. Keep your proof of purchase for any warranty claims.

Customer Support

Should you require assistance, have questions regarding the use of this product, or need to report an issue, please contact Yato customer support through their official website or the contact information provided with your product packaging. When contacting support, please have your model number (YT-0638) and purchase details ready.



[pdf]

Ficha técnica de productos yt 0638 juego conductores ani carbone data shopify |||

YATO - HERRAMIENTAS AUTOMOTRIZ FICHA TCNICA Yato Juego De Conductores Anillo Y Sello De Rodamiento. ... De Conductores De Anillo Y Sello De Rodamiento, Conductores De Anillo, Sello De Rodamiento CDIGO: **YT-0638** Codigo de producto: **YT-0638** Peso Kg : 1.8 Kg Marca: YATO Tipo: Herramientas Extracción y Re...

lang:es score:31 filesize: 142.82 K page_count: 1 document date: 0000-00-00



[pdf] Catalog

KATALOG YATO 2021 PIM indb Cataloage MagazinulCuScul.roCatalog Yato 2021magazinulcuscul.ro sites magazinulcuscul.ro files catalog Catalog |||

2021 www.MagazinulCuScul.ro ZNAJD NAS TUTAJ: FIND US HERE:

linkedin.com/company/toya-s-ainstagram ... guarnizioni ES Jugeo de conductores del anillo y del sello de rodadura ZH 12/48 YT-08431 12/48 **YT-0638** 5/10 16 EN Bearing race and seal driver set PL Zestaw do osadzania loysk i uszczelniaczy ...

lang:en score:13 filesize: 206.57 M page_count: 652 document date: 2021-08-30




[pdf] Accessories Catalog

Cataloage MagazinulCuScul.roCatalog Yato 2020magazinulcuscul.ro sites magazinulcuscul.ro files catalog 2020 Catalog |||

2020 www.MagazinulCuScul.ro 1 SPANNERS / KLUCZE www.yato.com 6-19 2 SOCKETS, ACCESSORIES SETS ... mm 123.9 10 YT-0642 L mm 200 SLIDING CARD 12/48 BMC COLOR SLEEVE No. 01 02 03 04 **YT-0638** 05 06 07 08 09 mm 40 44 50 59 63 5/10 65 72 76 81 352 www.MagazinulCuScul.ro

lang:en score:12 filesize: 150.32 M page_count: 578 document date: 2020-11-24

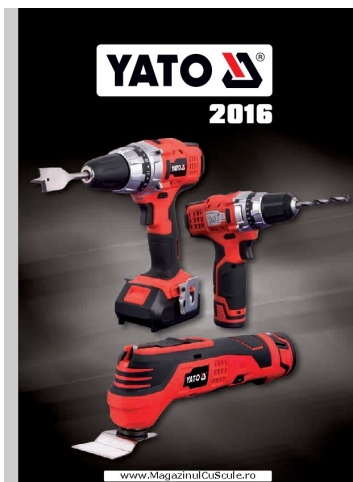

[\[pdf\]](#) Accessories Catalog

Cataloage MagazinulCuScul.roCatalog Yato 2016magazinulcuscul.ro sites magazinulcuscul.ro files catalog 2016 Catalog |||

2016 www.MagazinulCuScul.ro 1 SPANNERS / KLUCZE www.yato.com 4-19 2 SOCKETS, ACCESSORIES SETS ... mm 123.9 10 YT-0642 L mm 200 SLIDING CARD 12/48 BMC COLOR SLEEVE No. 01 02 03 04 **YT-0638** 05 06 07 08 09 mm 40 44 50 59 63 5/10 65 72 76 81 322 www.MagazinulCuScul.ro

lang:en score:11 filesize: 160.78 M page_count: 490 document date: 2016-03-15



[\[pdf\]](#) Accessories Catalog

Cataloage MagazinulCuScul.roCatalog Yato 2018magazinulcuscul.ro sites magazinulcuscul.ro files catalog 2018 Catalog |||

2018 www.MagazinulCuScul.ro 1 SPANNERS / KLUCZE 2 SOCKETS, ACCESSORIES SETS / KLUCZE NASADOWE, ... mm 123.9 10 YT-0642 L mm 200 SLIDING CARD 12/48 BMC COLOR SLEEVE No. 01 02 03 04 **YT-0638** 05 06 07 08 09 mm 40 44 50 59 63 5/10 65 72 76 81 304 www.MagazinulCuScul.ro

lang:sw score:11 filesize: 123.14 M page_count: 489 document date: 2018-02-23



[\[pdf\]](#) Accessories Catalog

Cataloage MagazinulCuScul.roCatalog Yato 2017magazinulcuscul.ro sites magazinulcuscul.ro files catalog 2017 Catalog |||

2017 www.MagazinulCuScul.ro 1 SPANNERS / KLUCZE 2 SOCKETS, ACCESSORIES SETS / KLUCZE NASADOWE, ... mm 123.9 10 YT-0642 L mm 200 SLIDING CARD 12/48 BMC COLOR SLEEVE No. 01 02 03 04 **YT-0638** 05 06 07 08 09 mm 40 44 50 59 63 5/10 65 72 76 81 330 www.MagazinulCuScul.ro

lang:sw score:11 filesize: 141.52 M page_count: 513 document date: 2018-02-23

