



[Manuals.plus](#) /

> [SKMEI](#) /

> SKMEI Digital Sports Watch Model 1025 User Manual

SKMEI 1025

SKMEI Digital Sports Watch Model 1025 User Manual

Model: 1025 | Brand: SKMEI

[Introduction](#)

[Features](#)

[Setup](#)

[Operation](#)

[Maintenance
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SKMEI Digital Sports Watch Model 1025. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.



Image 1.1: Front view of the SKMEI Digital Sports Watch Model 1025, displaying the current time and date on its digital screen.

2. KEY FEATURES

- **Digital Display:** Clear and easy-to-read digital time display.
- **Multifunctionality:** Includes 12/24-hour time format, chronograph (stopwatch), daily alarm, and date & week calendar.
- **LED Backlight:** Provides illumination for visibility in low-light conditions.
- **Water Resistance:** Rated for 30 meters (3ATM), suitable for daily wear, splashes, and brief immersion. Not recommended for swimming or diving.
- **Durable Construction:** Features a zinc alloy case, resin mirror, and a comfortable Silica Gel strap.
- **Comfortable Fit:** Lightweight design (56g) with an adjustable strap for all-day wear.

Key Features

Display
Digital

Dial Shape
Round

Features
**Dual -Week,
Alarm & EL Light**

Strap Material
PU Leather

Water Resistance
50 m



Image 2.1: Visual summary of the watch's key features, highlighting its digital display, alarm, and water resistance.

3. SETUP

3.1. Initial Power On and Battery

Your watch comes with a pre-installed button cell battery. If the display is blank or dim, the battery may need replacement. Please refer to the "Maintenance" section for battery replacement guidelines.

3.2. Identifying Buttons

The SKMEI Model 1025 watch typically features four buttons for various functions:

- **LIGHT:** Activates the backlight. (Top Left)
- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch). (Bottom Left)
- **ST/SP (Start/Stop):** Used to start/stop stopwatch or adjust settings. (Top Right)
- **RESET:** Used to reset stopwatch or confirm settings. (Bottom Right)



Image 3.1: Side view of the watch, illustrating the placement of the four function buttons.

4. OPERATING INSTRUCTIONS

4.1. Time and Date Setting

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to zero out the seconds.
3. Press the **ST/SP** button to move to the next setting (hours).
4. Press the **RESET** button to adjust the flashing value (hours, then minutes, month, date, day of week).
5. After setting all values, press the **MODE** button once to return to normal time display.

4.2. Alarm Setting

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to adjust the hour.
3. Press the **ST/SP** button to move to the minute setting.
4. Press the **RESET** button to adjust the minutes.
5. Press the **MODE** button once to return to normal time display.
6. To activate/deactivate the alarm, press and hold the **RESET** button, then press the **ST/SP** button. An alarm icon will appear/disappear.

4.3. Stopwatch Function

1. From the normal time display, press the **MODE** button once to enter stopwatch mode.
2. Press the **ST/SP** button to start the stopwatch.
3. Press the **ST/SP** button again to stop the stopwatch.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to normal time display.

4.4. Backlight Operation

Press the **LIGHT** button (top left) to illuminate the display for a few seconds. This feature is useful in dark environments.

5. MAINTENANCE

5.1. Water Resistance

The watch is rated for 30M (3ATM) water resistance. This means it is suitable for daily use, such as hand washing, rain, and accidental splashes. It is **not** suitable for swimming, diving, or prolonged water immersion. Avoid pressing buttons while the watch is wet or submerged, as this can compromise the water seal.



Image 5.1: The watch demonstrating its water resistance against splashes. Remember, it is not for swimming or diving.

5.2. Cleaning

Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat. For stubborn grime, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

5.3. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery needs to be replaced. This watch uses a standard button cell battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water resistance seal is properly maintained.



Image 5.2: The stainless steel case back of the watch, which can be opened for battery replacement.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead battery.	Replace the battery. Refer to Section 5.3.
Time is incorrect.	Time not set correctly or accidental button press.	Reset the time. Refer to Section 4.1.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure alarm is activated and set to the correct time. Refer to Section 4.2.

Problem	Possible Cause	Solution
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, excessive pressure).	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage. Avoid further water exposure.

7. SPECIFICATIONS

Feature	Detail
Model Number	1025 (SK1025ARMGRN)
Brand	SKMEI
Movement Type	Quartz Digital
Case Material	Zinc Alloy
Band Material	Silica Gel
Case Diameter	3.3 cm (33mm)
Case Thickness	0.9 cm (9mm)
Strap/Lug Width	22mm
Product Dimensions	24 x 3.3 x 0.9 cm
Item Weight	56 g
Water Resistance	30M (3ATM)
Battery Type	Button Cell (Note: "1 AAA batteries required" in product data is typically incorrect for this watch type)



Image 7.1: Dimensional diagram of the watch, indicating case height, strap/lug width, and case thickness.

8. WARRANTY AND SUPPORT

8.1. Warranty Information

This SKMEI watch comes with a **Limited Warranty**. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized repairs.

8.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact SKMEI customer support through their official website or the retailer from whom you purchased the product. Keep your proof of purchase for warranty validation.

