

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips](#) /
- › [Philips Airfryer Grill Pan HD9911/90 for XL Models Instruction Manual](#)

Philips HD9911/90

Philips Airfryer Grill Pan HD9911/90 for XL Models Instruction Manual

Model: HD9911/90

1. INTRODUCTION

The Philips Airfryer Grill Pan HD9911/90 is an accessory designed to enhance the grilling capabilities of your Philips Airfryer XL models (HD924x series). This non-stick grill pan allows you to sear and grill various foods such as meat, fish, and vegetables directly in your Airfryer, providing a convenient way to achieve grilled results.

Compatibility: This grill pan is exclusively compatible with Philips Airfryer XL models (HD924x series).



Image 1.1: Philips Airfryer Grill Pan HD9911/90, showing the overall design with its handle.

2. SETUP AND FIRST USE

Follow these steps to prepare your grill pan for its first use and integrate it with your Airfryer.

1. **Unpack:** Carefully remove the grill pan from its packaging.
2. **Initial Cleaning:** Before first use, wash the grill pan thoroughly with warm water and a mild dish soap. Use a non-abrasive sponge or cloth to avoid damaging the non-stick coating. Rinse completely and dry with a soft towel.
3. **Insertion:** Open your Philips Airfryer XL. Remove the standard basket if it is in place. Insert the grill pan into the Airfryer basket, ensuring it is seated correctly and securely. The handle should face outwards for easy removal.



Image 2.1: Side view of the grill pan, illustrating the handle and pan depth.

3. OPERATING INSTRUCTIONS

Using the grill pan for optimal grilling results.

1. **Preheating:** For best grilling results, it is recommended to preheat your Airfryer with the grill pan inside. Set your Airfryer to the desired cooking temperature and allow it to preheat for 3-5 minutes.
2. **Food Placement:** Carefully place your food directly onto the grill pan. The non-stick surface helps prevent food from sticking. For certain foods, a light brush of cooking oil on the food or pan can enhance browning and prevent sticking.
3. **Cooking:** Close the Airfryer drawer and set the cooking time and temperature according to your recipe or food type. The perforated surface of the grill pan allows for optimal airflow, ensuring even cooking and grilling.
4. **Monitoring:** Periodically check your food during cooking. You may need to flip items for even grilling, depending on the food type and desired outcome.
5. **Removal:** Once cooking is complete, carefully remove the Airfryer drawer. Use heat-resistant tongs or utensils to remove the food from the grill pan. Allow the grill pan to cool before handling directly.



Image 3.1: Top view of the grill pan, highlighting the perforated surface designed for optimal airflow during grilling.

4. MAINTENANCE AND CLEANING

Proper care ensures the longevity and performance of your grill pan.

- **Cool Down:** Always allow the grill pan to cool completely before cleaning.
- **Dishwasher Safe:** The Philips Airfryer Grill Pan is dishwasher safe for convenient cleaning.
- **Hand Washing:** For hand washing, use warm water and a mild dish soap with a soft sponge or cloth. Avoid using metal scouring pads, abrasive cleaners, or harsh chemicals, as these can damage the non-stick coating.
- **Stubborn Residue:** If there is stubborn food residue, soak the grill pan in warm soapy water for 15-30 minutes before cleaning. This will help loosen the residue, making it easier to remove.
- **Drying:** Ensure the grill pan is thoroughly dry before storing.



Image 4.1: Close-up view of the grill pan's perforated surface, showing the non-stick coating and hole pattern.

5. TROUBLESHOOTING

Common issues and their solutions.

- **Food Sticking:**
 - Ensure the grill pan was adequately preheated before placing food.
 - Apply a light coating of cooking oil or spray to the food or the grill pan surface.
- **Difficulty Cleaning:**
 - Soak the grill pan in warm, soapy water for an extended period (e.g., 30 minutes to an hour) to loosen baked-on food.
 - Avoid using abrasive tools that can scratch the non-stick coating.
- **Uneven Grilling:**
 - Ensure food is spread in a single layer and not overcrowded on the pan.
 - Flip food items halfway through the cooking process for more even results.

6. SPECIFICATIONS

Feature	Detail
Model Name	HD9911/90
Brand	Philips
Material	Aluminum
Color	Black
Product Dimensions (D x W x H)	1.24" x 6.22" x 19.5" (3.15 cm x 15.8 cm x 49.5 cm)
Item Weight	1.4 Pounds (0.64 kg)

Special Features	Non-Stick Surface, Dishwasher Safe
Compatibility	Philips Airfryer XL models (HD924x series)

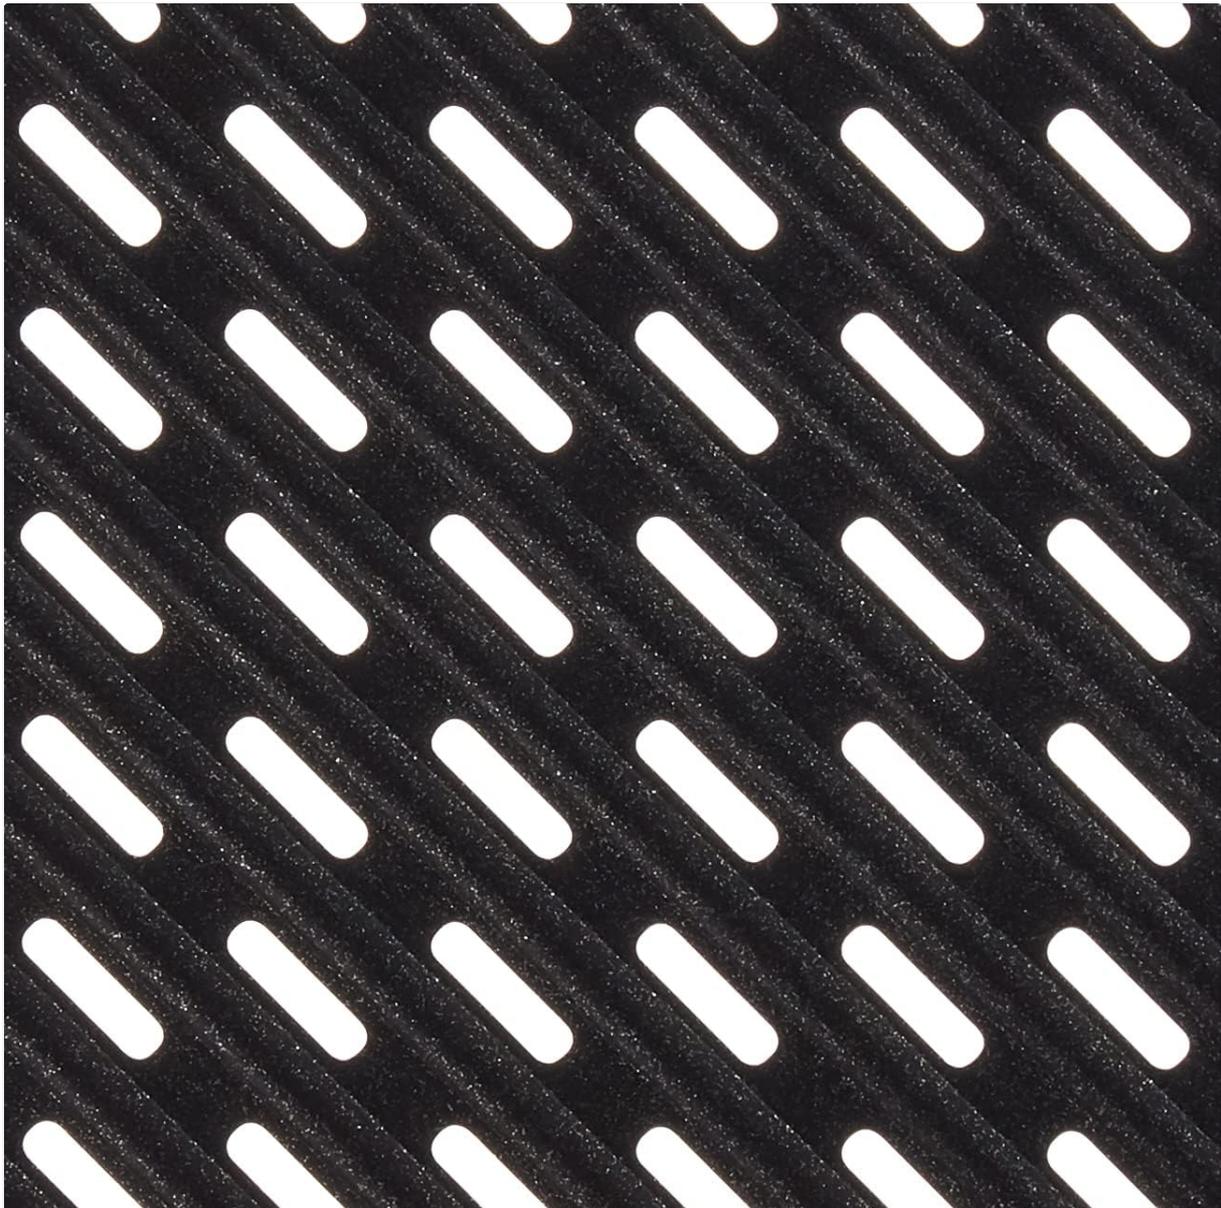


Image 6.1: Diagram illustrating the dimensions of the grill pan.

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation provided with your original purchase or visit the official Philips website. For further assistance, product registration, or to contact customer support, please visit www.philips.com/support.