

Everlast EVER33-226-003

Everlast EVER33-226-003 Unisex Analogue Quartz Watch Instruction Manual

INTRODUCTION

Thank you for choosing the Everlast EVER33-226-003 Unisex Analogue Quartz Watch. This manual provides essential information for the proper setup, operation, maintenance, and care of your watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The Everlast EVER33-226-003 is a durable analogue quartz watch designed for unisex adult use. It features a robust plastic case, a comfortable PU strap, and is water-resistant up to 50 meters. The watch is equipped with a precise quartz movement for accurate timekeeping.



Image showing the Everlast EVER33-226-003 watch with a black case and strap, displaying the watch face with clear hour markers and hands.

SETUP

Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards to the time-setting position. You may feel a slight click.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct

time.

4. Once the time is set, push the crown back into its original position against the watch case. Ensure it is fully pushed in to maintain water resistance.

Battery Information

Your watch is powered by a pre-installed battery. The battery type is unknown, but it is included and ready for use upon purchase. When the battery requires replacement, it is recommended to seek professional watch service.

OPERATING THE WATCH

Reading the Time

The watch features a traditional analogue display with hour, minute, and second hands. The hour hand indicates the hour, the minute hand indicates the minutes, and the thinner second hand indicates the seconds.

Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, showering, or washing hands. It is not suitable for diving, snorkeling, or high-impact water sports. Ensure the crown is fully pushed in before any contact with water.

Rotating Bezel

The watch features an exterior movable bezel. This bezel can be rotated to mark elapsed time. To use, align the triangle marker on the bezel with the minute hand at the start of an event. The minute hand's position relative to the bezel's markings will then indicate the elapsed time.

MAINTENANCE

Cleaning Your Watch

- Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt.
- For more thorough cleaning, especially after exposure to saltwater or sweat, use a slightly damp cloth and mild soap. Ensure the crown is fully closed before cleaning.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Storing it in its original packaging or a watch box can help protect it from dust and scratches.

Battery Replacement

When the watch stops running, it indicates that the battery needs to be replaced. It is highly recommended to have the battery replaced by a qualified watch technician to ensure the watch's water resistance and proper functioning are maintained.

TROUBLESHOOTING

- **Watch Not Running:** Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect Time:** Follow the "Setting the Time" instructions in the Setup section to reset the time.
- **Condensation Inside Watch:** If you notice condensation under the crystal, this may indicate a loss of water resistance. Immediately take the watch to a professional for inspection and repair to prevent further damage.

SPECIFICATIONS

Model Number:	EVER33-226-003
Movement:	Analogue Quartz
Case Material:	Plastic
Case Diameter:	44 Millimetres
Case Thickness:	12 Millimetres
Band Material:	Polyurethane (PU)
Band Width:	22 Millimetres
Water Resistance:	50 Metres (5 ATM)
Clasp Type:	Tang Buckle
Item Weight:	150 Grams
Battery:	1 Unknown battery (included)

WARRANTY AND SUPPORT

For information regarding your product's warranty, please refer to the warranty card or documentation included with your purchase. For further assistance or support, please contact the retailer or Everlast customer service through their official channels.