

Coby LEDDTV1927J2

Coby 19V LED LCD TV LEDDTV1927J2 User Manual

Model: LEDDTV1927J2

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Coby 19V LED LCD TV, model LEDDTV1927J2. Please read this manual thoroughly before operating the television and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Ensure proper grounding for the power plug.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Coby 19V LED LCD TV (LEDDTV1927J2)
- Remote Control
- AAA Batteries (x2)
- Power Cord
- User Manual (this document)

SETUP

1. Attaching the Stand

Carefully place the TV screen-down on a soft, clean surface. Align the stand with the mounting holes on the bottom of the TV and secure it with the provided screws.



Image: Front view of the Coby 19V LED LCD TV with its table stand attached.

2. Connecting Cables

Connect your antenna, cable box, or other devices to the appropriate ports on the back of the TV.

- **Antenna/Cable:** Connect your antenna or cable TV coaxial cable to the "ANTENNA" input.
- **HDMI Devices:** Use an HDMI cable to connect devices like Blu-ray players, game consoles, or set-top boxes to the "HDMI" ports.
- **PC (VGA):** Connect a computer using a VGA cable to the "PC (VGA)" port and an audio cable to the "PC AUDIO IN" port.
- **USB:** For media playback from USB drives, insert the drive into the "USB" port.

- **Component Video:** Connect devices using component video cables (YPbPr) to the "COMPONENT IN" ports.



Image: Close-up of the rear panel of the Coby TV, showing HDMI, PC (VGA), USB, and antenna input ports.



Image: Angled rear view of the Coby TV, illustrating the arrangement of various input and output ports.

3. Power Connection

Plug the power cord into the TV's power input, then plug the other end into a wall outlet.

OPERATING THE TV

Basic Functions

- **Power On/Off:** Press the **POWER** button on the remote control or the TV to turn the unit on or off.
- **Channel Selection:** Use the **CH+/-** buttons to change channels sequentially, or enter channel numbers directly using the numeric keypad.
- **Volume Adjustment:** Press the **VOL+/-** buttons to increase or decrease the volume.
- **Mute:** Press the **MUTE** button to temporarily silence the audio. Press again to restore.

Input Source Selection

To switch between connected devices (e.g., HDMI, PC, Antenna), press the **INPUT** or **SOURCE** button on the

remote control. Use the arrow keys to select the desired input and press **OK**.

Menu Navigation

Press the **MENU** button to access the TV's settings. Use the arrow keys to navigate through options such as Picture, Sound, Channel, and Setup. Press **OK** to confirm selections and **EXIT** to leave the menu.

MAINTENANCE

Cleaning the TV

Before cleaning, unplug the power cord from the wall outlet. Use a soft, dry cloth to wipe the screen and cabinet. For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive cleaner specifically designed for electronics. Never spray cleaner directly onto the TV.

Storage

If storing the TV for an extended period, disconnect all cables and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not working.	Ensure power cord is securely plugged in. Test the outlet with another device.
No picture, but sound is present	Incorrect input source selected; backlight issue.	Press the INPUT button to select the correct source. Check brightness settings.
No sound, but picture is present	Volume is muted or too low; audio cables not connected properly.	Unmute the TV or increase volume. Check audio cable connections.
Remote control not working	Batteries are dead or incorrectly inserted; obstruction between remote and TV.	Replace batteries (2 AAA). Ensure no obstructions. Point remote directly at the TV's sensor.

SPECIFICATIONS

Feature	Detail
Brand	Coby
Model Name	LEDDTV1927J2
Screen Size	19 Inches
Display Technology	LCD

Feature	Detail
Resolution	High Definition
Connectivity Technology	HDMI
Hardware Interface	HDMI
Mounting Type	Table Mount
Model Year	2015
Batteries	2 AAA batteries (included)
Control Method	Remote



Image: Diagram showing the dimensions of the Coby 19V LED LCD TV: 44.2 cm width, 31.0 cm height (with stand), 27.3 cm height (without stand), and 17.0 cm depth.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Coby customer service. Contact details can typically be found on the manufacturer's official website.