

[Manuals.plus](#) /

› [John Timberland](#) /

› John Timberland Garden Fairy with Sunflowers Floor Fountain Instruction Manual

John Timberland 7H744

John Timberland Garden Fairy with Sunflowers Floor Fountain Instruction Manual

Model: 7H744

INTRODUCTION

Thank you for purchasing the John Timberland Garden Fairy with Sunflowers Floor Fountain. This beautiful 26-inch high fountain features a whimsical fairy with sunflowers and cascading water, enhanced by LED lighting. It is designed for both indoor and outdoor use, adding a tranquil and decorative element to your space. Please read this manual carefully before assembly and operation to ensure safe and proper use.



Full view of the John Timberland Garden Fairy with Sunflowers Floor Fountain.

SAFETY INFORMATION

- Always disconnect the power supply before cleaning, servicing, or moving the fountain.
- Ensure the fountain is placed on a level and stable surface to prevent tipping.
- Do not operate the pump without water. This can damage the pump.
- Keep the power cord away from high-traffic areas and ensure it is not pinched or damaged.
- Do not allow children or pets to play with the fountain unsupervised.
- Use only clean water in the fountain.
- For outdoor use, ensure the power outlet is a GFCI (Ground Fault Circuit Interrupter) protected outlet.

PACKAGE CONTENTS

Please check to ensure all parts are present:

- Fairy with Sunflowers Fountain Unit
- Water Pump with 6-foot long cord
- Hose (pre-attached or separate)
- LED lights (integrated into sunflowers)

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the fountain on a stable, level surface where it will not be easily knocked over. Ensure it is near a suitable power outlet.
3. **Pump Installation:** Position the water pump inside the fountain's basin. Connect the hose from the fountain to the pump's outlet.
4. **Fill with Water:** Fill the fountain basin with distilled water until the pump is fully submerged. Do not overfill.
5. **Connect Power:** Plug the power cord into a GFCI-protected electrical outlet. The pump and LED lights will activate.
6. **Adjust Flow:** If necessary, adjust the water flow using the control valve on the pump to achieve your desired effect and minimize splash.





Close-up view of the fairy and sunflowers, showing water flow.

Depth 12"



Fountain dimensions: 26 inches high, 14.5 inches wide, 12 inches deep.

Setup Overview Video

This video provides a general overview of the Garden Fairy Fountain, including its visual features and operation.

OPERATING INSTRUCTIONS

Once the fountain is set up and plugged in, the water pump will begin circulating water, and the integrated LED lights will illuminate. The fountain is designed for continuous operation. To turn off the fountain, simply unplug it from the power outlet.

- **Water Level:** Regularly check the water level and refill as needed. Evaporation will cause the water level to drop, especially in warmer climates or dry indoor environments. Ensure the pump remains fully submerged.

- **Water Flow:** The pump includes an adjustable flow control. Turn the dial on the pump to increase or decrease the water flow rate.
- **LED Lights:** The LED lights are integrated and will turn on automatically when the fountain is powered.



Close-up of the LED lights illuminating the cascading water in the sunflowers.

MAINTENANCE

Regular maintenance will prolong the life and appearance of your fountain.

Cleaning

1. **Frequency:** Clean your fountain every 2 to 3 months, or more frequently if the water appears dirty or algae begins to form.
2. **Drain Water:** Disconnect the power and drain all water from the basin.
3. **Remove Debris:** Remove any leaves, dirt, or other debris from the fountain and pump. Use a soft brush to clean the pump and hoses to prevent clogging.
4. **Clean Surfaces:** Wipe down the fountain surfaces with a soft cloth and mild soap solution.

Rinse thoroughly.

5. **Refill:** Refill the basin with clean, distilled water. Consider using a fountain water treatment product that is safe for people and animals to inhibit algae growth.

Winterizing (for outdoor use in freezing climates)

1. **Drain Completely:** Before the first freeze, disconnect power and completely drain all water from the fountain.
2. **Remove Pump:** Remove the pump and hose. Clean them thoroughly and store them indoors in a dry, frost-free location.
3. **Protect Basins:** Place absorbent material (e.g., old towels, blankets) in the fountain basins to absorb any residual moisture and protect against freezing expansion.
4. **Cover:** Cover the entire fountain with a waterproof fountain cover or tarp, securing it tightly to protect it from winter weather.



Side view of the fountain, illustrating its depth and multiple water tiers.

Maintenance Overview Video

This video from LampsPlus provides general tips on fountain care, including cleaning and winterizing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not running	Not plugged in; power outage; pump clogged or damaged; insufficient water.	Check power connection; ensure outlet is working; clean pump and check for damage; add water to submerge pump.
Excessive splashing	Water flow too high; fountain not level.	Adjust pump flow control to a lower setting; ensure fountain is on a level surface.
Noisy pump	Pump not fully submerged; pump vibrating against basin; debris in pump.	Add water until pump is fully submerged; reposition pump to prevent contact with basin; clean pump impeller.
Water not flowing evenly	Hose kinked; debris in hose or nozzle; fountain not level.	Check and straighten hose; clean hose and nozzles; ensure fountain is level.
Algae growth	Sunlight exposure; lack of water treatment.	Clean fountain regularly; use an algaecide or fountain water treatment.

Troubleshooting Tips Video

This video from LampsPlus offers general troubleshooting advice for fountains.

SPECIFICATIONS

Feature	Detail
Model Number	7H744
Brand	John Timberland
Dimensions	26" H x 14.5" W x 12" D
Weight	22.4 lbs
Material	Lightweight Cast Resin, Faux Stone Finish
Power Source	Plug-in Electric
Special Feature	Integrated LED Lights
UPC	736101741022

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer, Lamps Plus, or refer to the product's original packaging for specific details. Keep your purchase receipt for any warranty claims.

Manufacturer: Lamps Plus

For additional assistance, visit the [John Timberland Store on Amazon](#).