

TELEFUNKEN RC4848

Genuine Telefunken RC4848 TV Remote Control User Manual

INTRODUCTION

This manual provides instructions for the genuine Telefunken RC4848 TV Remote Control. This remote is designed to operate specific Telefunken television models without the need for programming. Please read this manual thoroughly to ensure correct usage and to maximize the lifespan of your remote control.

PRODUCT OVERVIEW

The Telefunken RC4848 remote control is an authentic replacement or spare for compatible Telefunken TV models. It features an ergonomic design and all standard functions required for television operation.



Figure 1: Front view of the Telefunken RC4848 remote control. This image displays the layout of the buttons and the overall design of the remote.

Key Features:

- Genuine RC4848 remote control.
- No programming required for immediate use.
- Specifically designed for Telefunken TV models.
- Infrared connectivity for reliable operation.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control does not require any programming. It is ready for use once batteries are installed, provided it is compatible with your Telefunken TV model.

OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Telefunken television. Ensure there are no obstructions between the remote and the TV.

Basic Functions:

- **Power Button:** Press to turn the TV on or off.
- **Channel Up/Down:** Use to change channels sequentially.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the TV audio.
- **Number Buttons (0-9):** Directly select channels.
- **Menu Button:** Accesses the TV's on-screen menu.
- **Navigation Buttons (Arrows):** Used to move through menu options.
- **OK/Enter Button:** Confirms selections in the menu.
- **Source/Input Button:** Changes the input source (e.g., HDMI, AV).

Refer to your Telefunken TV's user manual for specific functions and menu navigation details.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries or different types of batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote works intermittently.	Weak batteries; obstruction between remote and TV.	Replace batteries. Ensure clear line of sight to the TV's IR receiver.
Specific buttons not working.	Button stuck or internal fault.	Gently clean around the button. If issue persists, the remote may require replacement.
Remote does not control TV.	Incompatible TV model; IR receiver on TV is blocked or faulty.	Verify your TV model is compatible with RC4848. Check TV's IR receiver for obstructions.

SPECIFICATIONS

Brand: Telefunken

Model Name: RC4848

Controller Type: Remote Control

Connectivity Technology: Infrared

Compatible Devices: Television (Specific Telefunken models)

Number of Supported Devices: 1

Number of Buttons: 25

Maximum Range: 10 Meters

WARRANTY AND SUPPORT

Warranty Information: Specific warranty details for this product are not available in the provided information. Please refer to your purchase documentation or contact the retailer for warranty terms.

Customer Support: For further assistance or inquiries, please contact the Telefunken customer support channel relevant to your region. Contact information is typically found on the manufacturer's official website or product packaging.