

[Manuals.plus](#) /

› [Philips](#) /

› Philips HD9980/50 Air Fryer Variety Basket Instruction Manual

Philips HD9980/50

Philips HD9980/50 Air Fryer Variety Basket Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips HD9980/50 Air Fryer Variety Basket. This accessory is designed to enhance the versatility of your Philips Air Fryer, allowing for a wider range of cooking applications. Please read these instructions carefully before first use and retain them for future reference.



Image: Exploded view of the Philips HD9980/50 Air Fryer Variety Basket, showing the main basket, the detachable honeycomb mesh bottom, and the multifunctional lid.

PRODUCT OVERVIEW

The Philips HD9980/50 Air Fryer Variety Basket features a unique design for expanded cooking possibilities. Key components include:

- **Main Basket:** The primary container for food during air frying.
- **Detachable Honeycomb Mesh Bottom:** Features a non-stick coating for easy food release and cleaning.
- **Multifunctional Lid:** Designed to prevent lighter foods from flying around during cooking and for specific recipes like tortilla chips, kale chips, and dehydrated fruit.

This accessory is compatible with Philips Air Fryer models HD9220 and HD9230 Series.

SETUP

Before first use, ensure all packaging materials are removed. Wash all components of the variety basket thoroughly with warm soapy water, then rinse and dry completely. The detachable honeycomb mesh bottom should be securely placed into the main basket. The variety basket is then ready to be inserted into your compatible Philips Air Fryer (HD9220 & HD9230 Series) according to your air fryer's instruction manual.

OPERATING INSTRUCTIONS

The variety basket expands the functionality of your Philips Air Fryer. Always refer to your main Air Fryer manual for general operating procedures, temperature settings, and cooking times.

Using the Basket for Various Recipes

- **General Use:** Place food directly into the main basket with the honeycomb mesh bottom installed.
- **For Lighter Foods (e.g., Kale Chips, Tortilla Chips):** Utilize the multifunctional lid. Place the lid over the food in the basket before inserting it into the air fryer. This prevents lighter ingredients from being displaced by the air circulation.
- **Dehydrating Fruit:** The basket and lid can be used for dehydrating. Follow specific dehydration recipes and temperature guidelines provided in your Air Fryer recipe book or online resources.



Image: A person carefully placing food into the Philips HD9980/50 Air Fryer Variety Basket, which is positioned on a kitchen counter next to an air fryer.



Image: A detailed view of the multifunctional lid for the Philips HD9980/50 Air Fryer Variety Basket, showing its mesh design and handles.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your variety basket.

Cleaning Steps:

1. Allow the basket to cool completely after use.
2. Detach the honeycomb mesh bottom from the main basket. This feature is designed for quick and easy cleaning.
3. Wash all removable parts (main basket, mesh bottom, lid) with warm water and a mild dish soap. The non-stick coating on the mesh bottom helps prevent food from sticking, making cleaning easier.
4. Alternatively, all removable parts are dishwasher safe for convenient cleaning.
5. Ensure all parts are thoroughly dry before reassembling or storing.



Image: A person cleaning the detachable honeycomb mesh bottom of the Philips HD9980/50 Air Fryer Variety Basket under running water in a kitchen sink.



Image: A close-up view of the detachable honeycomb mesh bottom of the Philips HD9980/50 Air Fryer Variety Basket, highlighting its non-stick surface.

TROUBLESHOOTING

If you encounter issues with your Philips HD9980/50 Air Fryer Variety Basket, refer to the following common solutions:

Problem	Possible Cause	Solution
Basket does not fit into the Air Fryer.	Incorrect Air Fryer model.	Ensure your Air Fryer is a Philips HD9220 or HD9230 Series model. This basket is not universally compatible.

Problem	Possible Cause	Solution
Food is sticking to the basket.	Excessive residue or damage to non-stick coating.	Ensure the basket is cleaned thoroughly after each use. Avoid using abrasive cleaning tools that could damage the non-stick surface.
Lighter foods are flying around inside the Air Fryer.	Multifunctional lid not used or improperly placed.	Always use the multifunctional lid when cooking lighter foods such as kale chips or tortilla chips to keep them in place.

SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	HD9980/50
Color	White
Material (Inner)	Stainless Steel
Material (Outer)	Polypropylene
Nonstick Coating	Yes
Dishwasher Safe	Yes
Item Weight	2.05 Pounds
Compatible Air Fryers	Philips HD9220 & HD9230 Series
GTIN / UPC	075020052148

WARRANTY AND SUPPORT

For information regarding warranty coverage for your Philips HD9980/50 Air Fryer Variety Basket, please refer to the documentation included with your original purchase or visit the official Philips website. For technical support, product inquiries, or service, please contact Philips customer support directly through their official channels.