

Merkury Innovations MI-BTE02-600

Merkury Innovations Link Wireless Sport Earbuds User Manual

Model: MI-BTE02-600

1. INTRODUCTION

Thank you for choosing the Merkury Innovations Link Wireless Sport Earbuds. These earbuds are designed to provide a secure, comfortable, and high-quality audio experience for active lifestyles. Featuring advanced Bluetooth 4.0 technology and a sweat-proof design, they are ideal for sports, workouts, and daily use. This manual will guide you through the setup, operation, and maintenance of your new earbuds.



Image: Merkury Innovations Link Wireless Sport Earbuds in black and red, showcasing the ergonomic design with ear hooks and in-line remote.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Merkury Innovations Link Wireless Sport Earbuds
- Micro USB Charging Cable
- 3 Sizes of Silicone Ear Tips (Small, Medium, Large)
- User Manual (this document)

3. SETUP

3.1 Charging the Earbuds

Before first use, fully charge your earbuds. A full charge provides up to 6 hours of playback time.

1. Locate the Micro USB charging port on the in-line remote control.
2. Connect the Micro USB charging cable to the port.

3. Plug the other end of the cable into a USB power source (e.g., computer USB port, wall adapter).
4. The LED indicator on the remote will illuminate during charging and change color or turn off when fully charged.

3.2 Wearing the Earbuds

The Link Wireless Earbuds feature flexible memory hooks and comfort-fit buds for a secure and comfortable fit, especially during physical activity.

1. Select the silicone ear tips that best fit your ears for optimal sound and comfort.
2. Gently place the earbuds into your ear canals.
3. Adjust the flexible ear hooks to rest securely over the top of your ears.

3.3 Bluetooth Pairing

Pair your earbuds with your Bluetooth-enabled device to enjoy wireless audio.

1. Ensure the earbuds are charged and turned off.
2. Press and hold the multi-function button on the in-line remote until the LED indicator flashes red and blue, indicating pairing mode.
3. On your device, enable Bluetooth and search for new devices.
4. Select "Merkury Link" or a similar name from the list of available devices.
5. Once paired, the LED indicator will typically flash blue slowly or turn solid blue.

4. OPERATING THE EARBUDS

The in-line remote provides convenient control over your music and calls.

4.1 Power On/Off

- **Power On:** Press and hold the multi-function button until the LED flashes blue.
- **Power Off:** Press and hold the multi-function button until the LED flashes red and then turns off.

4.2 Music Control

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press and hold the '+' button.
- **Previous Track:** Press and hold the '-' button.
- **Volume Up:** Press the '+' button briefly.
- **Volume Down:** Press the '-' button briefly.

4.3 Call Management

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the multi-function button.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Merkury Innovations Link Wireless Sport Earbuds, follow these maintenance guidelines:

- **Cleaning:** Wipe the earbuds and remote with a soft, dry cloth. For sweat or dirt, use a slightly damp cloth and ensure they are completely dry before use or charging. Do not use harsh chemicals or abrasive cleaners.
- **Sweat Protection:** The earbuds are sweat-protected, but avoid submerging them in water or exposing them to heavy rain.
- **Storage:** When not in use, store the earbuds in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tangling the cables.
- **Battery Care:** To preserve battery life, charge the earbuds regularly, even if not used frequently. Avoid fully depleting the battery for extended periods.

6. TROUBLESHOOTING

If you encounter any issues with your earbuds, please refer to the following common problems and solutions:

Problem	Possible Solution
Earbuds do not power on.	Ensure the earbuds are fully charged. Connect them to a power source using the Micro USB cable.
Cannot pair with device.	1. Ensure earbuds are in pairing mode (flashing red/blue). 2. Make sure Bluetooth is enabled on your device. 3. Move earbuds closer to your device. 4. Forget/delete previous pairings on your device and try again.
No sound or poor sound quality.	1. Check volume levels on both earbuds and your device. 2. Ensure earbuds are properly paired. 3. Try different sized ear tips for a better seal. 4. Move closer to your device to avoid interference.
Earbuds disconnect frequently.	1. Ensure earbuds are fully charged. 2. Keep your device within the Bluetooth range (approx. 10 meters). 3. Avoid obstacles between the earbuds and your device.

7. SPECIFICATIONS

Feature	Detail
Model Number	MI-BTE02-600
Wireless Technology	Bluetooth 4.0
Battery Type	Lithium Ion (included)
Battery Life	Up to 6 hours
Connectivity	Bluetooth, Wired (for charging)
Special Features	Microphone Included, Sweat Protected
Form Factor	Two-ear, In-ear with ear hooks
Color	Black/Red

Feature	Detail
Item Weight	27.2 g
Product Dimensions	71.12 x 2.54 x 2.92 cm

8. WARRANTY AND SUPPORT

Merkury Innovations provides a **1-year hassle-free warranty** for the Link Wireless Sport Earbuds. This warranty covers manufacturing defects and ensures your product performs as expected under normal use. For warranty claims, technical support, or any questions regarding your product, please contact Merkury Innovations customer service. Refer to the contact information provided on the product packaging or the official Merkury Innovations website.