

## Bush LED22134FHDDVD

# User Manual for Bush LED22134FHDDVD TV Remote Control

Model: LED22134FHDDVD | Brand: Bush

## INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your genuine Bush LED22134FHDDVD TV Remote Control. Please read this manual carefully before using the remote control to ensure optimal performance and longevity.

## PRODUCT OVERVIEW

The Bush LED22134FHDDVD TV Remote Control is designed to provide seamless control over your Bush LED22134FHDDVD television. It features an ergonomic design for comfortable handling and intuitive button placement for ease of use.



This image displays the full layout of the Bush TV remote control. It is a black, rectangular remote with various buttons for power, channel, volume, number input, navigation, and media playback. The top section includes the power button and media controls. Below that are the colored function buttons and the numeric keypad. The central section features the directional navigation pad with an OK button. The lower

section contains additional function buttons.

## Button Functions

- **Power Button (●)**: Turns the TV on or off.
- **Numeric Keypad (0-9)**: Directly input channel numbers.
- **Channel Up/Down (P+/P-)**: Changes the TV channel.
- **Volume Up/Down (V+/V-)**: Adjusts the sound volume.
- **Mute Button ( )**: Mutes or unmutes the TV sound.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK Button**: Confirms selections in menus.
- **Menu Button**: Accesses the TV's main menu.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or function.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Specific functions depending on the TV mode or on-screen prompts (e.g., Teletext, interactive services).
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback for connected devices or built-in media players.

## SETUP

---

This genuine remote control requires no programming and is ready for use once batteries are installed.

### Inserting Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

## OPERATING INSTRUCTIONS

---

To operate your TV using the remote control, point the remote directly at the TV's infrared sensor, typically located on the front panel of the television.

### Basic Functions

- **Power On/Off**: Press the **Power** button once.
- **Changing Channels**: Use the **P+** or **P-** buttons to cycle through channels. Alternatively, use the numeric keypad to enter a specific channel number and press **OK**.
- **Adjusting Volume**: Press the **V+** button to increase volume and **V-** to decrease volume.
- **Muting Sound**: Press the **(Mute)** button to temporarily silence the TV. Press again to restore sound.

### Menu Navigation

- Press the **MENU** button to open the TV's main menu.

- Use the **Up**, **Down**, **Left**, and **Right** navigation buttons to move between menu options.
- Press the **OK** button to select a highlighted option or confirm a setting.
- Press the **BACK** button to return to the previous menu level.
- Press the **EXIT** button to close the menu and return to normal TV viewing.

## MAINTENANCE

---

### Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

### Battery Care and Replacement

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- If the remote will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage to the remote.
- Dispose of used batteries according to local regulations.

### Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the remote.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the TV (within 10 meters).
Some buttons are unresponsive.	Dirt or debris under the buttons. Worn out button contacts.	Clean the remote control (refer to Maintenance section). If problem persists, the remote may need replacement.
Remote works intermittently.	Low battery power. Interference from other electronic devices.	Replace batteries. Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the TV's IR sensor.

## SPECIFICATIONS

---

Feature	Detail
Model Number	LED22134FHDDVD
Compatible Devices	Television (Bush LED22134FHDDVD)

Feature	Detail
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Maximum Range	10 Metres
Battery Description	Alkaline (AAA x 2, not included)
Special Feature	Ergonomic design

## WARRANTY INFORMATION

---

For specific warranty details regarding your Bush LED22134FHDDVD TV Remote Control, please refer to the documentation provided at the time of purchase or contact the seller directly. As a genuine replacement part, standard consumer rights and guarantees apply.

## SUPPORT

---

If you encounter issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact the retailer from whom you purchased the remote control or the official Bush customer support for your region. Please have your product model number (LED22134FHDDVD) ready when contacting support.

© 2024 Bush. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Documents - Bush – LED22134FHDDVD



## [pdf] User Manual Instructions Troubleshooting Guide Guide

View the instruction manual Instruction for Bush 22IN Full HD 1080P LED TV DVD BLACK Argos Product 122 6072 1226072 D001 direct argos support co uk storage |||

22 Combination LED TV/DVD Installation Operating Instructions - Please keep for future reference 138/4945 **LED22134FHDDVD** **IMPORTANT** - Please read these instructions fully before installing or operating These instructions contain important information which will help you get the best from your television and ensure a safe and correct installation and operation.

For any help concerning set up and use of your TV please call the Customer Helpline 0845 604 0105 Lines open: 9am - 8pm Monday to Saturday and 10am - 4pm Sunday

For any help concerning set up and use of your TV please call the Customer Helpline 0845 604 0105

Issue 1 - 02/11

lang:en score:39 filesize: 4.71 M page\_count: 28 document date: 2013-07-23