Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Avidsen /
- › Avidsen Additional Remote Control 868 MHz for Alarm Compatible with Avidsen 100108 and 100111 User Manual

Avidsen 100109

Avidsen Additional Remote Control 868 MHz

USER MANUAL

Product Overview

This manual provides instructions for the Avidsen 868 MHz Additional Remote Control, designed to be compatible with Avidsen alarm systems models 100108 and 100111. This remote allows for convenient arming and disarming of your alarm system.



A white oval-shaped remote control with two circular buttons labeled 'ARM' and 'CLR'. A small red LED indicator is visible at the top. The 'avidsen' logo is printed in blue at the bottom.

Setup

The Avidsen Additional Remote Control requires initial programming to function with your compatible Avidsen alarm system (models 100108 and 100111). The remote comes with a Lithium battery pre-installed and ready for use.

Programming the Remote Control

- 1. Ensure your Avidsen alarm system is in programming mode. Refer to your alarm system's main instruction manual for specific steps on entering programming mode.
- 2. While the alarm system is in programming mode, press and hold the desired button on the additional remote control (e.g., 'ARM' or 'CLR') until the alarm system indicates successful pairing (e.g., a beep or light flash).
- 3. Repeat the process for any other buttons you wish to program, if applicable.
- 4. Exit programming mode on your alarm system.

Test the remote control's functionality to ensure it properly arms and disarms your alarm system.

Operating Instructions

The remote control features two primary buttons for operating your Avidsen alarm system:

- ARM Button: Press this button to arm your Avidsen alarm system. The system will typically provide an audible or visual confirmation when armed.
- **CLR Button:** Press this button to disarm or clear your Avidsen alarm system. Confirmation will usually be provided by the alarm system.

The remote operates on a frequency of 868 MHz, ensuring reliable communication with compatible Avidsen alarm systems.

Maintenance

Battery Replacement

The remote control is powered by a Lithium battery. When the remote's range decreases or it becomes unresponsive, the battery may need replacement. To replace the battery:

- 1. Locate the battery compartment on the remote control. This is typically on the back or side, secured by a small screw or clip.
- 2. Open the compartment carefully.
- 3. Remove the old battery and insert a new Lithium battery of the same type, observing the correct polarity (+/-).
- 4. Close the battery compartment securely.

Cleaning and Care

- Clean the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Do not expose the remote to extreme temperatures, direct sunlight, or excessive moisture.
- Avoid dropping the remote or subjecting it to strong impacts, as this can damage internal components or affect button functionality.

Troubleshooting

· Remote not responding:

- · Check if the battery needs replacement.
- Ensure the remote is within range of the alarm system.
- $\circ~$ Re-program the remote control following the steps in the 'Setup' section.

· Reduced operating range:

- · Replace the battery.
- Ensure there are no significant obstructions (e.g., thick walls, large metal objects) between the remote and the alarm system receiver.

· Buttons feel stiff or unresponsive:

This can occur over time with frequent use. Ensure no debris is lodged around the buttons. If the issue persists, the

Specifications

Manufacturer	Avidsen
Part Number	100109
Item Model Number	100109
Frequency	868 MHz
Compatibility	Avidsen Alarm Systems 100108 and 100111
Batteries Included	Yes
Battery Type	Lithium
Item Weight	70 g

Warranty Information

This Avidsen Additional Remote Control comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Support

For further assistance, technical support, or inquiries regarding your Avidsen Additional Remote Control, please refer to the support contact information provided with your Avidsen alarm system or visit the official Avidsen website. When contacting support, please have your product model number (100109) and a description of the issue ready.

© 2024 Avidsen. All rights reserved.

Related Documents - 100109





Avidsen Product Warranty, Support, and Returns Information

Details on Avidsen product warranty (3 years parts and labor), customer support contact information, and after-sales service return procedures. Learn about warranty coverage, how to get assistance, and product return policies.



Avidsen HomeCam I4G Indoor IP Camera 4G User Manual

User manual for the Avidsen HomeCam I4G Indoor IP Camera 4G, covering installation, usage, settings, and troubleshooting.



Caméra IP WiFi Avidsen Autonome 720P - Manuel d'utilisation et guide

Manuel d'utilisation complet pour la caméra IP WiFi Avidsen autonome 720P (réf. 123985). Découvrez l'installation, la configuration, l'utilisation, les spécifications techniques et les conseils d'entretien de votre appareil de surveillance Avidsen.



Avidsen Elia Smart Connected Videophone - User Information

Quick start guide and compliance information for the Avidsen Elia Smart Connected Videophone, model 112292. Includes usage precautions, recycling information, warranty details, and declarations of conformity in multiple languages.