

CamKix D0027-SRC-RED

CamKix Bluetooth Camera Shutter Remote Control

Model: D0027-SRC-RED - Instruction Manual

1. PRODUCT OVERVIEW

The CamKix Bluetooth Camera Shutter Remote Control allows for hands-free photo and video capture with compatible smartphones and tablets. This compact device utilizes Bluetooth wireless technology to trigger your device's camera from a distance, enhancing your photography experience.

Key Features

- Hands-free operation for photos and videos.
- Lightweight and portable design.
- Smooth and reliable Bluetooth pairing.
- Dedicated buttons for iOS and Android devices.
- Wide compatibility with Android 4.2.2+ and iOS 6.0+ devices.

2. SETUP GUIDE

Package Contents

- 1x CamKix Bluetooth Camera Shutter Remote Control
- 1x Adjustable Wrist Strap
- 1x Lithium Metal Battery (CR2032H, pre-installed)

Battery Installation/Check

The remote control comes with a pre-installed CR2032H Lithium Metal battery. To ensure functionality, verify the battery is correctly seated. If replacement is needed, gently open the battery compartment on the back of the remote and insert a new CR2032H battery with the positive (+) side facing up.

Bluetooth Pairing

1. Ensure the remote control is powered off. Locate the ON/OFF switch on the side of the remote and slide

it to the "ON" position. A blue LED indicator light will begin to flash, indicating it is in pairing mode.

2. On your smartphone or tablet, navigate to the Bluetooth settings.
3. Enable Bluetooth if it is not already active.
4. Search for available devices. The remote will appear as "AB Shutter3" (or similar).
5. Select "AB Shutter3" to pair. The blue LED light on the remote will stop flashing and remain solid for a few seconds, then turn off, indicating successful pairing.
6. Once paired, the device will automatically connect in future uses when the remote is turned on and Bluetooth is active on your phone.

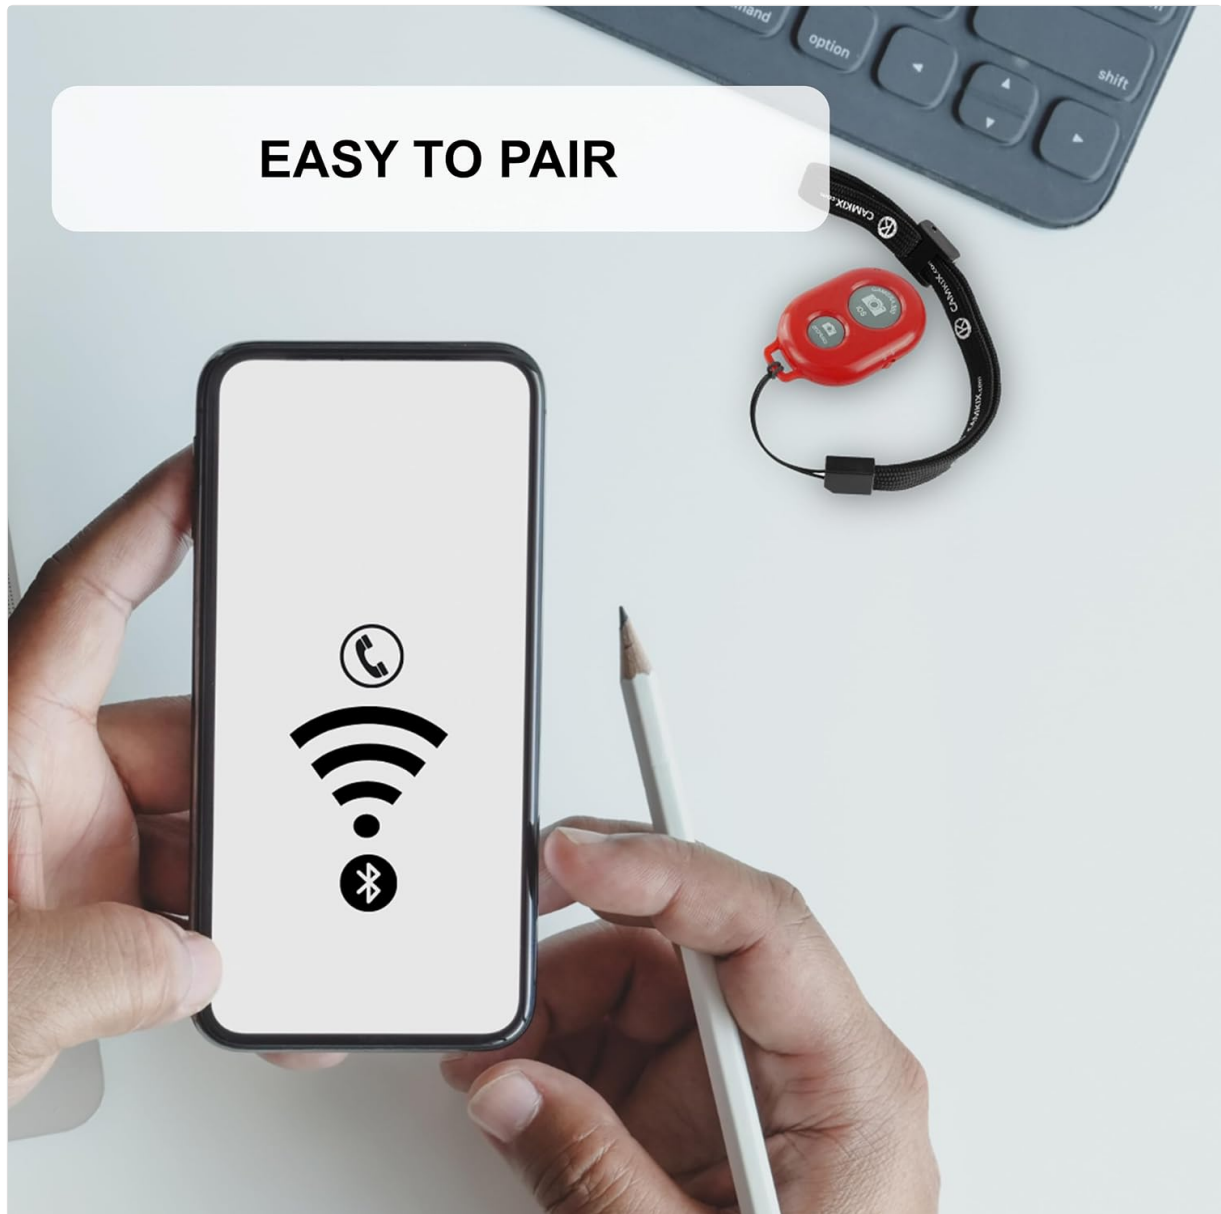


Image: The CamKix remote control and a smartphone displaying Bluetooth pairing symbols, illustrating the easy pairing process.

Video: This video demonstrates the unboxing and initial Bluetooth pairing process for the CamKix remote with an iPhone, highlighting how to connect it for photo and video use.

3. OPERATING INSTRUCTIONS

Taking Photos and Videos

The remote control features two buttons: one for iOS devices (labeled "iOS" or "Camera 360") and one for Android devices (labeled "Android").

1. Open your device's camera application.
2. Select your desired mode (Photo or Video).
3. For iOS devices, press the larger "iOS" button to capture a photo or start/stop video recording.
4. For Android devices, press the smaller "Android" button to capture a photo or start/stop video recording.
5. The remote can operate up to 30 feet (10 meters) away from your paired device.

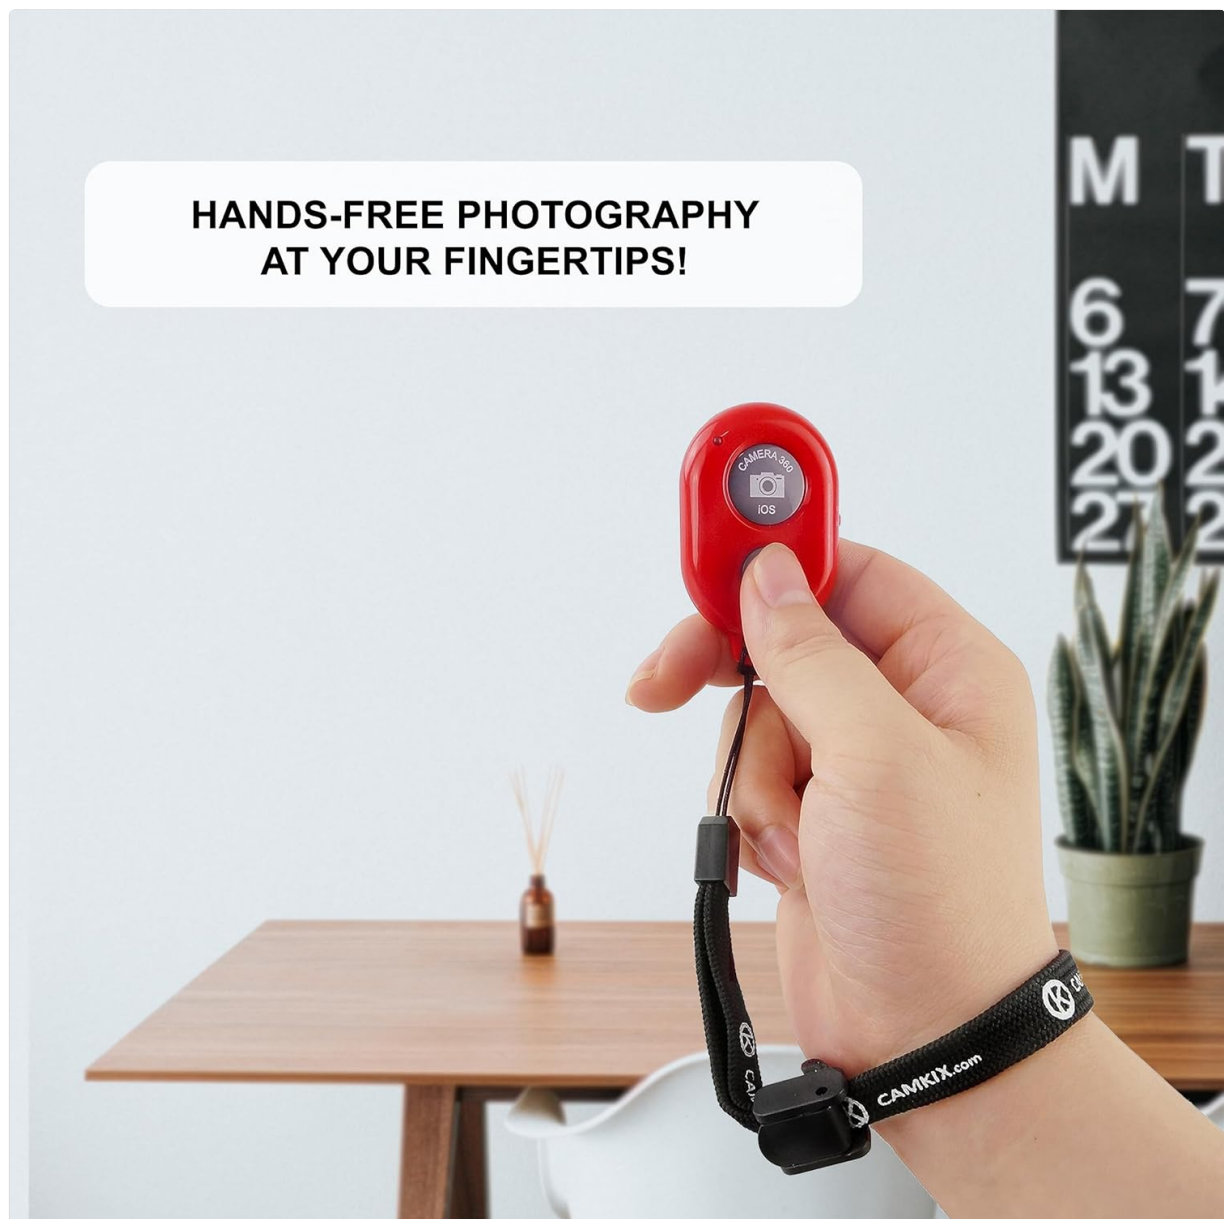


Image: A hand holding the red CamKix remote, emphasizing hands-free photography.



Image: A smartphone next to icons representing various camera modes like Panorama, Close Up, Timelapse, Slowmo, and Video, indicating the remote's versatility.

WORKS UP TO 10 METERS DISTANCE



Image: A smartphone on a tripod, with the CamKix remote nearby, showing wireless signal waves to demonstrate its 10-meter operating range.

Video: This video provides a quick overview of the CamKix Wireless Bluetooth Shutter Remote Control, demonstrating its functionality for capturing photos and videos.

4. MAINTENANCE

Battery Replacement

To replace the battery, locate the small circular cover on the back of the remote. Use a small coin or tool to gently pry open the cover. Remove the old CR2032H battery and insert a new one with the positive (+) side facing up. Close the cover securely.

Cleaning

Wipe the remote with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

5. TROUBLESHOOTING

Remote Not Pairing

- Ensure the remote is turned on and the blue LED is flashing.
- Check that Bluetooth is enabled on your smartphone/tablet.
- Make sure the remote is within 10 meters (30 feet) of your device.
- Forget "AB Shutter3" from your device's Bluetooth list and attempt to pair again.
- Replace the battery if the LED does not light up or is very dim.

Buttons Not Functioning

- Verify that the correct button (iOS or Android) is being pressed for your device.
- Ensure your device's camera app is open and in the desired mode (photo or video).
- Some Android devices may require the "Camera 360" app for full functionality.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	D0027-SRC-RED
Dimensions	4.92 x 0.43 x 3.43 inches
Item Weight	0.64 ounces
Connectivity	Bluetooth Wireless Technology
Operating Range	Up to 30 feet (10 meters)
Battery Type	1x CR2032H Lithium Metal (included)
Compatibility	Android 4.2.2 OS and up / Apple iOS 6.0 and up
Special Feature	Universal
Manufacturer	CamKix



Image: The compact CamKix remote control being slipped into a jeans pocket, highlighting its portability.

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact CamKix customer service directly. Keep your purchase receipt for warranty claims.