

[Manuals.plus](#) /

› [ELECTROLINE](#) /

› Electroline ME238AKW Microwave Oven User Manual

ELECTROLINE ME238AKW

Electroline ME238AKW Microwave Oven User Manual

Model: ME238AKW

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before using this appliance.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- This appliance is intended for household use only.

PRODUCT OVERVIEW

The Electroline ME238AKW is a 23-liter countertop combined microwave oven, featuring 800W microwave power and 1000W grill power. It offers various cooking functions including microwave, grill, and defrost, controlled via a touch panel with a digital display.



Figure 1: Front view of the Electroline ME238AKW Microwave Oven, showing the control panel, door, and mirror finish.

Key Components:

- **Control Panel:** Touch-sensitive interface for setting cooking modes, time, and power levels.
- **Digital Display:** Shows time, cooking settings, and program indicators.
- **Oven Cavity:** 23-liter capacity with stainless steel interior.
- **Glass Turntable:** 270mm diameter, ensures even cooking.
- **Turntable Support:** Holds the glass turntable in place.
- **Door:** Mirror finish, opens to the left.
- **Door Safety Lock System:** Prevents microwave operation when the door is open.

SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the oven on a stable, level surface strong enough to hold the oven's weight (approximately 13.7 kg). Ensure there is adequate ventilation space: at least 20 cm of free space above the oven, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
3. **Turntable Assembly:**
 - Place the turntable support ring in the center of the oven cavity.
 - Place the glass turntable plate on top of the support ring, ensuring it sits securely in the center hub.
4. **Power Connection:** Plug the power cord into a standard 230V AC, 50Hz grounded electrical outlet. Do not use extension cords or adapters.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.

OPERATING INSTRUCTIONS

Setting the Clock:

When the oven is plugged in, the display will show "0:00".

1. Press the "Clock" button once. The hour digits will flash.
2. Use the number pads to enter the current hour (e.g., 1-12 for 12-hour format or 0-23 for 24-hour format, depending on model).
3. Press the "Clock" button again. The minute digits will flash.
4. Use the number pads to enter the current minutes (00-59).
5. Press the "Clock" button to confirm the setting.

Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the "Microwave" button.
4. Use the number pads to enter the desired cooking time.
5. Press the "Start" button to begin cooking.
6. To adjust power levels (if available, consult specific model instructions for power level adjustment), press the "Power Level" button repeatedly after selecting microwave mode and before pressing "Start".

Grill Cooking:

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the "Grill" button.
3. Use the number pads to enter the desired grilling time.
4. Press the "Start" button to begin grilling.

Combined Cooking:

This oven offers combined cooking modes (e.g., Microwave + Grill) for faster and crispier results.

1. Press the "Combi" button (or equivalent, refer to control panel markings).
2. Select the desired combination mode (e.g., C-1, C-2).
3. Enter the cooking time using the number pads.
4. Press "Start".

Defrost Function:

The defrost function allows you to defrost food by weight or time.

1. Press the "Defrost" button.
2. Select defrost by weight or time (refer to control panel).
3. Enter the weight or time using the number pads.
4. Press "Start".

Auto Cooking Programs:

This oven features 8 automatic cooking programs for various food types.

1. Press the "Auto Menu" or "Auto Cook" button.
2. Rotate the dial or press the corresponding number for the desired program (e.g., P1 for popcorn, P2 for potato).
3. Enter the quantity or weight if prompted.
4. Press "Start".

Child Lock Function:

To prevent unsupervised operation by children, activate the child lock.

- **To Activate:** Press and hold the "Stop/Cancel" button for approximately 3 seconds. A lock indicator will appear on the display.
- **To Deactivate:** Press and hold the "Stop/Cancel" button again for approximately 3 seconds. The lock indicator will disappear.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your microwave oven.

- **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Interior Cleaning:** For spills and splatters, wipe the interior with a damp cloth immediately. For stubborn stains, place a bowl of water with lemon slices inside and microwave for 2-3 minutes to loosen food particles, then wipe clean.
- **Door and Seals:** Clean the door, door seals, and adjacent parts frequently with a damp cloth to remove any spills or splatters.
- **Glass Turntable:** The glass turntable and turntable support can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Element:** After grilling, ensure the grill element is cool before wiping away any grease or food residue with a damp cloth.
- Always unplug the oven before cleaning.

TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in; Door not closed properly; Child lock activated.	Ensure power cord is securely plugged in; Close the door firmly; Deactivate child lock (refer to Operating Instructions).
Food not heating.	Incorrect cooking time/power level set; Door not closed properly; Microwave-safe dish not used.	Adjust cooking time and power level; Ensure door is fully closed; Use only microwave-safe cookware.
Turntable not rotating.	Turntable not properly seated; Obstruction under turntable; Motor malfunction.	Re-seat the turntable and support ring; Remove any obstructions; If problem persists, contact customer support.
Display shows error code.	Internal malfunction.	Unplug the oven for 1 minute, then plug it back in. If the error persists, contact customer support.

For issues not listed above, or if solutions do not resolve the problem, please contact Electroline customer support.

SPECIFICATIONS

Brand	ELECTROLINE
Model Name	ME238AKW
Type	Combined Microwave Oven
Installation Type	Countertop
Capacity	23 Liters
Microwave Power	800 Watts
Grill Power	1000 Watts
Control Type	Touch Control
Number of Cooking Programs	8
Turntable Diameter	270 mm
Color	White (Mirror finish door)
Interior Material	Stainless Steel
Product Dimensions (W x D x H)	48.5 cm x 39.5 cm x 29.25 cm
Item Weight	13.7 kg
Voltage	230 V AC
Frequency	50 Hz

WARRANTY AND SUPPORT

This Electroline ME238AKW microwave oven comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, service, or to inquire about replacement parts, please contact Electroline customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0114LOFL8>

More documents and user manuals: <https://manuals.plus/>