

Weighmax GR25

Weighmax GR25 Digital Kitchen Scale User Manual

Model: GR25

INTRODUCTION

This manual provides instructions for the proper use and care of your Weighmax GR25 Digital Kitchen Scale. This scale is designed for accurate measurement of food items and mail, featuring a tempered glass platform and an easy-to-read LCD backlight. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

PRODUCT FEATURES

- Large capacity: Weighs up to 25 lbs (11 kg).
- High sensitivity: Measures with an accuracy of 0.1 oz (2g).
- Multiple weighing units: Supports lb:oz, kg:g, ml, and fl.oz for both solids and liquids.
- Durable platform: Extra-large tempered glass weighing platform (9" x 6.6" x 0.8").
- Tare function: Allows weighing of items in a container by subtracting the container's weight.
- Long battery life: Operates on 2 AAA batteries (included).
- Backlit LCD display: Provides clear readings in various lighting conditions.

PACKAGE CONTENTS

- 1 x Weighmax GR25 Digital Kitchen Scale
- 2 x AAA Batteries
- 1 x User Manual (this document)

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.

3. Insert the 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Placement

Place the scale on a hard, flat, and stable surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces, or near strong electromagnetic fields.

OPERATING INSTRUCTIONS

1. Turning On/Off

- To turn on: Press the **ON/OFF** button. The display will show "8888" then "0.0" or "0" indicating it's ready for use.
- To turn off: Press and hold the **ON/OFF** button for a few seconds, or the scale will automatically shut off after a period of inactivity to conserve battery life.

2. Weighing Items

1. Ensure the scale is on and displays "0.0" or "0".
2. Gently place the item to be weighed onto the center of the tempered glass platform.
3. Read the weight displayed on the LCD screen.



Figure 1: Weighmax GR25 Digital Kitchen Scale. The display shows "0.0" with "lb oz" units. Buttons for "UNIT" and "ON/OFF" are visible below the display. The maximum capacity is indicated as "MAX=25lb/11kg" and division as "D=0.1oz/2g".

MEASUREMENT UNITS

The Weighmax GR25 scale supports four different measurement units: pounds and ounces (lb:oz), kilograms and grams (kg:g), milliliters (ml), and fluid ounces (fl.oz).

1. With the scale turned on and displaying "0.0", press the **UNIT** button.
2. Each press of the **UNIT** button will cycle through the available units: lb:oz → kg:g → ml → fl.oz.

3. Select your desired unit before weighing.

TARE FUNCTION

The Tare function allows you to weigh multiple ingredients in the same container or to weigh an item without including the weight of its container.

1. Place an empty container on the scale platform. The display will show the container's weight.
2. Press the **ON/OFF** button once. The display will reset to "0.0", effectively subtracting the container's weight.
3. Add the item(s) you wish to weigh into the container. The display will show only the net weight of the added items.
4. To clear the tare and return to normal weighing mode, remove all items from the scale and press the **ON/OFF** button again, or turn the scale off and then on.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale surface with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water.
- **Storage:** Store the scale in a cool, dry place. Avoid extreme temperatures and high humidity.
- **Handling:** The weighing platform is made of tempered glass. Handle with care to prevent breakage.
- **Batteries:** Remove batteries if the scale will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| "Lo" or Low Battery Indicator | Batteries are low. | Replace the 2 AAA batteries with new ones. |
| "O-Ld" or Overload Indicator | Weight exceeds maximum capacity (25 lbs / 11 kg). | Remove excess weight immediately to prevent damage. |
| Inaccurate Readings | Scale is on an uneven surface, or there is interference. | Place the scale on a hard, flat, stable surface. Ensure no objects are touching the scale. Recalibrate if necessary (refer to advanced settings if available, or contact support). |
| Scale does not turn on | Batteries are incorrectly installed or completely drained. | Check battery polarity. Replace batteries if necessary. |

SPECIFICATIONS

- **Brand:** Weighmax
- **Model Number:** GR25
- **Color:** Red
- **Maximum Weight Capacity:** 25 lbs (11 kg)
- **Measurement Sensitivity (Division):** 0.1 oz (2 g)

- **Material:** Tempered Glass (platform)
- **Product Dimensions:** 22.86 x 16.76 x 2.03 cm (9" x 6.6" x 0.8")
- **Item Weight:** Approximately 680 g
- **Display Type:** LCD with Backlight
- **Power Source:** 2 x AAA Batteries (included)

WARRANTY AND SUPPORT

The Weighmax GR25 Digital Kitchen Scale comes with a **10-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or further inquiries, please visit the official Weighmax website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.

For more information, you may visit the [Weighmax Brand Store on Amazon](#).