

[Manuals.plus](#) /

› [Cottage Garden](#) /

› Cottage Garden Grandma Blessing Wood Finish Jewelry Music Box Model 6157837 User Manual

Cottage Garden 6157837

Cottage Garden Grandma Blessing Wood Finish Jewelry Music Box

Model: 6157837

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Cottage Garden Grandma Blessing Wood Finish Jewelry Music Box. This musical jewelry box features a rich woodgrain finish, a decorative rope trim, and a high-quality Sankyo music mechanism. It includes a photo frame lid for personalization and a velvet-lined interior for storing jewelry and keepsakes.



Front view of the Cottage Garden Grandma Blessing Wood Finish Jewelry Music Box, displaying the 'Grandma' blessing text on the lid.

SETUP

1. **Unpacking:** Carefully remove the music box from its packaging. Inspect for any signs of damage.
2. **Placement:** Place the music box on a stable, flat surface. The cushioned feet are designed to prevent scratching.
3. **Personalizing the Photo Frame:**
 - Open the lid of the music box.
 - Locate the back of the photo frame on the underside of the lid.
 - Gently slide or unclip the fasteners to remove the backing.
 - Replace the existing artwork with a 4x6 inch personal photograph.
 - Secure the backing and fasteners.



Image illustrating the photo frame lid with instructions to replace artwork with a personal 4x6 photo.

OPERATING INSTRUCTIONS

1. **Opening the Box:** Gently lift the lid of the music box. The hinges are designed to prevent the lid from falling back completely, protecting it from damage.
2. **Activating the Music:** The music mechanism is typically activated by winding a key located on the back or bottom of the box. Turn the key clockwise until you feel a slight resistance. The music will begin to play when the lid is opened and stop when it is closed.
3. **Storing Items:** The interior cavity measures approximately 4 x 4 x 1.5 inches and is lined with black velvet, suitable for storing jewelry and small keepsakes.



The music box opened, revealing the velvet-lined storage compartment and the music mechanism visible through protective glass.



A detailed view of the Sankyo music mechanism, visible through the protective glass inside the box.

MAINTENANCE

- **Cleaning the Exterior:** Wipe the wood finish with a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Cleaning the Interior:** Use a soft brush or a lint-free cloth to gently remove dust from the velvet lining.
- **Music Mechanism Care:** The music mechanism is protected by glass. Do not attempt to clean or lubricate the mechanism directly. If dust accumulates on the glass, wipe it gently with a soft, dry cloth.
- **Avoid Over-Winding:** Do not force the winding key if you feel strong resistance, as this can damage the mechanism.



A close-up view of the intricate decorative rope trim on the music box lid, highlighting the wood finish.

TROUBLESHOOTING

- **Music Not Playing:**

- Ensure the music box is properly wound.
- Check that the lid is fully open, as the music mechanism is designed to play only when the lid is open.

- **Lid Not Closing Properly:**

- Ensure no items are obstructing the lid from closing.
- Check the hinges for any debris or damage.

SPECIFICATIONS

Feature	Detail
Brand	Cottage Garden
Model Number	6157837
Material	Wood (Inner), Polycast (Outer Finish)
Finish Type	Polished Woodgrain
Product Dimensions (D x W x H)	6" x 8" x 2"
Internal Cavity Dimensions	Approximately 4" x 4" x 1.5"
Item Weight	1.5 Pounds
Music Played	"How Great Thou Art"
Photo Frame Size	4" x 6"



Diagram showing the approximate dimensions of the music box: 8 inches wide, 6 inches deep, and 2 inches high.

WARRANTY AND SUPPORT

This product is manufactured by Cottage Garden. For specific warranty information or support inquiries, please refer to

the documentation included with your purchase or contact the retailer from whom the product was acquired. General product care and troubleshooting information is provided in this manual.

© 2024 Cottage Garden. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question