



Manuals.plus /

› jWIN /

› JWIN Bass Boost Personal CD Player JX CD295 Instruction Manual

jWIN JX CD295

JWIN Bass Boost Personal CD Player JX CD295 Instruction Manual

Model: JX CD295

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your JWIN Bass Boost Personal CD Player, model JX CD295. Please read this manual thoroughly before using the device and retain it for future reference.

2. PACKAGE CONTENTS

- JWIN Bass Boost Personal CD Player JX CD295
- Stereo Headphones
- Instruction Manual

3. DEVICE OVERVIEW



Figure 1: JWIN Bass Boost Personal CD Player JX CD295. This image displays the portable CD player in its original packaging, accompanied by a pair of silver-colored headphones. Key controls such as Play/Pause, Stop, Skip, Program, Random, and Repeat are visible on the player's surface, along with a digital display and the 'BBS Bass Boost System' logo.

The JWIN JX CD295 is a portable CD player designed for personal audio playback. It features a compact design, a digital display, and various control buttons for audio management. The device includes a Dynamic Bass Boost System (BBS) for enhanced low-frequency sound reproduction.

4. SETUP

4.1 Power Source

The JX CD295 operates on batteries (not included) or an optional AC adapter (not included). Ensure correct polarity when inserting batteries. A low power indicator will alert you when battery replacement is necessary.

4.2 Connecting Headphones

Insert the stereo headphone plug into the headphone jack located on the side of the unit. Ensure the plug is fully inserted for proper audio output.

4.3 Loading a CD

1. Open the CD compartment lid by sliding the latch or pressing the OPEN button.
2. Place a compact disc onto the center spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid securely.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

- **Power On:** Press the **PLAY/PAUSE** (▶ / ||) button. The display will show the track number and playback time.
- **Play/Pause:** Press **PLAY/PAUSE** (▶ / ||) to toggle between play and pause modes.
- **Stop:** Press the **STOP** (■) button to stop playback. The unit features an automatic power-off function after a period of inactivity to conserve battery life.
- **Skip Tracks:** Press the **SKIP** (◀◀) button to go to the beginning of the current track or previous tracks. Press the **SKIP** (▶▶) button to advance to the next track.
- **Fast Forward/Rewind:** Press and hold **SKIP** (◀◀) or **SKIP** (▶▶) during playback to fast forward or rewind within a track.

5.2 Volume Control

Adjust the volume using the volume control dial, typically located on the side of the unit. Rotate clockwise to increase volume and counter-clockwise to decrease.

5.3 Dynamic Bass Boost System (BBS)

The JX CD295 features a Dynamic Bass Boost System. To activate or deactivate this feature, locate the **BBS** switch or button on the unit. Engaging BBS will enhance the bass frequencies for a richer sound experience.

5.4 Playback Modes

- **Repeat:** Press the **REPEAT** button to cycle through repeat modes: repeat current track, repeat all tracks.
- **Random Play:** Press the **RANDOM** button to play tracks in a shuffled order.
- **Program Play (24-Track Programming Memory):**
 1. In stop mode, press the **PROG** button.
 2. Use the **SKIP** (◀◀/▶▶) buttons to select the desired track.
 3. Press **PROG** again to confirm and add the track to the program list.
 4. Repeat steps 2 and 3 for up to 24 tracks.
 5. Press **PLAY/PAUSE** (▶ / ||) to start programmed playback.

6. MAINTENANCE

6.1 Cleaning the Unit

Wipe the exterior of the CD player with a soft, dry cloth. Do not use abrasive cleaners or solvents. For the lens, use a specialized CD lens cleaner if necessary, following its instructions carefully.

6.2 Battery Care

Remove batteries if the unit will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly according to local regulations.

6.3 CD Handling

Always hold CDs by their edges. Avoid touching the playing surface. Store CDs in their cases to prevent scratches and dust accumulation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are depleted or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity. Check AC adapter connection if used.
No sound.	Headphones not connected properly or volume is too low.	Ensure headphones are fully inserted. Increase volume. Check headphone functionality with another device.
CD skips or does not play.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD with a soft, lint-free cloth. Inspect for deep scratches. Reinsert the CD correctly.
Display shows "NO DISC" or similar error.	No CD inserted or CD is unreadable.	Insert a CD. Ensure the CD is clean and free from damage. Try a different CD.

8. SPECIFICATIONS

- **Model:** JX CD295
- **Brand:** jWIN
- **Manufacturer:** JWIN Electronics
- **Audio Format Support:** CD-DA, MP3 (if applicable, based on product description)
- **Digital-to-Analog Converter (DAC):** 16-bit
- **Programming Memory:** 24 tracks
- **Special Features:** Dynamic Bass Boost System (BBS), Low Power Indicator, Automatic Power Off, Programmable Memory, Equalizer (as per product specifications)
- **Connectivity:** Auxiliary (for headphones)
- **Number of Discs:** 1

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not provided within this instruction manual. Please refer to the product packaging or contact JWIN Electronics directly for details on warranty coverage.

and technical assistance.