

[manuals.plus](#) /› [OVENTE](#) /› [OVENTE Electric Coffee Grinder CG225M Instruction Manual](#)

OVENTE CG225M

OVENTE Electric Coffee Grinder CG225M Instruction Manual

Model: CG225M

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.
- Ensure the lid is securely locked in place before operating the grinder.

PRODUCT OVERVIEW

The OVENTE Electric Coffee Grinder CG225M is designed for efficient grinding of coffee beans, spices, herbs, nuts, and grains. Its compact and ergonomic design ensures ease of use and storage.

Key Components

- **Transparent Lid:** Allows monitoring of the grinding process.
- **Stainless Steel Grinding Bowl:** Durable and easy to clean, with a capacity of up to 2.5oz (70g).
- **Stainless Steel Blades:** High-quality blades for a smooth and even grind.
- **Motor Base:** Houses the powerful 150-watt motor.
- **Cord Storage:** Integrated into the base for neat storage.

Features

- **Efficient 150-Watt Motor:** Provides fast and effective grinding.
- **2.5oz (70g) Capacity:** Ideal for daily use or small batches.
- **Ergonomic Design:** Oval body for a comfortable and secure grip.
- **Pulse Button Operation:** Simple control for desired grind consistency.
- **Built-in Cord Storage:** Keeps the power cord neatly tucked away.



COMPACT DESIGN

With studded oval body for easy grip

TRANSPARENT, EASY-OPEN LID

See how coarse or fine your grinds are

Image: The OVENTE Electric Coffee Grinder featuring its compact design and transparent, easy-open lid, allowing users to monitor the grind texture.

FOOD-GRADE STAINLESS STEEL

With increased durability to
withstand high temperatures



Image: Close-up of the grinder's interior, highlighting the food-grade stainless steel grinding bowl and blades, suitable for various ingredients.



Image: The base of the grinder, illustrating the convenient built-in cord storage feature for tidy organization.

BEFORE FIRST USE

1. Unpack the grinder and all its components.
2. Wipe the exterior of the motor base with a damp cloth.
3. Clean the stainless steel grinding bowl and lid with a damp cloth or sponge. Ensure all parts are completely dry before use.
4. Familiarize yourself with the cord storage at the bottom of the unit.

OPERATING INSTRUCTIONS

Follow these steps to operate your OVENTE Electric Coffee Grinder:

1. **Prepare Ingredients:** Ensure the grinder is unplugged. Add your desired amount of coffee beans, spices, herbs, nuts, or grains into the stainless steel grinding bowl. Do not overfill; the maximum capacity is 2.5oz (70g).

2. **Secure the Lid:** Place the transparent lid onto the grinder and twist or press down firmly until it is securely locked. The grinder will not operate if the lid is not properly secured.
3. **Plug In:** Plug the power cord into a standard 120V AC electrical outlet.
4. **Grind:** Press and hold the pulse button on the lid to begin grinding. The blades will activate.
5. **Monitor Grind:** Observe the consistency of your ingredients through the transparent lid. For a coarser grind, pulse for shorter durations. For a finer grind, hold the button longer. Release the button to stop grinding.
6. **Unplug and Remove:** Once the desired consistency is achieved, release the pulse button and unplug the grinder from the outlet. Carefully remove the lid and pour out the ground contents.



Image: The grinder in action, demonstrating the pulse button operation for controlled grinding.



Image: The grinder showcasing its versatility for grinding not only coffee beans but also herbs, nuts, and spices.

Demonstration Videos

Video: This video demonstrates the OVENTE Electric Coffee Grinder's capability to grind various items beyond just coffee, such as flax seeds, showcasing its multi-purpose functionality.

Video: A user review demonstrating the OVENTE Electric Coffee Grinder's operation, highlighting its ease of use and quiet performance compared to other grinders.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

- Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
- Remove Lid:** Carefully remove the transparent lid.
- Clean Interior:** Use a small brush (often included) or a dry cloth to remove any remaining ground particles from the stainless steel grinding bowl and around the blades. Do not immerse the motor base in water.
- Clean Lid:** The transparent lid can be washed with warm, soapy water and rinsed thoroughly. Ensure it is completely dry before reattaching.

- Clean Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Storage:** Once clean and dry, store the grinder in a cool, dry place. Utilize the built-in cord storage for a tidy countertop.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	1. Not plugged in. 2. Lid not properly secured. 3. Overheating protection activated.	1. Ensure the power cord is securely plugged into a working outlet. 2. Make sure the lid is firmly in place and locked. 3. Unplug the unit and let it cool down for 10-15 minutes before attempting to use again.
Uneven grind consistency.	1. Insufficient grinding time. 2. Overfilling the grinding bowl.	1. Pulse the grinder for longer durations or use shorter, repeated pulses to achieve desired fineness. 2. Do not exceed the maximum fill line (2.5oz/70g). Grind in smaller batches if necessary.
Grinder stops during operation.	1. Overheating. 2. Power interruption.	1. Unplug and allow the unit to cool down. Reduce grinding time for future use. 2. Check the power outlet and cord for any issues.

SPECIFICATIONS

Feature	Detail
Model Number	CG225M
Power	150 Watts
Voltage	120 Volts
Capacity	2.5 oz (70g)
Material	Stainless Steel (blades, grinding bowl)
Product Dimensions	4.4" L x 3.9" W x 7.2" H
Item Weight	14.4 ounces (0.9 lbs)



Image: Diagram showing the dimensions of the OVENTE Electric Coffee Grinder.

WARRANTY AND CUSTOMER SUPPORT

OVENTE provides a **1-year warranty** from the original purchase date, covering defects in material and workmanship under normal use and conditions.

For any questions, concerns, or support needs, please contact OVENTE's US-based customer service. Refer to your product packaging or the official OVENTE website for the most current contact information.