



Manuals.plus /

- › Zojirushi /
- › Zojirushi Home Bakery BB-HE10-WA 1-Loaf Bread Maker Instruction Manual

Zojirushi BB-HE10-WA

Zojirushi Home Bakery BB-HE10-WA 1-Loaf Bread Maker Instruction Manual

Model: BB-HE10-WA

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Zojirushi Home Bakery BB-HE10-WA 1-Loaf Bread Maker. Please read all instructions carefully before first use and retain this manual for future reference.

SAFETY INSTRUCTIONS

- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

PACKAGE CONTENTS

Your Zojirushi Home Bakery BB-HE10-WA package includes the following items:

- Zojirushi Home Bakery BB-HE10-WA unit
- Removable bread pan

- Kneading blade
- Measuring cup
- Measuring spoon
- Hook tool for removing the kneading blade
- Instruction manual with recipes



The Zojirushi Home Bakery BB-HE10-WA bread maker shown with its bread pan, kneading blade, measuring cup, measuring spoon, and hook tool.



A closer view of the Zojirushi Home Bakery BB-HE10-WA and its various accessories.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Wash the bread pan, kneading blade, measuring cup, and measuring spoon with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Insert Kneading Blade:** Place the kneading blade onto the shaft at the bottom of the bread pan. Ensure it is securely seated.
4. **Insert Bread Pan:** Lower the bread pan into the main unit. Turn the pan clockwise until it locks into place.



The interior of the bread maker, highlighting the heating element and the drive shaft for the kneading blade.



The underside of the bread pan, showing the shaft where the kneading blade attaches.



The bread pan securely placed inside the Zojirushi Home Bakery unit, ready for ingredients.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel allows you to select various settings and programs for your bread. It features a digital display and several buttons:

- **Menu:** Cycles through the available bread programs.
- **Loaf Size:** Selects the desired loaf size (e.g., 1 lb, 1.5 lb, 2 lb).
- **Crust Color:** Adjusts the crust darkness (Light, Medium, Dark).
- **Start/Pause/Stop:** Initiates, temporarily halts, or cancels a program.
- **Time +/-:** Adjusts the delay timer or custom program times.
- **Homemade:** Allows for custom programming of kneading, rising, and baking times.



The control panel of the Zojirushi Home Bakery BB-HE10-WA, showing program options and control buttons.



A detailed view of the control panel, illustrating the various settings and digital display.

Programs

The Zojirushi Home Bakery BB-HE10-WA offers 10 pre-programmed settings for various bread types and functions:

1. Basic White
2. Express White
3. Sweet
4. French
5. Gluten Free
6. Whole Wheat
7. Dark Rye
8. Dough
9. Jam

Adding Ingredients

Always add liquid ingredients to the bread pan first, followed by dry ingredients. Create a small well in the center of the dry ingredients for the yeast, ensuring it does not come into direct contact with liquids or salt initially.

CARE AND MAINTENANCE

- **Bread Pan and Kneading Blade:** After each use, remove the bread pan and kneading blade. Wash them with warm, soapy water and a soft sponge. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse and dry thoroughly.
- **Main Unit:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or immerse the unit in water.
- **Storage:** Ensure all parts are clean and dry before storing the bread maker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bread does not rise	Expired yeast, incorrect water temperature, too much salt/sugar	Check yeast expiration, use lukewarm water (105-115°F), ensure correct ingredient measurements.
Bread is too dense	Too much flour, too little liquid, old yeast	Measure ingredients precisely, ensure fresh yeast.
Kneading blade stuck in bread	Common occurrence	Use the provided hook tool to carefully remove the blade after the bread has cooled.
Uneven crust color	Lid not properly closed, uneven heat distribution	Ensure lid is closed. The lid is designed to be slightly loose for venting purposes, which is normal.

SPECIFICATIONS

- **Brand:** Zojirushi
- **Model Number:** BB-HE10-WA
- **Capacity:** 1 Pound loaf
- **Power/Wattage:** 519 watts
- **Voltage:** 100 Volts
- **Item Weight:** 6.54 kg (14.42 Pounds)
- **Parcel Dimensions:** 34.8 x 33.4 x 25.6 cm
- **Number of Programs:** 10

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided

in the separate warranty card included with your product or visit the official Zojirushi website. Keep your purchase receipt as proof of purchase for any warranty claims.