

Epson VS240

Epson VS240 SVGA 3LCD Projector Instruction Manual

Model: VS240 | Brand: Epson

1. INTRODUCTION

The Epson VS240 SVGA 3LCD Projector is designed for clear and vibrant presentations and media viewing. It features 3000 lumens of color brightness and 3000 lumens of white brightness, ensuring a bright image even in well-lit rooms. This projector offers fast setup and convenient HDMI connectivity for digital video and audio with a single cable.

Key Features

- **High Brightness:** 3000 lumens Color Brightness and 3000 lumens White Brightness for vivid images.
- **SVGA Resolution:** 800 x 600 resolution, suitable for basic presentations and graphics.
- **E-Zoom Plus:** Zoom into a portion of the image using the remote control.
- **Fast Setup:** Easy image adjustments and convenient controls for quick operation.
- **HDMI Connectivity:** Supports HDMI for digital video and audio with one cable, compatible with modern laptops and media players.

Your browser does not support the video tag.

Official overview video for the Epson VS Series projectors, highlighting key features and capabilities.

2. WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- Epson VS240 SVGA 3LCD Projector
- Power Cable
- Remote Control with Batteries
- Computer Cable (VGA)

- User Manual (this document)

3. SETUP

Follow these steps to set up your Epson VS240 projector:

1. **Placement:** Position the projector on a stable, flat surface or mount it securely. Ensure there is adequate ventilation around the projector.
2. **Power Connection:** Connect the power cable to the projector's AC inlet and then to a power outlet.
3. **Connect Input Source:** Connect your computer, media player, or other video source to the projector using an appropriate cable (e.g., HDMI, VGA). Refer to the rear panel image below for port locations.



Figure 3.1: Rear panel of the Epson VS240 projector with input ports.

4. **Power On:** Press the power button on the projector or the remote control to turn on the unit. The power indicator light will illuminate.
5. **Adjust Image:** Adjust the focus, zoom, and keystone correction to achieve a clear and rectangular image on your screen or wall.

4. OPERATING THE PROJECTOR

This section covers basic operation of your Epson VS240 projector.

4.1 Power On/Off

- **To Power On:** Press the **Power** button on the control panel or remote control.
- **To Power Off:** Press the **Power** button again. A confirmation message may appear; press **Power** once more to confirm shutdown.

4.2 Input Selection

To switch between different input sources:

- Press the **Source Search** button on the control panel or remote control.
- Alternatively, press the dedicated input buttons (e.g., **HDMI**, **Computer**) on the remote control.

4.3 Image Adjustment

Use the following controls to optimize your projected image:

- **Focus Ring:** Rotate the focus ring on the projector lens to sharpen the image.
- **Zoom Lever:** Use the zoom lever near the lens to adjust the image size.
- **Keystone Correction:** If the image appears trapezoidal, use the **Keystone** buttons (often labeled with a

trapezoid icon) on the control panel or remote to correct the shape.

- **E-Zoom Plus:** Press the **E-Zoom Plus** button on the remote control to enlarge a specific portion of the image.



Figure 4.1: Top control panel of the Epson VS240 projector.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your projector.

5.1 Cleaning the Lens

Gently wipe the projector lens with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or excessive force, as this can scratch the lens.

5.2 Lamp Replacement

The projector lamp has a limited lifespan. When the lamp indicator light turns orange or the image becomes dim, it may be time to replace the lamp. Refer to the full user manual for detailed lamp replacement instructions specific to your model.

5.3 Air Filter Cleaning

The air filter prevents dust from entering the projector. Clean the air filter regularly (e.g., every 100 hours of use) by removing it and using a small vacuum cleaner or compressed air to remove dust. Consult the full user manual for filter location and removal instructions.

6. TROUBLESHOOTING

If you encounter issues with your projector, try these common troubleshooting steps:

- **No Image:**
 - Ensure the projector is powered on and the input source is correctly selected.
 - Check all cable connections between the projector and the source device.
 - Verify the source device is powered on and outputting a signal.
- **Blurry Image:**
 - Adjust the focus ring on the projector lens.
 - Ensure the projection surface is flat and the projector is stable.
- **Image is Trapezoidal:**
 - Use the keystone correction function on the projector or remote control to adjust the image shape.
- **No Sound:**
 - Check the volume settings on both the projector and the source device.
 - Ensure audio cables are correctly connected (if not using HDMI for audio).
- **Overheating Warning:**
 - Ensure the projector's air vents are not blocked.
 - Clean the air filter if it is dusty.

If these steps do not resolve the issue, please refer to the comprehensive troubleshooting section in the full user manual or contact Epson support.

7. SPECIFICATIONS

Detailed technical specifications for the Epson VS240 SVGA 3LCD Projector:

Feature	Detail
Product Dimensions	11.7 x 9.2 x 3.2 inches
Item Weight	5.29 pounds
Item Model Number	VS240 SVGA 3LCD Projector
Brand	Epson
Recommended Uses For Product	SVGA
Special Feature	Speakers
Connectivity Technology	HDMI
Display Resolution	800 x 600
Manufacturer	Epson
Date First Available	September 8, 2015

8. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your projector or visit the official Epson website. For technical support, product registration, or to download the complete user manual, please visit the Epson support website or contact their customer service.

© 2023 Epson Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question