

[Manuals.plus](#) /

> [Omcan](#) /

> Omcan Bowl Cutter FP-CN-237 Instruction Manual

Omcan FP-CN-237

Omcan Bowl Cutter FP-CN-237 Instruction Manual

Model: FP-CN-237

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Omcan Bowl Cutter FP-CN-237. This bowl-style processor is designed for mincing, chopping, and pureeing various foods while preserving their quality. Please read these instructions thoroughly before initial use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances.

- Read all instructions before operating the appliance.
- Ensure the appliance is connected to a properly grounded electrical outlet with the correct voltage (110V/60Hz).
- Always disconnect the appliance from the power supply before cleaning, servicing, or when not in use.
- Keep hands and utensils away from moving blades during operation to prevent injury. Use the provided safety switch to stop the machine immediately if needed.
- Never operate the appliance with a damaged cord or plug, or if it has been dropped or damaged. Contact customer support for repair.
- Do not immerse the motor base in water or other liquids.
- This appliance is equipped with sharp blades. Handle them with extreme care during assembly, disassembly, and cleaning.
- Supervise children closely if they are near the appliance.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any shipping damage. Retain packaging for future transport if necessary.
2. **Placement:** Place the bowl cutter on a stable, level, and dry surface. Ensure adequate ventilation around the unit.

3. Assembly:

- Place the stainless steel bowl securely onto the motor base.
- Carefully attach the blade assembly to the central shaft within the bowl. Ensure it is properly seated.
- Place the lid onto the bowl, ensuring it is correctly aligned and locked into position if applicable.

4. **Power Connection:** Plug the power cord into a grounded 110V/60Hz electrical outlet.

OPERATING INSTRUCTIONS

1. **Preparation:** Ensure the bowl cutter is properly assembled and connected to power. Prepare ingredients by cutting them into appropriate sizes for processing.
2. **Loading Ingredients:** With the machine OFF and unplugged, carefully place ingredients into the stainless steel bowl. Do not overfill the bowl; ensure the lid can close properly.
3. **Secure Lid:** Place and secure the lid onto the bowl. The machine may not operate if the lid is not correctly positioned due to safety interlocks.
4. **Start Operation:** Turn the power switch to the "ON" position. The motor will start, and the blades will rotate at a high speed of 2,800 RPM.
5. **Processing:** Allow the machine to process ingredients until the desired consistency is achieved. The 1-HP motor provides efficient processing for mincing, chopping, and pureeing.
6. **Stopping Operation:** Turn the power switch to the "OFF" position. Wait for the blades to come to a complete stop before opening the lid.
7. **Unloading:** Carefully remove the lid and then the blade assembly. Use a spatula or scraper to remove processed food from the bowl.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and hygienic operation of your bowl cutter.

- **Always unplug the appliance before cleaning.**
- **Disassembly:** Carefully remove the lid, blade assembly, and stainless steel bowl from the motor base.
- **Cleaning Components:** The stainless steel bowl and 4Cr13 stainless steel knives are designed for easy cleaning. Wash these components by hand with warm, soapy water immediately after each use. Rinse thoroughly and dry completely.
- **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or spray it with liquids.
- **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a clean, dry place.
- **No Tools Required:** The design allows for easy disassembly and cleaning without the need for special tools.

TROUBLESHOOTING

If you encounter issues with your Omcan Bowl Cutter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in. Lid not properly secured. Power outlet malfunction.	Ensure power cord is securely plugged into a live outlet. Check that the lid is correctly placed and locked. Test the outlet with another appliance or check circuit breaker.
Motor runs, but blades do not turn.	Blade assembly not correctly installed. Bowl not properly seated.	Unplug, then re-install the blade assembly, ensuring it engages with the motor shaft. Ensure the bowl is correctly seated on the motor base.
Excessive vibration or noise.	Uneven load of ingredients. Appliance not on a level surface.	Distribute ingredients evenly in the bowl. Place the appliance on a stable, level surface.

If the problem persists after attempting these solutions, please contact Omcan Customer Support. Do not attempt to repair the appliance yourself.

SPECIFICATIONS

Brand	Omcan
Model Name	FP-CN-237
Power Source	Corded Electric
Voltage/Frequency	110V/60Hz
Motor	1 HP
Speed	2,800 RPM
Capacity	9L / 9.5 QT
Material	Stainless Steel (304 for body, 4Cr13 for knives)
Included Components	Container, Lid, Spoon
Product Care Instructions	Hand Wash (Not dishwasher safe)
Certifications	CE
UPC	690207235468
GTIN	690207235468

WARRANTY INFORMATION

The Omcan Bowl Cutter FP-CN-237 comes with a **1 Year Parts and Labor Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, parts, or warranty inquiries, please contact Omcan Customer Support.

- **Website:** www.omcan.com (for product information and contact details)
- Please have your model number (FP-CN-237) and serial number (if applicable) ready when contacting support.

