

TEKA MWE-225 G (40590471)

TEKA MWE-225 G Microwave Oven User Manual

Model: MWE-225 G (40590471)

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the microwave oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly clean the oven and remove any food deposits.

PRODUCT OVERVIEW

The TEKA MWE-225 G is a compact and efficient countertop microwave oven designed for daily household use. It features a 20-liter capacity, 700W microwave power, and an intuitive control panel with 8 pre-set programs.



Figure 1: Front view of the TEKA MWE-225 G Microwave Oven, showing the door, control panel, and display.



Capacidad

Capacidad de 20 L

Menú de acceso directo

8 menús de acceso directo

Funciones

Descongelación por tiempo y peso

Figure 2: Close-up of the control panel, highlighting the digital display, mode buttons, and direct access menu icons (A1-A8) for various functions like defrosting and cooking programs.



Funciones

Temporizador de 0 a 95 minutos y Función +30"

Plato giratorio

Plato giratorio 25,5 cm

Potencia

Cinco niveles de potencia, 700 W salida

Figure 3: Another view of the control panel, emphasizing the functions, the 25.5 cm turntable, and the five power levels with 700W output.

SETUP

1. Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a broken door. Do not operate the oven if it is damaged.

2. Placement

Place the microwave oven on a flat, stable surface, such as a kitchen countertop. Ensure there is adequate ventilation space around the oven:

- Minimum 20 cm (7.9 inches) of free space above the oven.
- Minimum 10 cm (3.9 inches) of free space at the rear and sides.

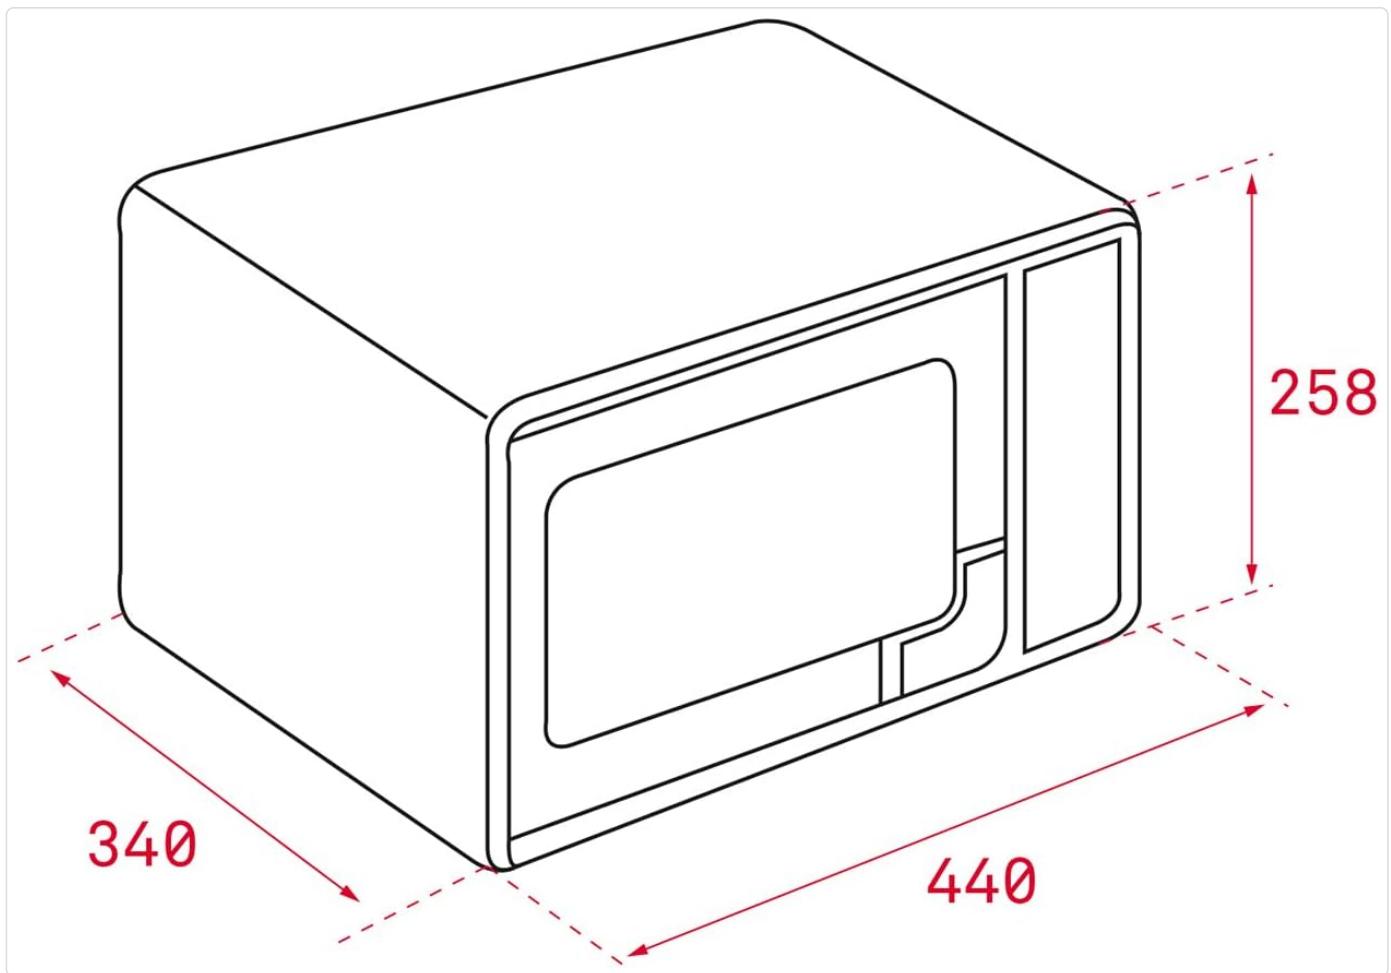


Figure 4: Dimensions of the TEKA MWE-225 G Microwave Oven. Width: 440 mm, Depth: 340 mm, Height: 258 mm.

3. Turntable Installation

Place the roller ring in the center of the oven cavity. Place the glass turntable on top of the roller ring, ensuring it sits securely in the center hub.

4. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230 Volts).

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel consists of a digital display, function buttons, and a rotary dial for setting time and power.

- **MODE Button:** Selects cooking modes (e.g., Microwave, Grill, Combination).
- **+30Sec Button:** Adds 30 seconds of cooking time at full power.
- **MENU Buttons (A1-A8):** Direct access to 8 pre-set cooking programs.
- **Clock/Timer Button:** Sets the clock or timer.
- **Auto/Rotary Dial:** Used to adjust time, weight, or select auto-cook options. Press to confirm selection.

Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the **MODE** button repeatedly to select the desired microwave power level (e.g., P100 for full power, P80, P60,

4. Turn the **Auto/Rotary Dial** to set the cooking time. The maximum timer setting is 95 minutes.
5. Press the **Auto/Rotary Dial** to start cooking.

Defrosting

The oven offers defrosting by time and by weight.

- **Defrost by Time:** Select the defrost mode (usually indicated by a snowflake icon or specific menu option), then use the dial to set the desired defrosting time.
- **Defrost by Weight:** Select the defrost mode, then use the dial to input the weight of the food. The oven will automatically calculate the defrosting time.

Using Pre-set Programs (A1-A8)

The microwave oven comes with 8 pre-set programs for common food items. Refer to the icons on the control panel for specific program functions.

1. Place the food in the oven.
2. Press the corresponding **MENU** button (A1-A8) for the desired program.
3. The display will show the recommended weight or portion. Adjust if necessary using the **Auto/Rotary Dial**.
4. Press the **Auto/Rotary Dial** to start the program.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and efficient operation.

Cleaning the Interior

- After each use, wipe the interior with a damp cloth to remove any food splatters.
- For stubborn stains, place a bowl of water with lemon slices inside and heat for 2-3 minutes until steam fills the oven. This will loosen food particles, making them easier to wipe away.
- Do not use abrasive cleaners or metal scouring pads, as they can damage the interior surface.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, dry cloth. Avoid excessive moisture.

Cleaning the Turntable and Roller Ring

- Remove the glass turntable and roller ring.
- Wash them in warm, soapy water or in the dishwasher.
- Dry thoroughly before placing them back in the oven.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Replace fuse or reset circuit breaker.
No heat from oven	Door not closed properly; Incorrect power level selected.	Close door securely; Ensure appropriate power level is selected.

Problem	Possible Cause	Solution
Turntable makes noise or does not rotate	Turntable or roller ring not positioned correctly; Food too large or heavy.	Reposition turntable and roller ring; Use smaller, lighter dishes.
Food is unevenly cooked	Food not stirred or turned; Incorrect cooking time/power level.	Stir or turn food during cooking; Adjust cooking time and power level.

If the problem persists after attempting these solutions, please contact TEKA customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MWE-225 G (40590471)
Type	Countertop Microwave Oven
Internal Capacity	20 Liters
Microwave Power Output	700 Watts
Connected Load	1050 Watts
Voltage	230 Volts
Dimensions (W x D x H)	440 mm x 340 mm x 258 mm
Weight	11.3 Kilograms
Control Type	Buttons, Rotary Dial
Number of Programs	8
Turntable Diameter	25.5 cm

WARRANTY AND SUPPORT

TEKA products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official TEKA website.

For technical assistance, spare parts, or service inquiries, please contact TEKA customer support:

- Website:** www.teka.com (Please check your regional TEKA website for local contact information)
- Customer Service:** Refer to your product documentation for regional phone numbers or email contacts.

When contacting support, please have your product model number (MWE-225 G) and serial number (if applicable) ready.

