

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- > [MOOER](#) /
- > [MOOER Audio The Wahter Wah Pedal \(WCW1\) Instruction Manual](#)

## MOOER MWW

# MOOER Audio The Wahter Wah Pedal (WCW1) Instruction Manual

Model: WCW1 | Brand: MOOER

## INTRODUCTION

Thank you for purchasing the MOOER Audio The Wahter Wah Pedal. This compact, multi-functional wah pedal is designed to provide versatile tonal control for your electric guitar. It features innovative sensing technology for seamless operation and a robust metal construction for durability.



Image: Top view of the MOOER Audio The Wahter Wah Pedal, showcasing its compact design and textured footpad.

## SETUP

---

- 1. Power Connection:** The Wahter pedal requires a 9V DC power adapter with a center-negative plug. The power adapter is sold separately. Connect the adapter to the DC 9V input jack on the pedal.
- 2. Instrument Input:** Connect your guitar to the 1/4" input jack on the pedal using a standard instrument cable.
- 3. Output Connection:** Connect the 1/4" output jack of the pedal to your amplifier or other effects pedals in your signal chain.



Image: Side view of the Wahter pedal, highlighting the 1/4" input and output jacks for connecting to your instrument and amplifier.

## OPERATING INSTRUCTIONS

---

The Wahter pedal offers flexible operation modes to suit your playing style:

- **Touch-Sensitive Activation:** The pedal can be set to activate automatically when you place your foot on it and deactivate when you remove it. This provides an "always on" feel without needing to press a switch.
- **Traditional Footswitch Mode:** Alternatively, you can switch between modes by pressing down on the pedal to engage or disengage the wah effect, similar to a traditional wah pedal.
- **Mode Switching:** Refer to the pedal's specific controls (if any visible on the product images or implied by "multi-functional") to toggle between touch-sensitive and traditional footswitch modes. The product description mentions "Step on step off, always on, or switch between the two to find you're your desired tone." This implies a mechanism to select the mode.
- **Wah Effect:** Once activated, move your foot back and forth on the pedal to sweep through the wah effect's frequency range, creating the characteristic "wah-wah" sound.



Image: Front view of the Wahter pedal, displaying the "The Wahter" logo and the pedal's robust metal casing.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the pedal's exterior. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the pedal in a dry environment away from extreme temperatures and direct sunlight when not in use.
- **Cable Care:** Always disconnect cables by pulling the plug, not the cable itself, to prevent damage to the connectors and wiring.

## TROUBLESHOOTING

---

- **No Sound:**

- Ensure the 9V DC power adapter is correctly connected and functioning.
- Check all instrument cables for proper connection and integrity.
- Verify that your guitar and amplifier are working correctly.

- **Wah Effect Not Engaging:**

- If in touch-sensitive mode, ensure sufficient pressure is applied to the pedal.
- If in footswitch mode, ensure the pedal is fully pressed to engage the switch.

- **Unwanted Noise:**

- Ensure all connections are secure.
- Try using a different power supply to rule out power-related noise.
- Test the pedal in isolation from other effects to identify potential interference.

## SPECIFICATIONS

---

|                           |                                                        |
|---------------------------|--------------------------------------------------------|
| <b>Item Weight</b>        | 5.6 ounces (0.16 Kilograms)                            |
| <b>Product Dimensions</b> | 3.7 x 2 x 1.7 inches                                   |
| <b>Item Model Number</b>  | MWW (WCW1)                                             |
| <b>Power Source</b>       | AC Adapter (9V DC, center minus plug, sold separately) |
| <b>Connector Type</b>     | 1/4 inch audio jack                                    |
| <b>Signal Format</b>      | Analog                                                 |
| <b>Body Material</b>      | Metal                                                  |
| <b>Color</b>              | Gold                                                   |

## WARRANTY AND SUPPORT

---

For warranty information, technical support, or any inquiries regarding your MOOER Audio The Wahter Wah Pedal, please contact MOOER customer service directly. You can typically find contact details on the official MOOER website or through the retailer where the product was purchased.

Please note that extended protection plans may be available from your retailer, but product warranty is provided by the manufacturer.