

[Manuals.plus](#) /

› [G3 Ferrari](#) /

› G3 Ferrari G10045 Programmable Electric Moka Pot User Manual

G3 Ferrari G10045

G3 Ferrari G10045 Programmable Electric Moka Pot User Manual

Model: G10045 | Brand: G3 Ferrari

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your G3 Ferrari G10045 Programmable Electric Moka Pot. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INSTRUCTIONS

Important Safety Precautions:

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the base unit in water or other liquids.
- Keep out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Use only with ground coffee suitable for moka pots.
- Ensure the moka pot is securely placed on the base before operation.
- Avoid touching hot surfaces during and immediately after operation.

PRODUCT OVERVIEW AND COMPONENTS

The G3 Ferrari G10045 is an electric moka pot designed for convenient coffee preparation. It features a programmable timer and an electronic control system.



Figure 1: G3 Ferrari G10045 Programmable Electric Moka Pot, assembled.

Key Components:

- **Upper Chamber:** Collects the brewed coffee.
- **Filter Funnel:** Holds the ground coffee.
- **Lower Boiler:** Holds the water.
- **Heating Base:** Contains the electronic controls, LED display, and power connection.
- **Lid:** Covers the upper chamber.
- **Handle:** For safe pouring.
- **Adapter Filter:** For preparing 1 or 3 cups of coffee.



Figure 2: Disassembled view of the moka pot, showing the upper chamber, filter funnel, and lower boiler.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash all removable parts (upper chamber, filter funnel, lower boiler, adapter filter) with warm water and mild detergent. Rinse thoroughly and dry. Do not immerse the heating base in water.
3. **First Brew (Water Only):** To clean the internal components and remove any manufacturing residues, perform a brewing cycle using only water. Fill the lower boiler with water up to the safety valve, assemble the pot without coffee, and run a cycle. Discard the water. Repeat this process 2-3 times.

OPERATING INSTRUCTIONS

Brewing Coffee

1. **Fill Water:** Unscrew the upper chamber from the lower boiler. Fill the lower boiler with cold water up to the level of the safety valve.
2. **Add Coffee:** Insert the filter funnel into the lower boiler. Fill the filter funnel with ground coffee (suitable for moka pots). Do not press the coffee down. If making 1 cup, use the adapter filter.
3. **Assemble:** Screw the upper chamber firmly onto the lower boiler, ensuring a tight seal.
4. **Place on Base:** Place the assembled moka pot onto the heating base. The base allows 360-degree rotation for convenience.
5. **Power On:** Plug the power cord into a suitable electrical outlet (AC 220-240V ~ 50Hz). The LED display will illuminate.

6. **Start Brewing:** Press the power button (usually indicated by an 'I' or power symbol) to start the brewing process. The coffee will begin to rise into the upper chamber.
7. **Automatic Shut-off:** The moka pot features an internal thermostat for automatic shut-off once brewing is complete.
8. **Keep Warm Function:** After brewing, the appliance will automatically enter a 30-minute keep-warm mode.
9. **Serve:** Carefully remove the moka pot from the base by the handle and pour the coffee. The base remains cool to the touch.

Using the Programmable Timer

The programmable timer allows you to set a specific time for your coffee to start brewing.



Figure 3: Close-up of the control panel with LED display and buttons.

1. **Prepare the Pot:** Follow steps 1-3 from "Brewing Coffee" to prepare the moka pot with water and coffee.
2. **Set Current Time:** Refer to the detailed instructions in your printed manual for setting the current time, as button

functions may vary. Typically, this involves pressing a "Clock" or "Set Time" button and using arrow keys to adjust hours and minutes.

- 3. **Set Timer:** Press the "Timer" button. The display will show the timer setting. Use the adjustment buttons (e.g., '+' and '-') to set the desired start time for brewing.
- 4. **Activate Timer:** Press the "Timer ON" button (or similar). A timer indicator light will usually illuminate, confirming the timer is active.
- 5. **Lock Function:** Some models may have a lock button (padlock icon) to prevent accidental changes to the settings.
- 6. The moka pot will automatically start brewing at the set time.

Note: If power is disconnected, the timer settings may reset. Re-program if necessary.

Official Product Videos

How to Use the Product

Your browser does not support the video tag.

This video demonstrates the basic steps for using the G3 Ferrari electric moka pot, including filling water, adding coffee, and starting the brewing process.

Practical Product Illustration

Your browser does not support the video tag.

A practical illustration of the product in use, showing the coffee brewing process and the final result.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your moka pot.

- 1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- 2. **Disassemble:** Unscrew the upper chamber from the lower boiler. Remove the filter funnel and adapter filter.
- 3. **Wash Parts:** Wash the upper chamber, filter funnel, and adapter filter with warm water. Avoid harsh detergents or abrasive materials that could damage the finish.
- 4. **Clean Boiler:** Rinse the lower boiler with water. Do not use soap or detergent inside the boiler as it can leave residue that affects coffee taste.
- 5. **Wipe Base:** Wipe the heating base with a damp cloth. Never immerse the base in water.
- 6. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.

Note: Do not wash any part of the moka pot in a dishwasher.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew or brews slowly.	Insufficient water in the boiler.	Fill water to the safety valve level.
	Coffee too finely ground or packed too tightly.	Use coarser ground coffee and do not tamp.
	Moka pot not properly sealed.	Ensure upper and lower chambers are tightly screwed.
Water leaks from the side.	Moka pot not tightly screwed.	Tighten the upper and lower chambers.
	Gasket worn or dirty.	Clean or replace the gasket.

Problem	Possible Cause	Solution
Timer function not working.	Power interruption. Timer not correctly set or activated.	Re-program the timer. Ensure the "Timer ON" button is pressed and indicator light is on.

SPECIFICATIONS

- **Model:** G10045
- **Brand:** G3 Ferrari
- **Power:** 400W
- **Capacity:** 3 Cups
- **Voltage:** AC 220-240V ~ 50Hz
- **Color:** Black
- **Dimensions:** 14 x 18 x 23.5 cm (Product); 18P x 14.5L x 23.5H cm (Detailed)
- **Weight:** 1 kg
- **Special Features:** Programmable Timer, LED Display, Electronic Control, 30-minute Keep Warm, 360-degree Rotational Base, Automatic Shut-off, Adapter Filter for 1 or 3 cups.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or contact G3 Ferrari customer service directly. Keep your proof of purchase for warranty claims.

© 2026 G3 Ferrari. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question