

BulbAmerica NP16LP

BulbAmerica Projector Lamp for NEC NP-ME361W - Instruction Manual

Model: NP16LP (for NEC NP-ME361W Projector)

Brand: BulbAmerica

1. INTRODUCTION

This manual provides instructions for the safe and correct installation, operation, and maintenance of your BulbAmerica replacement projector lamp, model NP16LP, designed for the NEC NP-ME361W projector.

1.1 Package Contents

- One (1) BulbAmerica Projector Lamp (NP16LP) with housing assembly
- Genuine Original Equipment Manufacturer (OEM) bulb

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock and Burns.

- Always disconnect the projector from the power source and allow it to cool completely before attempting lamp replacement.
- Projector lamps operate at high temperatures and pressures. Handle with care.
- Do not touch the bare bulb with your fingers, as oils can reduce lamp life.
- Refer to your NEC NP-ME361W projector's user manual for specific safety precautions and lamp replacement procedures.
- Dispose of used lamps according to local regulations.

3. INSTALLATION INSTRUCTIONS

Follow these general steps for replacing the projector lamp. Always consult your NEC NP-ME361W projector's user manual for detailed, model-specific instructions.

1. **Power Off and Cool Down:** Turn off the projector and unplug the power cord. Allow the projector to cool for at least 60 minutes to prevent burns.

2. **Locate Lamp Cover:** Identify the lamp cover on your projector. This is typically secured by one or more screws.
3. **Remove Lamp Cover:** Using an appropriate screwdriver, loosen and remove the screws securing the lamp cover. Carefully remove the cover.
4. **Remove Old Lamp:** Loosen the screws holding the old lamp module in place. Gently pull the handle on the lamp module to slide it out of the projector.



Image 1: BulbAmerica Projector Lamp Assembly. This image shows the complete lamp module with its housing, ready for installation.

5. **Install New Lamp:** Carefully insert the new BulbAmerica lamp module into the projector, ensuring it is seated firmly and correctly. Do not force the lamp.



Image 2: Rear view of the BulbAmerica Projector Lamp. This view highlights the electrical connectors and the back of the bulb within its housing.

6. **Secure New Lamp:** Tighten the screws that hold the new lamp module in place.
7. **Replace Lamp Cover:** Reattach the lamp cover and secure it with its screws.
8. **Reset Lamp Timer:** Plug in the projector and turn it on. Navigate to the projector's menu to reset the lamp timer. Refer to your projector's manual for specific instructions on resetting the lamp timer. This step is crucial for accurate lamp life tracking.

4. OPERATING INSTRUCTIONS

The BulbAmerica projector lamp functions as an integral component of your NEC NP-ME361W projector. Once installed, its operation is controlled entirely by the projector itself.

- Ensure the lamp timer is reset after installation to monitor lamp usage accurately.
- For detailed operating instructions, including power-on/off procedures, display settings, and input selection, please refer to the official user manual for your NEC NP-ME361W projector.

5. MAINTENANCE

5.1 Lamp Life

The lifespan of a projector lamp varies based on usage, projector settings (e.g., eco mode), and environmental conditions. Genuine OEM bulbs are designed for optimal longevity and performance.

5.2 Cleaning

- Do not attempt to clean the lamp bulb directly.
- Keep the projector's air filters clean to ensure proper ventilation and prevent overheating, which can extend lamp life. Refer to your projector's manual for filter cleaning instructions.

5.3 Lamp Replacement

Replace the lamp when the projector displays a lamp replacement warning, the image becomes dim, or the lamp fails to ignite. Always follow the installation instructions in Section 3.

6. TROUBLESHOOTING

If you experience issues after installing your new lamp, consider the following common solutions:

- **Lamp Not Igniting:**
 - Ensure the lamp module is fully seated and secured.
 - Verify the lamp cover is correctly installed and secured.
 - Check that the projector is properly plugged into a working power outlet.
 - Confirm the lamp timer was reset. Some projectors prevent lamp ignition if the timer is not reset.
- **Dim or Flickering Image:**
 - Ensure the lamp is securely installed.
 - Check projector settings for lamp mode (e.g., normal vs. eco mode).
 - Clean the projector's air filters to prevent overheating.
- **Lamp Warning Message Persists:**
 - Ensure the lamp timer has been reset in the projector's menu.

If problems persist, consult your NEC NP-ME361W projector's user manual or contact BulbAmerica support.

7. SPECIFICATIONS

Feature	Detail
Brand	BulbAmerica
Model Number (Lamp)	NP16LP

Feature	Detail
Compatible Projector Model	NEC NP-ME361W
Bulb Type	Genuine Original OEM (UHP, P-VIP, SHP, NSH)
Item Weight	1.5 Pounds
Item Package Quantity	1
UPC / GTIN	675650333268

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The BulbAmerica Projector Lamp for NEC NP-ME361W is covered by a **180-day warranty** from the date of purchase. This warranty protects against manufacturing defects. Additionally, a **30-day return policy** is offered for this product. For warranty claims or returns, please retain your proof of purchase.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact BulbAmerica customer support through their official website or the retailer where the product was purchased. You can visit the BulbAmerica Store for more information:[BulbAmerica Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

