



Manuals.plus /

› VonShef /

› VonShef Mini Donut Maker Instruction Manual

## VonShef Mini Donut Maker

# VonShef Mini Donut Maker Instruction Manual

Model: Mini Donut Maker

## INTRODUCTION

---

Thank you for purchasing the VonShef Mini Donut Maker. This appliance is designed to create delicious mini donuts quickly and easily. Please read this instruction manual thoroughly before first use to ensure safe and efficient operation. Keep this manual for future reference.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## PRODUCT OVERVIEW

---

The VonShef Mini Donut Maker is designed for convenience and ease of use, allowing you to bake up to 12 mini donuts at once.

- **12 Donut Capacity:** Bakes 12 mini donuts simultaneously.
- **Fast Heat-Up:** Quickly reaches optimal baking temperature.
- **Power & Ready Indicators:** Lights indicate when the appliance is powered on and ready for use.
- **Automatic Temperature Control:** Ensures consistent baking results.
- **Cool Touch Handle:** Provides safe handling during operation.
- **Non-Stick Surface:** Facilitates easy donut removal and cleaning.

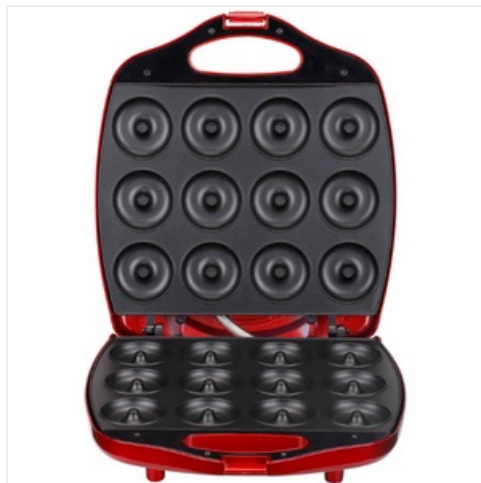


*Image: The VonShef Mini Donut Maker in its closed position, showcasing its compact design and red exterior.*

## SETUP

---

1. **Unpack:** Carefully remove the donut maker from its packaging. Retain all packaging materials for future storage or transport.
2. **Clean:** Before first use, wipe the non-stick cooking plates with a damp cloth or sponge. Dry thoroughly. The exterior can be wiped with a soft, damp cloth. Do not immerse the appliance in water.
3. **Position:** Place the donut maker on a stable, heat-resistant, and dry surface, away from any flammable materials. Ensure there is adequate ventilation around the appliance.
4. **Pre-season (Optional):** For optimal non-stick performance, lightly brush or spray the cooking plates with a small amount of cooking oil (e.g., coconut oil or a health-conscious spray) before the first use.



*Image: The VonShef Mini Donut Maker opened, revealing the 12 empty non-stick donut molds, ready for preparation.*

## OPERATING INSTRUCTIONS

---

1. **Preheat:** Plug the donut maker into a standard 120V AC electrical outlet. The power indicator light will illuminate. Allow the appliance to preheat until the 'Ready' indicator light turns on (or off, depending on the model's specific indicator logic, refer to the appliance itself). This typically takes a few minutes.
2. **Prepare Batter:** While the unit preheats, prepare your donut batter. A piping bag or a squeeze bottle can be helpful

for neat filling.

3. **Fill Molds:** Once preheated, carefully open the lid. Lightly grease the non-stick plates with cooking oil or spray if not already done. Pour or pipe batter into each donut mold, filling approximately two-thirds full to allow for rising.



*Image: A close-up view of the VonShef Mini Donut Maker's lower plate, with batter being carefully spooned into the donut molds.*

4. **Bake:** Close the lid. The donuts will bake for approximately 3-5 minutes. Baking time may vary depending on the recipe and desired browning. Do not open the lid frequently during baking.
5. **Check Doneness:** Use a non-metallic utensil (e.g., a wooden skewer or plastic spatula) to gently check if the donuts are cooked through and golden brown.
6. **Remove Donuts:** Once cooked, carefully remove the donuts using a non-metallic utensil to avoid damaging the non-stick coating.



*Image: The VonShef Mini Donut Maker open, displaying a batch of freshly baked, golden-brown mini donuts in the molds.*

7. **Repeat:** If baking more batches, ensure the plates are still lightly greased before adding new batter.
8. **Cool:** Allow donuts to cool on a wire rack before decorating or serving.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your VonShef Mini Donut Maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Cooking Plates:** Use a soft, damp cloth or sponge to wipe the non-stick cooking plates. For stubborn residue, a small amount of mild dish soap can be used, followed by a thorough wipe with a clean, damp cloth. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the donut maker in water or any other liquid.
4. **Storage:** Once clean and dry, store the donut maker in a cool, dry place. The compact design allows for easy storage.

## TROUBLESHOOTING

If you encounter issues with your VonShef Mini Donut Maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the appliance is securely plugged into a working power outlet. Check the circuit breaker.
Donuts are sticking to the plates.	Plates not sufficiently greased; batter too thick/thin.	Ensure plates are lightly greased before each batch. Adjust batter consistency as needed.
Donuts are not cooking evenly.	Lid opened too frequently; uneven batter distribution.	Avoid opening the lid during baking. Distribute batter evenly into each mold. Ensure the unit is fully preheated.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists, unplug and contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	VonShef
Model	Mini Donut Maker
Color	Red
Material	Stainless Steel
Wattage	1000 watts
Voltage	120 Volts
Item Weight	3.06 Kilograms
Special Features	Cool Touch, Non-Stick Coating, Automatic Temperature Control
Included Components	Grids/Plates
Style	Automatic

## WARRANTY

This VonShef Mini Donut Maker comes with a limited warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For further assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact VonShef customer support. Contact information can typically be found on the product packaging or the official VonShef website.